



**AlphaServer DS10 / DS10L,  
AlphaStation DS10  
Console Reference**

Order Number: EK-DS10S-CR. D01

This manual describes the general operation of *Compaq AlphaServer DS10, AlphaServer DS10L and AlphaStation DS10* systems. It presents the SRM console (the command-line interface for Tru64 UNIX and OpenVMS operating systems), AlphaBIOS (the graphics interface for Linux), and remote console management.

---

**September, 2000**

© 2000 Compaq Computer Corporation.

Compaq and the Compaq logo registered in U.S. Patent and Trademark Office.

AlphaServer, AlphaStation, and OpenVMS are trademarks of Compaq Computer Corporation.

Tru64 is a trademark of Compaq Information Technologies Group, L.P. in the United States and/or other countries.

UNIX is a trademark of the OPEN GROUP in the United States and other countries.

All other product names mentioned herein may be the trademarks or registered trademarks of their respective companies.

Compaq shall not be liable for technical or editorial errors or omissions contained herein. The information in this document is subject to change without notice.

The information in this publication is subject to change without notice and is provided "AS IS" WITHOUT WARRANTY OF ANY KIND. THE ENTIRE RISK ARISING OUT OF THE USE OF THIS INFORMATION REMAINS WITH RECIPIENT. IN NO EVENT SHALL COMPAQ BE LIABLE FOR ANY DIRECT, CONSEQUENTIAL, INCIDENTAL, SPECIAL, PUNITIVE OR OTHER DAMAGES WHATSOEVER (INCLUDING WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION OR LOSS OF BUSINESS INFORMATION), EVEN IF COMPAQ HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE FOREGOING SHALL APPLY REGARDLESS OF THE NEGLIGENCE OR OTHER FAULT OF EITHER PARTY AND REGARDLESS OF WHETHER SUCH LIABILITY SOUNDS IN CONTRACT, NEGLIGENCE, TORT, OR ANY OTHER THEORY OF LEGAL LIABILITY, AND NOTWITHSTANDING ANY FAILURE OF ESSENTIAL PURPOSE OF ANY LIMITED REMEDY.

The limited warranties for Compaq products are exclusively set forth in the documentation accompanying such products. Nothing herein should be construed as constituting a further or additional warranty.

**FCC Notice:** See Appendix - "*Regulatory Compliance Notices*".

# Contents

<b>Preface</b> .....	xi
----------------------	----

## **Chapter 1 Operations**

1.1	Powering Up the System.....	1-2
1.2	Power-Up Display .....	1-5
1.3	Booting Tru64 UNIX.....	1-9
1.3.1	Booting from a Local Disk .....	1-9
1.1.2	Booting from a Remote Disk.....	1-11
1.4	Installing Tru64 UNIX .....	1-13
1.5	Booting OpenVMS.....	1-15
1.1.1	Booting OpenVMS from a Local Disk.....	1-15
1.1.2	Booting OpenVMS from a Disk on a Cluster .....	1-17
1.1.3	Booting OpenVMS from a Remote Disk .....	1-19
1.6	Installing OpenVMS .....	1-21
1.7	Switching Between Operating Systems.....	1-23
1.7.1	Switching to Tru64 UNIX or OpenVMS .....	1-23
1.8	Updating Firmware .....	1-24
1.8.1	Updating Firmware from Floppy Disks.....	1-27
1.8.2	Performing the Update from Floppy Disks.....	1-28
1.8.3	Updating Firmware from a Network Device .....	1-30
1.1.4	LFU Commands.....	1-33
1.9	Using the Halt Button .....	1-36
1.9.1	Using Halt to Shut Down the Operating System .....	1-37
1.9.2	Using Halt to Clear the Console Password.....	1-37
1.10	Halt Assertion .....	1-38
1.10.1	Halt Assertion with Halt Button or RMC Halt Command.....	1-38
1.10.2	Halt Assertion with RMC Haltin Command .....	1-39
1.10.3	Clearing a Halt Assertion .....	1-39
1.10.4	Disabling Autoboot .....	1-39
1.10.5	Disabling the SRM Power-Up Script.....	1-40

## Chapter 2 SRM and AlphaBIOS Consoles

2.1	Invoking the SRM Console.....	2-2
2.2	Commands .....	2-3
2.2.1	Command Summary .....	2-3
2.2.2	Commands: Syntax .....	2-5
2.2.3	Commands: Special Keystrokes and Characters .....	2-6
2.3	Show Commands.....	2-8
2.3.1	Show Config .....	2-8
2.3.2	Show Device.....	2-10
2.3.3	Show Memory .....	2-13
2.3.4	Show PAL .....	2-13
2.3.5	Show Power .....	2-14
2.3.6	Show Version .....	2-15
2.4	Creating a Power-Up Script.....	2-16
2.5	Booting the Operating System.....	2-18
2.6	Configuring a PCI NVRAM Module.....	2-20
2.7	Testing the System .....	2-21
2.8	Set Commands .....	2-24
2.8.1	Set Password.....	2-24
2.8.2	Set Secure .....	2-25
2.9	Secure Mode.....	2-26
2.9.1	Login Command and Secure Mode .....	2-26
2.9.2	Clear Password .....	2-27
2.9.3	Resetting the Password .....	2-28
2.10	Stopping and Starting CPU .....	2-29
2.11	Updating Firmware .....	2-29
2.12	Forcing a System Crash Dump.....	2-31
2.13	Using Environment Variables .....	2-32
2.13.1	set <i>envar</i> .....	2-32
2.13.2	show <i>envar</i> .....	2-33
2.14	Depositing and Examining Data.....	2-34
2.15	Reading a File .....	2-37
2.16	Initializing the System.....	2-38
2.17	Finding Help .....	2-39
2.18	Environment Variable Summary.....	2-40
2.18.1	auto_action.....	2-42
2.18.2	bootdef_dev .....	2-42
2.18.3	boot_osflags.....	2-43
2.18.4	com1_baud .....	2-45
2.18.5	com1_mode.....	2-45
2.18.6	console.....	2-46

2.18.7	ew*0_mode.....	2-47
2.18.8	ew*0_protocols.....	2-47
2.18.9	kbd_hardware_type.....	2-48
2.18.10	language.....	2-48
2.18.11	os_type.....	2-49
2.18.12	password.....	2-49
2.18.13	pci_parity.....	2-50
2.18.14	pk*0_fast.....	2-50
2.18.15	pk*0_host_id.....	2-51
2.18.16	pk*0_soft_term.....	2-51
2.18.17	tt_allow_login.....	2-52
2.19	Switching from SRM to AlphaBIOS Console.....	2-53
2.20	Running the AlphaBIOS Console.....	2-54
2.20.1	Running Configuration Utilities.....	2-57

### Chapter 3 Remote Management Console

3.1	RMC Components.....	3-2
3.2	Terminal Setup.....	3-4
3.3	Operating Modes.....	3-6
3.3.1	Snoop Mode (Default Mode).....	3-7
3.3.2	Bypass Modes.....	3-7
3.4	Entering the RMC.....	3-8
3.5	SRM Environment Variables for COM1.....	3-9
3.6	Status Monitoring.....	3-10
3.7	Remote Power (On/Off).....	3-12
3.8	Remote Halt (In/Out).....	3-14
3.9	Configuring Remote Dial-In.....	3-16
3.10	Configuring Dial-Out Alert.....	3-18
3.11	Dialing In.....	3-21
3.12	Resetting the RMC to Factory Defaults.....	3-22
3.13	Troubleshooting Tips.....	3-24
3.14	RMC Commands.....	3-26
3.14.1	clear alert.....	3-28
3.14.2	clear port.....	3-28
3.14.3	disable alert.....	3-29
3.14.4	disable remote.....	3-29
3.14.5	enable alert.....	3-30
3.14.6	enable remote.....	3-31
3.14.7	halt (in/out).....	3-32
3.14.8	hangup.....	3-33
3.14.9	help or ?.....	3-33

3.14.10	power off .....	3-34
3.14.11	power on.....	3-34
3.14.12	quit.....	3-35
3.14.13	reset .....	3-36
3.14.14	send alert.....	3-36
3.14.15	set alert.....	3-37
3.14.16	set com1_mode .....	3-38
3.14.17	set dial.....	3-39
3.14.18	set escape .....	3-40
3.14.19	set init.....	3-41
3.14.20	set logout.....	3-42
3.14.21	set password .....	3-42
3.14.22	set user.....	3-42
3.14.23	set wdt.....	3-43
3.14.24	status .....	3-43

## Appendix A Setting Jumpers

A.1	Warnings and Cautions .....	A-2
A.2	Remove Power from the System .....	A-3
A.3	Open the System.....	A-5
A.4	Remove the Floppy Disk Enclosure (DS10 Only) .....	A-9
A.5	Set Jumpers .....	A-10
A.6	Restore Power .....	A-12

## Appendix B Regulatory Compliance Notices

B.1	Class A and Class B Ratings.....	B-1
B.1.1	Class A Device Notices.....	B-2
B.1.2	Class B Device Notices.....	B-5

## Index

### Examples

1-1	Power-Up Display – DS10.....	1-5
1-2	Power-Up Display - DS10L Serial and Graphics Consoles.....	1-7
1-3	Booting Tru64 UNIX from a Local Disk .....	1-9
1-4	Booting Tru64 UNIX from a Remote Disk.....	1-11
1-5	Installing Tru64 UNIX .....	1-13
1-6	Booting OpenVMS from a Local Disk .....	1-15

1-7	Booting OpenVMS from a Disk on a Cluster .....	1-17
1-8	Booting OpenVMS from a Remote Disk.....	1-19
1-9	Installing OpenVMS .....	1-21
1-10	Starting LFU from the SRM Console.....	1-24
1-11	Booting LFU from the CD-ROM .....	1-26
1-12	Updating Firmware from the Floppy Disk .....	1-28
1-13	Updating Firmware from a Network Device .....	1-30
2-1	Show Config Command.....	2-8
2-2	Show Device Command.....	2-10
2-3	Show Memory Command .....	2-13
2-4	Show PAL Command .....	2-13
2-5	Show Power Command .....	2-14
2-6	Show Version Command.....	2-15
2-7	Editing the nvram Script .....	2-17
2-8	Clearing the nvram Script .....	2-17
2-9	Boot Command.....	2-19
2-10	Prcache Command .....	2-20
2-11	Test Command .....	2-21
2-12	Set Password Command .....	2-24
2-13	Set Secure Command .....	2-25
2-14	Secure Mode and Login Command .....	2-27
2-15	Clear Password Command.....	2-27
2-16	Lfu Command .....	2-29
2-17	Crash Command .....	2-31
2-18	Setting and Showing Environment Variables .....	2-33
2-19	Creating a User-Defined Environment Variable .....	2-33
2-20	Deposit Command.....	2-35
2-21	Examine Command.....	2-36
2-22	More Command.....	2-37
2-23	Initialize Command .....	2-38
2-24	Help Command .....	2-39
2-25	Changing Baud Rate.....	2-45
3-1	Dial-In Configuration.....	3-16
3-2	Dial-Out Alert Configuration.....	3-18

## Figures

1-1	Check Power Setting – DS10 .....	1-2
1-2	Location of DS10 Control Panel and On/Off Button .....	1-3
1-3	Location of DS10L Control Panel and On/Off Button.....	1-4
1-4	Physical Numbering for DS10 PCI Slots .....	1-6

1-5	Halt/Reset Button – DS10.....	1-36
1-6	Halt/Reset Button - DS10L.....	1-37
2-1	AlphaBIOS Boot Screen.....	2-54
2-2	AlphaBIOS No Selections Found Screen.....	2-55
2-3	AlphaBIOS Setup Screen.....	2-56
2-4	AlphaBIOS Setup Screen.....	2-57
2-5	Run Maintenance Program Dialogue Box.....	2-58
3-1	Location of RMC Components on Motherboard – DS10.....	3-2
3-2	Location of RMC Components on Motherboard - DS10L.....	3-3
3-3	Setups for RMC Mode – DS10.....	3-4
3-4	Setups for RMC Mode - DS10L.....	3-5
3-5	Bypass Mode.....	3-6
3-6	Power Button – DS10.....	3-12
3-7	Power Button - DS10L.....	3-13
3-8	Halt/Reset Button - DS10.....	3-14
3-9	Halt/Reset Button - DS10L.....	3-15
3-10	RMC Jumpers (Default Positions) – DS10.....	3-22
3-11	RMC Jumpers (Default Positions) – DS10L.....	3-23
A-1	Removing Power - DS10 System.....	A-3
A-2	Removing Power - DS10L System.....	A-4
A-3	Opening the DS10 System Cabinet.....	A-5
A-4	Opening the DS10L System Cabinet.....	A-7
A-5	Removing the DS10 Floppy Disk.....	A-9
A-6	Setting Jumpers on the Motherboard.....	A-10

## Tables

1-1	Control Panel Functions – DS10.....	1-3
1-2	Control Panel Functions - DS10L.....	1-4
1-3	File Locations for Creating Update Diskettes on a PC.....	1-27
1-4	LFU Command Summary.....	1-33
2-1	Summary of SRM Console Commands.....	2-3
2-2	Syntax for SRM Console Commands.....	2-5
2-3	Special Characters for SRM Console.....	2-6
2-4	Device Naming Convention.....	2-11
2-5	PCI Address Assignments – DS10.....	2-12
2-6	PCI Address Assignment - DS10L.....	2-12
2-7	Environment Variable Summary.....	2-40
2-8	Settings for boot_osflags Bootflags (OpenVMS).....	2-44
3-1	SRM Environment Variables for COM1.....	3-9
3-2	Status Command Fields.....	3-10
3-3	Elements of Dial String and Alert String.....	3-20

3-4	RMC Troubleshooting .....	3-24
A-1	Factory Default Switch Settings.....	A-11
A-2	Jumpers and Factory Default Positions.....	A-11



# Preface

## Intended Audience

This manual is for service providers, managers and operators of *Compaq AlphaServer DS10, AlphaServer DS10L, and AlphaStation DS10* systems.

## Document Structure

This manual uses a structured documentation design. Topics are organized into small sections, usually consisting of two facing pages. Most topics begin with an abstract that provides an overview of the section, followed by an illustration or example. The facing page contains descriptions, procedures, and syntax definitions.

This manual has three chapters, two appendices, and an index:

- **Chapter 1, Operations**, provides basic operating instructions, including powering up the system, booting, and operating system installation.
- **Chapter 2, SRM and AlphaBIOS Consoles**, presents the command-line interface that supports the Tru64 UNIX and OpenVMS operating systems and the graphical interface that supports some utility programs. The SRM console is used to bootstrap the operating system, configure and test the system hardware, examine system options for errors, and set or change environment variables. AlphaBIOS is used to run utilities.
- **Chapter 3, Remote Management Console**, describes how to manage the system from a remote location.
- **Appendix A, Setting System Jumpers**, describes how to check and reset if necessary the Halt/Reset select jumper and remote management console jumper.
- **Appendix B, Regulatory Compliance Notices**, contains regulatory compliance notices for this computer system.

## Conventions

In examples of SRM console output, commands the user enters are presented in **boldface type**, while the system's output is in regular type. Comments on the examples are either called out with circled numbers (❶❷❸) or are preceded by a pound sign (#) and are given in **boldface italics**.

Revision levels, dates and devices listed in examples are for example only; your results may vary according to the configuration of your system.

---

**NOTE:** *In many ways DS10 and DS10L systems are identical. This manual uses DS10 systems for most illustrations and examples; DS10 screen examples may have more devices shown than equivalent DS10L screens, and other minor differences may appear. Where significant differences exist, an illustration or example of a DS10L is presented separately.*

---

## Documentation Titles

This following DS10/DS10L documentation is available.

---

Title	Order No.
DS10 / DS10L <i>Console Reference</i>	EK-DS10S-CR
<i>Safety Booklet</i>	296382-021
DS10 <i>Quick Setup Poster</i>	EK-DS10S-CP
DS10 <i>User Reference Card</i>	EK-DS10S-UR
DS10 <i>Rackmount Guide</i>	EK-DS10S-RM
DS10 <i>User Information CD</i>	AG-RHD8B-BE
DS10L <i>Quick Setup Poster</i>	EK-DS10L-CP
DS10L <i>User Reference Card</i>	EK-DS10L-UR
DS10L <i>User Information CD</i>	AG-RLD4A-BE

---

## Information on the Internet

Visit the Compaq Web site at [www.compaq.com](http://www.compaq.com) for service tools and more information about the AlphaServer DS10 / DS10L, AlphaStation DS10 systems.

# Chapter 1

## Operations

This chapter provides basic operating instructions, including powering up the system, booting, and operating system installation. Note that your choice of operating system has already been installed at the factory; this information is provided so that should you decide to change operating systems, you may. It also provides information about updating firmware.

Sections in this chapter are:

- Powering Up the System
- Power-Up Display
- Booting Tru64 UNIX
- Installing Tru64 UNIX
- Booting OpenVMS
- Installing OpenVMS
- Switching Between Operating Systems
- Updating Firmware
- Using the Halt Button
- Halt Assertion

---

**NOTE:** *In many ways the DS10 and DS10L systems are identical. This manual uses DS10 systems for most illustrations and examples. Where significant differences exist, an illustration or example of a DS10L is presented separately.*

---

## 1.1 Powering Up the System

To power up the system, check your power setting (DS10 only), then press the On/Off button **⏻** to the On position. Check the control panel LEDs. See Figure 1-1 and Figure 1-2 for the DS10, and Figure 1-3 for the DS10L.

Figure 1-1 Check Power Setting - DS10


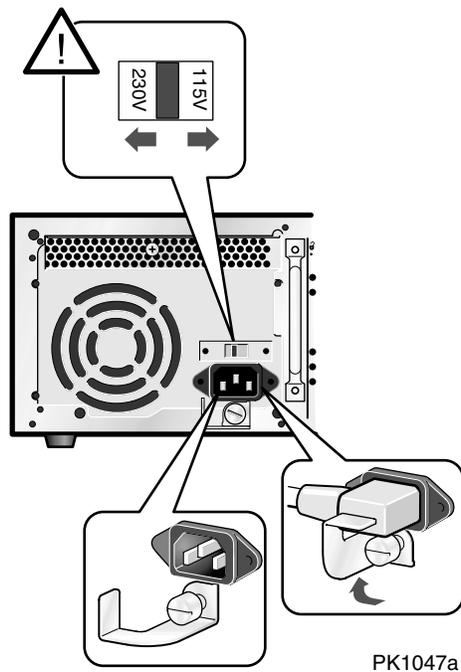


Figure 1-2 Location of DS10 Control Panel and On/Off Button

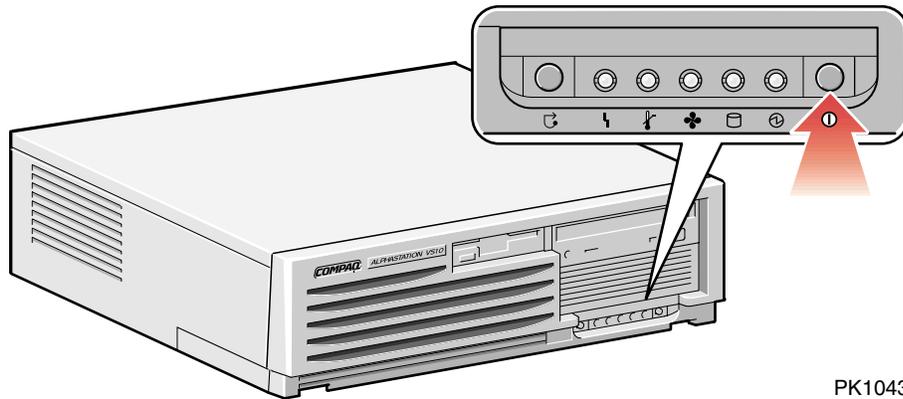


PK1043b

Table 1-1 Control Panel Functions - DS10

Symbol	Function
	<b>Halt</b> button. Under OpenVMS and Tru64 UNIX, suspends the operating system and returns control to the SRM console.
	<b>Environmental</b> amber LED. On indicates Temperature or Fan LEDs are on. Flashes when operating system invokes it as an alert.
	<b>Temperature</b> amber LED. On indicates internal temperature exceeds operating conditions. The system shuts down 30 seconds after this LED lights.
	<b>Fan</b> amber LED. On indicates that at least one of the three fans in the system has failed. The system shuts down 30 seconds after this LED lights.
	<b>Disk Activity</b> green LED. Flashes when internal system disks are accessed.
	<b>Power Present</b> green LED. On when power is present in the system.
	<b>Power</b> button. Push in to start the system and connect power. Push again to remove power and stop the system.

Figure 1-3 Location of DS10L Control Panel and On/Off Button

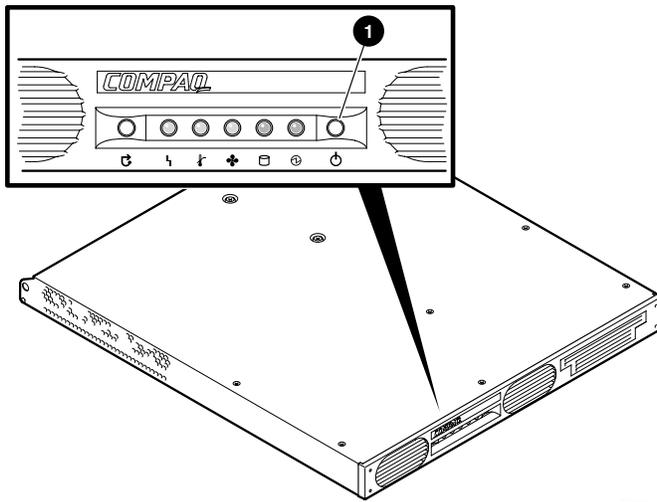

PK2216

Table 1-2 Control Panel Functions - DS10L

Symbol	Function
	<b>Halt</b> button. Under OpenVMS and Tru64 UNIX, suspends the operating system and returns control to the SRM console.
	<b>Environmental</b> amber LED. On indicates Temperature or Fan LEDs are on. Flashes when operating system invokes it as an alert.
	<b>Temperature</b> amber LED. On indicates internal temperature exceeds operating conditions. The system shuts down 30 seconds after this LED lights.
	<b>Fan</b> amber LED. On indicates that at least one of the three fans in the system has failed. The system shuts down 30 seconds after this LED lights.
	<b>Disk Activity</b> green LED. Flashes when internal system disks are accessed.
	<b>Power Present</b> green LED. On when power is present in the system.
	<b>Power</b> button <b>1</b> . Push in to start the system and connect power. Push again to remove power and stop the system.

## 1.2 Power-Up Display

---

**DS10 systems have four physical PCI slots; the DS10L system has one, hence the different power-up displays shown below.**


**Testing begins after pressing the On/Off button, and screen text similar to that in Example 1-1 displays (if the console terminal is a serial terminal connected to the COM1 port), along with status messages in the control panel display. If the console terminal is a graphics monitor, only the last few lines of the power-up display print.**

---

### Example 1-1 Power-Up Display - DS10

```
256 Meg of system memory ❶
probing hose 0, PCI
probing PCI-to-ISA bridge, bus 1 ❷
probing PCI-to-PCI bridge, bus 2 ❷
bus 0, slot 9 -- ewa -- DE500-BA Network Controller
bus 0, slot 11 -- ewb -- DE500-BA Network Controller
bus 0, slot 13 -- dqa -- Acer Labs M1543C IDE
bus 0, slot 13 -- dqb -- Acer Labs M1543C IDE
bus 0, slot 14 ❸-- vga -- DEC PowerStorm
bus 2, ❹slot 0 -- pka -- NCR 53C875
bus 2, ❹slot 1 -- pkb -- NCR 53C875
bus 2, ❹slot 2 -- ewc -- DE500-AA Network Controller
bus 0, ❺ slot 16 -- pkc -- QLogic ISP1020
bus 0, ❻ slot 17 -- dra -- Mylex DAC960
Testing the System
Testing the Disks (read only)
>>> ❼
```

**Figure 1-4 Physical Numbering for DS10 PCI Slots**

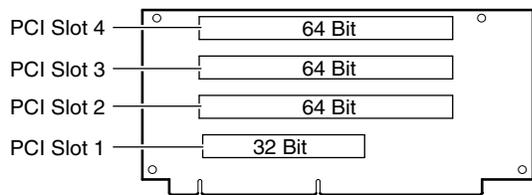

PK1045-99

- ❶ Memory size is determined.
- ❷ The PCI bridges and attendant buses (indicated as IODn by the console) are probed and the devices are reported. I/O adapters are configured.
- ❸ Power-up slot 14 corresponds to the bottom physical slot, slot 1.

Slot Location	Physical Slot Number	Logical Slot Number
Top	4	17
Second from top	3	16
Second from bottom	2	15
Bottom	1	14

- ❹ These devices are behind bridge of the card in logical slot 15, physical slot 2, second from the bottom.
- ❺ This device in is logical slot 16, physical slot 3.
- ❻ Logical slot 17 is physical slot 4, the top slot.
- ❼ The SRM console banner and prompt (>>>) are printed.  
The SRM console is a command-line interface you use to set or read system parameters.

If the **auto\_action** environment variable is set to **boot** or **restart** and the **os\_type** environment variable is set to **unix** or **openvms**, the Tru64 UNIX or OpenVMS operating system boots. See Section 2.18 for information on environment variables.

## Example 1-2 Power-Up Display - DS10L Serial and Graphics Consoles

---

*Note: There is only one PCI slot on the DS10L; its logical slot number is 17.*

---

### Serial Console

```
256 Meg of system memory ❶
probing hose 0, PCI
probing PCI-to-ISA bridge, bus 1 ❷
bus 0, slot 9 -- ewa -- DE500-BA Network Controller
bus 0, slot 11 -- ewb -- DE500-BA Network Controller
bus 0, slot 13 -- dqa -- Acer Labs M1543C IDE
bus 0, slot 13 -- dqb -- Acer Labs M1543C IDE
bus 0, ❸ slot 17 -- dra -- Mylex DAC960
Testing the System
Testing the disks (read only)
Testing the Network
System Temperature is 36 degrees C
Initializing GCT/FRU at 1f6000

COMPAQ AlphaServer DS10L 466 MHz Console V5.7-0 Jan 14 2000 09:59:58
>>> ❹
```

- ❶ Memory size is determined.
- ❷ The PCI bridges and attendant buses (indicated as IODn by the console) are probed and the devices are reported. I/O adapters are configured.
- ❸ The power-up logical slot is always 17 on the DS10L.
- ❹ The SRM console banner and prompt (>>>) are printed. The SRM console is a command-line interface you use to set or read system parameters.

If the **auto\_action** environment variable is set to **boot** or **restart** and the **os\_type** environment variable is set to **unix** or **openvms**, the Tru64 UNIX or OpenVMS operating system boots.

See Section 2.18 for information on environment variables. See Chapter 2 for SRM console and AlphaBIOS information.

## **Graphics Console**

```
Os_type UNIX-console CIPCA drive not started
Testing the System
Testing the disks (read only)
Testing the Network
System Temperature is 36 degrees C
Initializing GCT/FRU at 1f6000
```

```
COMPAQ AlphaServer DS10L 466 MHz Console V5.7-0 Jan 13 2000 09:59:58
```

## 1.3 Booting Tru64 UNIX

---

**Tru64 UNIX® can be booted from a local disk or a remote disk through an Ethernet connection. Refer to the documentation shipped with the operating system for booting instructions.**

---

### 1.3.1 Booting from a Local Disk

#### Example 1-3 Booting Tru64 UNIX from a Local Disk

```
>>> sho device ❶
dka100.1.0.2000.0      DKA100      RZ1CB-CA  LYJ0 ❷
dka300.3.0.2000.0      DKA300      RZ1CB-CA  LYJ0
dka500.5.0.2000.0      DKA500      RZ1EF-AB  0370
dkb0.0.0.2001.0        DKB0        RZ1CB-CA  LYJ0
dkb200.2.0.2001.0      DKB200      RZ1DB-CS  0307
dkb400.4.0.2001.0      DKB400      RZ1CB-CA  LYJ0
dkc0.0.0.16.0          DKC0        RZ1CB-BA  LYG0
dkc200.2.0.16.0        DKC200      RZ1CB-BA  LYG0
dqa1.1.0.13.0          DQA1        CD-532E   1.0A
dra1.0.0.17.0          DRA1        1 Member JBOD
dra2.0.0.17.0          DRA2        1 Member JBOD
dva0.0.0.0.0           DVA0
ewa0.0.0.9.0           EWA0        08-00-2B-86-1B-BA
ewb0.0.0.11.0          EWB0        08-00-2B-86-1B-BB
ewc0.0.0.2002.0        EWC0        00-06-2B-00-26-1C
pka0.7.0.2000.0        PKA0        SCSI Bus ID 7

>>> boot -file vmunix -flags a dkc0 ❸
(boot dkc0.0.0.9.0 -file vmunix -flags a)
block 0 of dkc0.0.0.9.0 is a valid boot block
reading 16 blocks from dkc0.0.0.9.0
bootstrap code read in
base = 1ee000, image_start = 0, image_bytes = 2000
initializing HWRPB at 2000
initializing page table at 1fff0000
initializing machine state
setting affinity to the primary CPU
jumping to bootstrap code

Tru64 UNIX boot - Fri Aug 7 20:30:19 EDT 1999
Loading vmunix ...
. . .
The system is ready.

Tru64 UNIX Version V4.0E (sabl28.eng.pko.dec.com) console
login:
*****
* Starting Desktop Login on display :0...
* Wait for the Desktop Login screen before logging in. ❹
*****
```

- ❶ The **show device** command displays device information, including name and type of connection to the system. See Section 2.3.2 for a description of the **show device** command and the device naming convention.
- ❷ The operating system is on the third disk connected to the system through the controller in slot 3 of the PCI. The name of this device, `dkc0`, is used as an argument to the **boot** command.
- ❸ This command loads Tru64 UNIX from the disk `dkc0`, using the boot file `vmunix` and autobooting to multiuser mode. See Section 2.5 for a description of the **boot** command.

The **boot** command accepts the name of a boot device, a boot file name through the **-file** option, and boot flags through the **-flags** option. The environment variables **bootdef\_dev**, **boot\_file**, and **boot\_osflags** can also be used to specify the default boot device or device list, the default boot file, and flag information. When an option and the corresponding environment variable are both in a command string, the option overrides the environment variable. The value of the environment variable, however, is not changed. See Section 2.18 for information about environment variables.

- ❹ The operating system banner displays.

## 1.3.2 Booting from a Remote Disk

### Example 1-4 Booting Tru64 UNIX from a Remote Disk

```
>>> show device ❶
. . .
ewa0.0.0.8.0          EWA0      08-00-2B-E2-9C-60 ❷

>>>
>>> boot -flags an -protocols bootp ewa ❸
      (boot ewa0.0.0.4.1 -flags an)
Building FRU table

Trying BOOTP boot.

Broadcasting BOOTP Request...
Received BOOTP Packet File Name: /var/adm/ris/ris0.alpha/hvmunix
local inet address: 16.122.128.26
remote inet address: 16.122.128.59
TFTP Read File Name: /var/adm/ris/ris0.alpha/hvmunix
.....
bootstrap code read in
base = 200000, image_start = 0, image_bytes = 9a0fa0
initializing HMRPB at 2000
initializing page table at 1f2000
initializing machine state
setting affinity to the primary CPU
jumping to bootstrap code

Secondary boot program - Thu Aug 1 22:33:13 EST 1999

Loading vmunix ...
.
.
.
The system is ready.

Tru64 UNIX Version V4.0E (sabl28.eng.pko.dec.com) console ❹
```

- ❶ The **show device** command displays device information, including name and type of connection to the system. See Section 2.3.2 for a description of the **show device** command and the device naming convention.
- ❷ The operating system is on a remote disk accessed through the Ethernet controller in slot 4 of the PCI. The name of this device, ewa0, is used as an argument to the **boot** command.
- ❸ This command loads Tru64 UNIX from ewa0, autobooting to multiuser mode. See Section 2.5 for a description of the **boot** command.

The **boot** command accepts the name of a boot device, a boot file name through the **-file** option, and boot flags through the **-flags** option. The environment variables **bootdef\_dev**, **boot\_file**, and **boot\_osflags** can also be used to specify the default boot device or device list, the default boot file, and flag information. When an option and the corresponding environment variable are both in a command string, the option overrides the environment variable. The value of the environment variable, however, is not changed. See Section 2.18 for information about environment variables.

- ❹ The operating system banner displays.

## 1.4 Installing Tru64 UNIX

---

**Tru64 UNIX is installed from the CD-ROM. Refer to the documentation shipped with the CD-ROM for installation instructions.**

---

### Example 1-5 Installing Tru64 UNIX

```
>>> show device
      . . .
dka500.5.0.7.1      DKA500      RRD47 1337 ❶
      . . .
>>>
>>> boot dka500 ❶
(boot dka500.5.0.7.1 -flags A)
block 0 of dka500.5.0.7.1 is a valid boot block
reading 16 blocks from dka500.5.0.7.1
bootstrap code read in
base = 1ee000, image_start = 0, image_bytes = 2000
initializing HWRPB at 2000
initializing page table at 1fff0000
initializing machine state
setting affinity to the primary CPU
jumping to bootstrap code

Tru64 UNIX boot - Thu Jul 16 16:59:31 EDT 1999

Loading vmunix ...
.
.
.
INIT: SINGLE-USER MODE

Initializing system for Tru64 UNIX installation. Please wait...

*** Performing CDROM Installation

Loading installation process and scanning system hardware.

[The "Welcome to the Tru64 UNIX Installation Procedure" appears.] ❷
```

- ❶ Use the **boot** command to install the operating system from the CD-ROM, which is either dka500 or dqa0.
- ❷ See your operating system documentation for further installation instructions.

## 1.5 Booting OpenVMS

---

**OpenVMS can be booted from a local disk, a disk connected through a cluster, or a remote disk through an Ethernet connection. Refer to the documentation shipped with the operating system for booting instructions.**

---

### 1.5.1 Booting OpenVMS from a Local Disk

#### Example 1-6 Booting OpenVMS from a Local Disk

```
>>> show device ❶
dka200.2.0.7.1 . . . DKA200          RZ1CB-CA  LYJ0
>>>

>>> show boot_reset ❷
boot_reset          ON
>>> show bootdef_dev ❸
bootdef_dev         dka200.2.0.7.1
>>> boot ❹
(boot dka200.2.0.7.1 -flags 0,0)
block 0 of dka200.2.0.7.1 is a valid boot block
reading 893 blocks from dka200.2.0.7.1
bootstrap code read in
base = 1fa000, image_start = 0, image_bytes = 6fa00
initializing HWRPB at 2000
initializing page table at 1fff0000
initializing machine state
setting affinity to the primary CPU
jumping to bootstrap code

OpenVMS (TM) Alpha Operating System, Version 7.1-2
$!Copyright(c) 1999 Digital Equipment Corporation. All rights reserved.
%STDRV-I-STARTUP, OpenVMS startup begun at 30-JUL-1999 11:47:11.04
%MSCPLOAD-I-CONFIGSCAN, enabled automatic disk serving
```

*Continued on next page*

## Example 1-6 Booting OpenVMS from a Local Disk (Continued)

```
. . . .  
The OpenVMS system is now executing the site-specific startup commands.  
. . . .
```

```
Welcome to OpenVMS (TM) Alpha Operating System, Version V7.1-2 ⑤
```

```
Username:
```

- ① The **show device** command displays device information. See Section 2.3.2 for a description of the **show device** command and the device naming convention.
- ② The **boot\_reset** environment variable was previously set to “on,” causing the power-up trace to display when the system initializes (see Section 1.2). See Section 2.18 for commands used with environment variables.
- ③ The **bootdef\_dev** environment variable specifies the default boot device. In this example, the default boot device was previously set to dka200.2.0.7.1.
- ④ No boot device is specified in the **boot** command; the default boot device was set with the environment variable. See Section 2.5 for a description of the **boot** command.

The **boot** command accepts the name of a boot device, a boot file name through the **-file** option, and boot flags through the **-flags** option. The environment variables **bootdef\_dev**, **boot\_file**, and **boot\_osflags** can also be used to specify the default boot device or device list, the default boot file, and flag information. When an option and the corresponding environment variable are both in a command string, the option overrides the environment variable. The value of the environment variable, however, is not changed. See Section 2.18 for information about environment variables.

- ⑤ The operating system banner displays.

## 1.5.2 Booting OpenVMS from a Disk on a Cluster

### Example 1-7 Booting OpenVMS from a Disk on a Cluster

```
>>> show bootdef_dev ①
bootdef_dev          dual110.0.0.8.0
>>> show device      ②
      . . .
dual110.0.0.8.0      $1$DIA110 (DENVER)      RF74 ③
      . . .

>>> boot            ④
(boot dual110.0.0.8.0 -flags 0)
Building FRU table
.
.
.
Welcome to OpenVMS Alpha (TM) Operating System, Version V7.1-2 ⑤
```

- ❶ The **bootdef\_dev** environment variable specifies the default boot device.
- ❷ The **show device** command displays device information, including name and type of connection to the system. See Section 2.3.2 for a description of the **show device** command and the device naming convention.
- ❸ The disk `dua110.0.0.8.0` is on the cluster that includes this system.
- ❹ No boot device is specified in the **boot** command; the default boot device was set with the environment variable. See Section 2.5 for a description of the **boot** command.

The **boot** command accepts the name of a boot device, a boot file name through the **-file** option, and boot flags through the **-flags** option. The environment variables **bootdef\_dev**, **boot\_file**, and **boot\_osflags** can also be used to specify the default boot device or device list, the default boot file, and flag information. When an option and the corresponding environment variable are both in a command string, the option overrides the environment variable. The value of the environment variable, however, is not changed. See Section 2.18 for information about environment variables.

- ❺ The operating system banner prints.

### 1.5.3 Booting OpenVMS from a Remote Disk

#### Example 1-8 Booting OpenVMS from a Remote Disk

```
>>> show device ❶  
  . . .  
ewa0.0.0.8.0      EWA0      08-00-2B-E2-9C-60 ❶  
  . . .  
>>>  
>>> boot ewa0 -flags 0 ❷  
(boot ewa0.0.0.2.0 -flags 0)  
Building FRU table  
  
Trying MOP boot.....  
Network load complete.  
  . . .  
Welcome to OpenVMS Alpha (TM) Operating System, Version V7.1-2 ❸
```

- ❶ The **show device** command displays device information, including name and type of connection to the system. In this example the Ethernet connection is ewa0. See Section 2.3.2 for a description of the **show device** command and the device naming convention.
- ❷ The **boot** command specifies ewa0 as the boot device. See Section 2.5 for a description of the **boot** command.

The **boot** command accepts the name of a boot device, a boot file name through the **-file** option, and boot flags through the **-flags** option. The environment variables **bootdef\_dev**, **boot\_file**, and **boot\_osflags** can also be used to specify the default boot device or device list, the default boot file, and flag information. When an option and the corresponding environment variable are both in a command string, the option overrides the environment variable. The value of the environment variable, however, is not changed. See Section 2.18 for information about environment variables.

- ❸ The operating system banner prints.

## 1.6 Installing OpenVMS

---

**OpenVMS is installed from the CD-ROM. Refer to the documentation shipped with the OpenVMS kit for complete installation instructions.**

---

### Example 1-9 Installing OpenVMS

```
>>> boot -flags 0,0 dka500 ❶
Initializing...
SRCOM V3.0 on cpu0
.
. [The initialization display prints. See Section 1.2.]
.
AlphaServer DS10 Console V5.7-0 Jan 13 2000 15:17:48

CPU 0 booting

(boot dka500.5.0.1.1 -flags 0,0)
Building FRU table
block 0 of dka500.5.0.1.1 is a valid boot block
reading 1002 blocks from dka500.5.0.1.1
bootstrap code read in
base = 200000, image_start = 0, image_bytes = 7d400
initializing HWRPB at 2000
initializing page table at 1f2000
initializing machine state
setting affinity to the primary CPU
jumping to bootstrap code

OpenVMS (TM) Alpha Operating System, Version 7.1x ❷

%SMP-I-SECMSG, CPU #01 message: P01>>>START
%SMP-I-CPUBOOTED, CPU #01 has joined the PRIMARY CPU in multiprocessor operation
Installing required known files...

Configuring devices...

*****

You can install or upgrade the OpenVMS Alpha operating system
or you can install or upgrade layered products that are included
on the OpenVMS Alpha operating system CD-ROM.

You can also execute DCL commands and procedures to perform
"standalone" tasks, such as backing up the system disk.
```

*Continued on next page*

## Example 1-9 Installing OpenVMS (Continued)

Please choose one of the following:

- 1) Install or upgrade OpenVMS Alpha Version 7.1x
- 2) List layered product kits that this procedure can install
- 3) Install or upgrade layered product(s)
- 4) Execute DCL commands and procedures
- 5) Shut down this system

Enter CHOICE or ? to repeat menu: (1/2/3/4/5/?)

- ❶ Use the **boot** command to install the operating system from the CD-ROM, which is either dka500 or dqa0.
- ❷ See your operating system documentation for installation instructions.

## 1.7 Switching Between Operating Systems

---

**The system supports multiple operating systems on different system and data disks not in the machine at the same time. That is, you can have a set of disks for each operating system.**

---

**CAUTION:** *This operation is not for the faint hearted especially if you have a shadow system disk and shadow arrays. The file structures of the operating systems are incompatible and therefore all disks must be removed from the system and upon reinstallation must be replaced in exactly the same physical locations. It is therefore necessary to keep track of the location of each disk in the system.*

---

### 1.7.1 Switching to Tru64 UNIX or OpenVMS

Use the following procedure:

1. Shut down the operating system and power off the system.
2. Remove and mark the physical location of each disk in the system.
3. Either place blank disks or your Tru64 UNIX or OpenVMS disk set into the system. **No matter which disk set you are placing into the system, be sure that each disk is placed in the same physical location from which it was removed.**
4. Power on the system.
5. Set the operating system at the console prompt (see Section 2.18.11).
6. Press the Halt/Reset button to reset the system.
7. Either install Tru64 UNIX (see Section 1.4) or OpenVMS (see Section 1.6) or boot the operating system.

## 1.8 Updating Firmware

---

**Start the Loadable Firmware Update (LFU) utility by issuing the `lfu` command at the SRM console prompt, booting it from the CD-ROM while in the SRM console.**

---

### Example 1-10 Starting LFU from the SRM Console

*Revision levels and devices listed are for example only; your results may vary.*

```
>>> lfu
```

```
Checking dqa0.0.0.13.0 for the option firmware files. . .
Checking dva0 for the option firmware files. . .
```

```
Option firmware files were not found on CD or floppy.
If you want to load the options firmware,
please enter the device on which the files are located(ewa0),
or just hit <return> to proceed with a standard console update: dva0
```

```
Please enter the name of the options firmware files list, or
Hit <return> to use the default filename (ds10fw.txt) :
```

```
Copying ds10fw.txt from dva0. . .
Copying PC264NT.ROM from dva0. . .
Copying DS10SRM.ROM from dva0. . .
```

\*\*\*\*\* Loadable Firmware Update Utility \*\*\*\*\*

---

Function	Description
Display	Displays the system's configuration table.
Exit	Done exit LFU (reset).
List	Lists the device, revision, firmware name, and update revision.
Readme	Lists important release information.
Update	Replaces current firmware with loadable data image.
Verify	Compares loadable and hardware images.
? or Help	Scrolls this function table.

---

UPD> update \*

Confirm update on:

nt  
srm  
[Y/(N)]y

WARNING: updates may take several minutes to complete for each device.

DO NOT ABORT!

nt                    Updating to 5.70... Verifying 5.70... PASSED.

srm                   Updating to 5.7-0... Verifying 5.7-0... PASSED.

UPD> exit

---

**NOTE:** *If the system has been shut down from a booted program (most commonly, the operating system) or in some other way halted back to the SRM console, the system must be reset before running LFU.*

---

Use the Loadable Firmware Update (LFU) utility to update system firmware.

From the SRM console, start LFU by issuing the **lfu** command (see Example 1-10). Also from the SRM console, LFU can be booted from the Alpha CD-ROM (V5.4 or later), as shown in Example 1-11.

A typical update procedure is:

1. Start LFU.
2. Use the LFU **list** command to show the revisions of modules that LFU can update and the revisions of update firmware.
3. Use the LFU **update** command to write the new firmware.

4. Use the LFU **exit** command to go back to the console.

The sections that follow show examples of updating firmware from the local CD-ROM, the local floppy, and a network device.

### Example 1-11 Booting LFU from the CD-ROM

*Revision levels and devices listed are for example only; your results may vary.*

```
>>> show device      . . . .
dka500.5.0.7.1      DKA500          RRD47  1645
. . . .
>>> boot dka500
      (boot dka500.5.0.7.1 -flags 0,0)
      block 0 of dka500.5.0.7.1 is a valid boot block
. . .
      jumping to bootstrap code
      The default bootfile for this platform is
      [DS10]DS10_LFU.EXE
      Hit <RETURN> at the prompt to use the default bootfile.
      Bootfile: <CR>
      Starting Firmware Update Utility

          ***** Loadable Firmware Update Utility *****
. . .
UPD>
```

## 1.8.1 Updating Firmware from Floppy Disks

---

**Create two update diskettes before starting LFU: one for console updates and one for I/O. See Section 1.8.2 for an example of the update procedure.**

---

**Table 1-3 File Locations for Creating Update Diskettes on a PC**

Console Update Diskette	I/O Update Diskette
ds10fw.txt	ds10fw.txt
pc264nt.rom	ccmab022.sys
ds10srm.rom	dfxaa310.sys
	kzpsaa12.sys
	cipca420.sys

---

**NOTE:** *The filenames above are for example only, and may vary according to where you obtained the update files.*

---

1. Download the update files from the Internet.
2. On a PC, copy files onto two FAT-formatted diskettes as shown in Table 1-3.

## 1.8.2 Performing the Update from Floppy Disks

---

**Insert an update diskette (see Section 1.8.1) into the floppy drive. Start LFU and select dva0 as the load device.**

---

### Example 1-12 Updating Firmware from the Floppy Disk

*Revision levels and devices listed are for example only; your results may vary.*

```
>>> lfu
```

```
Checking dqa0.0.0.13.0 for the option firmware files. . .
Checking dva0 for the option firmware files. . .
```

```
Option firmware files were not found on CD or floppy.
If you want to load the options firmware,
please enter the device on which the files are located(ewa0),
or just hit <return> to proceed with a standard console update: dva0
```

```
Please enter the name of the options firmware files list, or
Hit <return> to use the default filename (ds10fw.txt) :
```

```
Copying ds10fw.txt from dva0. . .
Copying PC264NT.ROM from dva0. . .
Copying DS10SRM.ROM from dva0. . .
```

\*\*\*\*\* Loadable Firmware Update Utility \*\*\*\*\*

---

Function	Description
Display	Displays the system's configuration table.
Exit	Done exit LFU (reset).
List	Lists the device, revision, firmware name, and update revision.
Readme	Lists important release information.
Update	Replaces current firmware with loadable data image.
Verify	Compares loadable and hardware images.
? or Help	Scrolls this function table.

---

UPD> update \*

Confirm update on:

nt  
srm  
[Y/(N)]y

WARNING: updates may take several minutes to complete for each device.

DO NOT ABORT!

nt                    Updating to 5.70... Verifying 5.70... PASSED.

srm                   Updating to 5.7-0... Verifying 5.7-0... PASSED.

UPD> exit

---

**NOTE:** *If the system has been shut down from a booted program (most commonly, the operating system) or in some other way halted back to the SRM console, the system must be reset before running LFU.*

---

### 1.8.3 Updating Firmware from a Network Device

---

**Copy files to the local MOP server's MOP load area, start LFU, and select ewa0 as the load device.**

---

#### Example 1-13 Updating Firmware from a Network Device

*Revision levels and devices listed are for example only; your results may vary.*

```
***** Loadable Firmware Update Utility *****

Select firmware load device (cda0, dva0, ewa0), or
Press <return> to bypass loading and proceed to LFU: ewa0 ①

Please enter the name of the options firmware files list, or
Press <return> to use the default filename [DS10FW]: ②

Copying DS10FW from EWA0 .
Copying CCMAB022 from EWA0 .
Copying DFXAA310 from EWA0 .....
Copying KZPSAA12 from EWA0 .....
Copying CIPCA420 from EWA0 .

.
.
.
UPD> list ③

Device          Current Revision  Filename          Update Revision
Nt              5.69             nt_fw            5.70
Srm             5.6-2            srm_fw           5.7-0
```

*Continued on next page*

Before starting LFU, download the update files from the Internet. You will need the files with the extension .SYS. Copy these files to your local MOP server's MOP load area.

- ❶ Select the device from which firmware will be loaded. The choices are the CD-ROM, the internal floppy disk, or a network device. In this example, a network device is selected.
- ❷ For the SRM console, AlphaBIOS console, and I/O adapter firmware, select the file that has the firmware update, (ds10fw.txt ), or press Enter.

In this example the default file, which has both console firmware (AlphaBIOS and SRM) and I/O adapter firmware, is selected.

- ❸ Use the LFU **list** command to determine the revision of firmware in a device and the most recent revision of that firmware available in the selected file. In this example, the resident firmware for each console (SRM and AlphaBIOS) and I/O adapter is at an earlier revision than the firmware in the update file.

*Continued on next page*

### Example 1-13 Updating Firmware from a Network Device (Continued)

```
UPD> update * -all ④  
WARNING: updates may take several minutes to complete for each device.  
  
                DO NOT ABORT!  
AlphaBIOS      Updating to V6.40-1... Verifying V6.40-1... PASSED.  
  
                DO NOT ABORT!  
kzpsa0         Updating to All    ... Verifying All... PASSED.  
  
                DO NOT ABORT!  
kzpsa1         Updating to All    ... Verifying All... PASSED.  
  
UPD> exit ⑤
```

- ④ The **update** command updates the device specified or all devices. In this example, the wildcard indicates that all devices supported by the selected update file will be updated. Typically LFU requests confirmation before updating each console's or device's firmware. The **-all** option eliminates the update confirmation requests.
- ⑤ The **exit** command returns you to the console from which you entered LFU (either SRM or AlphaBIOS).

## 1.8.4 LFU Commands

---

The commands summarized in Table 1-4 are used to update system firmware.

---

Table 1-4 LFU Command Summary

Command	Function
<b>display</b>	Shows the physical configuration of the system.
<b>exit</b>	Terminates the LFU program.
<b>help</b>	Displays the LFU command list.
<b>lfu</b>	Restarts the LFU program.
<b>list</b>	Displays the inventory of update firmware on the selected device.
<b>readme</b>	Lists release notes for the LFU program.
<b>update</b>	Writes new firmware to the module.
<b>verify</b>	Reads the firmware from the module into memory and compares it with the update firmware.

### display

The **display** command shows the physical configuration of the system. **Display** is equivalent to issuing the SRM console command **show configuration**. Because it shows the slot for each module, **display** can help you identify the location of a device.

### exit

The **exit** command terminates the LFU program, causes system initialization and testing, and returns the system to the console from which LFU was called.

## help

The **help** (or **?**) command displays the LFU command list, shown below.

Function	Description
Display	Displays the system's configuration table.
Exit	Done exit LFU (reset).
List	Lists the device, revision, firmware name, and update revision.
Lfu	Restarts LFU.
Readme	Lists important release information.
Update	Replaces current firmware with loadable data image.
Verify	Compares loadable and hardware images.
? or Help	Scrolls this function table.

## lfu

The **lfu** command restarts the LFU program. This command is used when the update files are on a floppy disk. The files for updating both console firmware and I/O firmware are too large to fit on a 1.44 MB disk, so only one type of firmware can be updated at a time. Restarting LFU enables you to specify another update file.

## list

The **list** command displays the inventory of update firmware on the CD-ROM, network, or floppy. Only the devices listed at your terminal are supported for firmware updates.

The **list** command shows three pieces of information for each device:

- Current Revision — The revision of the device's current firmware
- Filename — The name of the file used to update that firmware
- Update Revision — The revision of the firmware update image

## readme

The **readme** command lists release notes for the LFU program.

## **update**

The **update** command writes new firmware to the module. Then LFU automatically verifies the update by reading the new firmware image from the module into memory and comparing it with the source image.

To update more than one device, you may use a wildcard but not a list. For example, **update k\*** updates all devices with names beginning with k, and **update \*** updates all devices. When you do not specify a device name, LFU tries to update all devices; it lists the selected devices to update and prompts before devices are updated. (The default is no.) The **-all** option eliminates the update confirmation requests, enabling the update to proceed without operator intervention.

---

**CAUTION:** *Never abort an update operation.  
Aborting corrupts the firmware on the module.*

---

## **verify**

The **verify** command reads the firmware from the module into memory and compares it with the update firmware. If a module already verified successfully when you updated it, but later failed tests, you can use **verify** to tell whether the firmware has become corrupted.

## 1.9 Using the Halt Button


---

**Under OpenVMS and Tru64 UNIX, the halt button pauses the operating system.**

---


Use the Halt button to halt the Tru64 UNIX or OpenVMS operating system when it hangs, clear the SRM console password (see Section 2.9.2), or force a halt assertion (see Section 1.10). The Halt button operates like issuing an SRM **halt** command.

**Figure 1-5 Halt/Reset Button - DS10**

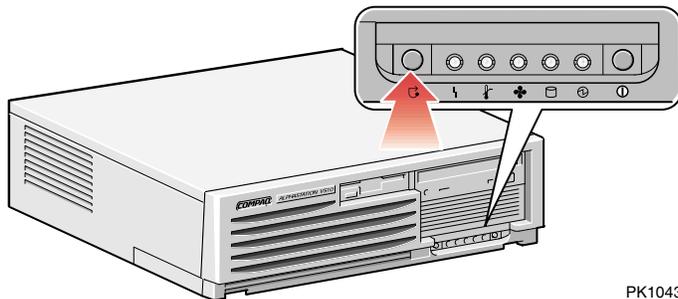

PK1043b

Figure 1-6 Halt/Reset Button - DS10L

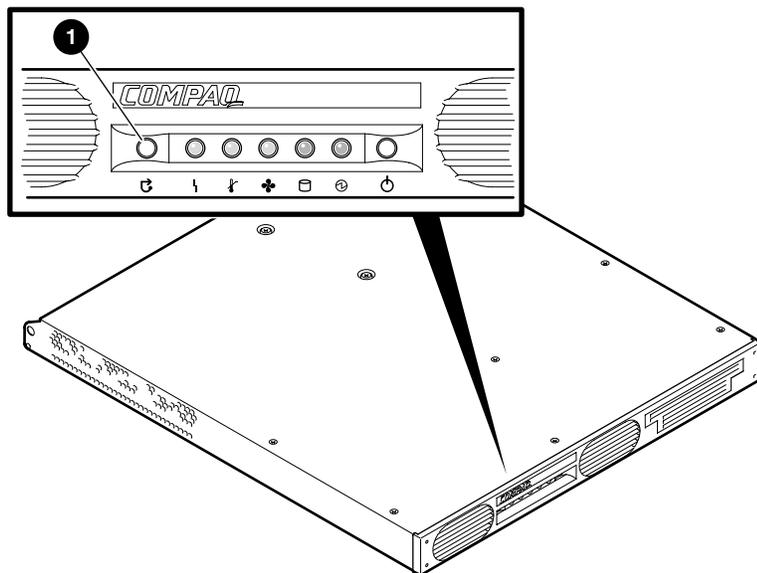

PK2220

### 1.9.1 Using Halt to Shut Down the Operating System

You can use the Halt button if the Tru64 UNIX or OpenVMS operating system hangs. Pressing the Halt button halts the operating system back to the SRM console firmware. From the console, you can use the **crash** command to force a crash dump at the operating system level. See Section 2.12 for an example.

### 1.9.2 Using Halt to Clear the Console Password

The SRM console firmware allows you to set a password to prevent unauthorized access to the console. If you forget the password, the Halt button, with the **login** command, lets you clear the password and regain control of the console. Section 2.9.2 describes the procedure.

## 1.10 Halt Assertion

---

**A halt assertion allows you to disable automatic boots of the operating system so that you can perform tasks from the SRM console.**

---

Under certain conditions, you might want to force a “halt assertion.” A halt assertion differs from a simple halt in that the SRM console “remembers” the halt. The next time you power up, the system ignores the SRM power-up script (nvram) and ignores any environment variables that you have set to cause an automatic boot of the operating system. The SRM console displays this message:

```
Halt assertion detected
NVRAM power-up script not executed
AUTO_ACTION=BOOT/RESTART and OS_TYPE=NT ignored, if applicable
```

Halt assertion is useful for disabling automatic boots of the operating system when you want to perform tasks from the SRM console. It is also useful for disabling the SRM power-up script if you have accidentally inserted a command in the script that will cause a system problem. These conditions are described in the sections “Disabling Autoboot” and “Disabling the SRM Power-Up Script.”

You can force a halt assertion using the Halt button, the RMC **halt** command, or the RMC **haltin** command. Observe the following guidelines for forcing a halt assertion.

### 1.10.1 Halt Assertion with Halt Button or RMC Halt Command

Press the Halt button on the local system (or enter the RMC **halt** command from a remote system) approximately five seconds after starting power up or when the SRM console is running. The system halts at the SRM console, and the halt status is saved. The next time the system powers up, the saved halt status is checked.

---

**NOTE:** *Wait 5 seconds after the system begins powering up before pressing the Halt button or remotely entering the RMC **halt** command. Press the button for several seconds.*

---

### 1.10.2 Halt Assertion with RMC Haltin Command

Enter the RMC **haltin** command at any time except during power-up. For example, enter **haltin** during an operating system session or when the AlphaBIOS console is running.

If you enter the RMC **haltin** command during a Tru64 UNIX or OpenVMS session, the system halts back to the SRM console, and the halt status is saved. The next time the system powers up, the saved halt status is checked.

If you enter the RMC **haltin** command when AlphaBIOS is running, the interrupt is ignored. However, you can enter the RMC **haltin** command followed by the RMC **reset** command to force a halt assertion. Upon reset, the system powers up to the SRM console, but the SRM console does not load the AlphaBIOS console.

The **haltin** command should always be followed by the **haltout** command.

### 1.10.3 Clearing a Halt Assertion

Clear a halt assertion as follows:

- If the halt assertion was caused by pressing the Halt button or remotely entering the RMC **halt** command, the console uses the halt assertion once, then clears it.
- If entering the RMC **haltin** command caused the halt assertion, enter the RMC **haltout** command or cycle power on the local system.

### 1.10.4 Disabling Autoboot

The system automatically boots the selected operating system at power-up or reset if the following environment variables are set:

- For Tru64 UNIX and OpenVMS, the SRM environment variables **os\_type**, **auto\_action**, **bootdef\_dev**, **boot\_file**, and **boot\_osflags**

You might want to prevent the system from autobooting so you can perform tasks from the SRM console. Use one of the methods described previously to force a halt assertion. When the SRM console prompt is displayed, you can enter commands to configure or test the system. Chapter 2 describes the SRM console commands and environment variables.

### **1.10.5 Disabling the SRM Power-Up Script**

The system has a power-up script (file) named “nvram” that runs every time the system powers up. If you accidentally insert a command in the script that will cause a system problem, disable the script by using one of the methods described previously to force a halt assertion. When the SRM console prompt is displayed, edit the script to delete the offending command. See Section 2.4 for more information on editing the nvram script.

# Chapter 2

## SRM and AlphaBIOS Consoles

The SRM console is the command-line interface that supports the Tru64 UNIX and OpenVMS operating systems. The SRM console is used to bootstrap the operating system, configure and test the system hardware, examine system options for errors, and set or change environment variables. The AlphaBIOS console is used to run certain utilities.

This chapter describes the SRM and AlphaBIOS console commands and environment variables. Sections in this chapter are:

- Invoking the SRM Console
- Commands
- Show Commands
- Creating a Power-Up Script
- Booting the Operating System
- Configuring a PCI NVRAM Module
- Testing the System
- Set Commands
- Secure Mode
- Stopping and Starting CPU
- Updating Firmware
- Forcing a System Crash Dump
- Using Environment Variables
- Depositing and Examining Data
- Reading a File
- Initializing the System
- Finding Help
- Environment Variable Summary
- Switching from SRM to AlphaBIOS Console
- Running the AlphaBIOS Console

---

**NOTE:** *In many ways the DS10 and DS10L systems are identical. This manual uses DS10 systems for most illustrations and examples. Where significant differences exist, an illustration or example of a DS10L is presented separately.*

---

## 2.1 Invoking the SRM Console

---

**When a system is powered up, the SRM console runs and either remains running or passes control to another console or an operating system. If the system is already running, invoke the SRM console by shutting down the operating system or by pressing the Halt button on the control panel.**

---

### **If you are running Tru64 UNIX or OpenVMS Alpha operating system**

- The preferred method to invoke the SRM console is to shut down the operating system according to the procedure described in your operating system documentation.
- An alternative method is to press the Halt button on the control panel.

Following one of these steps, the console prompt, >>>, will be displayed. You are now at the SRM console.

### **If you are running AlphaBIOS**

To switch to the SRM console, power cycle the system. The SRM console will boot.

After you have performed tasks in the console mode, you must boot the operating system with the **boot** command to go back to the operating mode.

## 2.2 Commands

---

This section presents a command summary (Table 2-1), gives the syntax for the console commands (Table 2-2), and explains the special keystrokes and characters available in SRM console mode (Table 2-3).

---

### 2.2.1 Command Summary

Table 2-1 Summary of SRM Console Commands

Command	Function
<b>Alphabios</b>	Loads and starts the AlphaBIOS console.
<b>boot</b>	Loads and starts the operating system.
<b>clear <i>envvar</i></b>	Resets an environment variable to its default value.
<b>clear password</b>	Sets the password to zero.
<b>continue</b>	Resumes program execution.
<b>crash</b>	Forces a crash dump at the operating system level.
<b>deposit</b>	Writes data to the specified address.
<b>edit</b>	Invokes the console line editor on a RAM file or on the nvram file (power-up script).
<b>examine</b>	Displays the contents of a memory location, register, or device.
<b>halt</b>	Halts the specified processor. (Same as <b>stop</b> .)
<b>help</b>	Displays information about the specified console command.
<b>initialize</b>	Resets the system to a known state.
<b>lfu</b>	Runs the Loadable Firmware Update Utility.
<b>login</b>	Turns off secure mode, enabling access to all SRM console commands during the current session.

*Continued on next page.*

**Table 2-1 Summary of SRM Console Commands (Continued)**

<b>Command</b>	<b>Function</b>
<b>more</b>	Displays a file one screen at a time.
<b>prcache</b>	Utility that initializes and displays status of the optional PCI NVRAM device.
<b>set <i>envar</i></b>	Sets or modifies the value of an environment variable.
<b>set host</b>	Connects to an MSCP DUP server on a DSSI device.
<b>set password</b>	Sets the console password for the first time or changes an existing password.
<b>set secure</b>	Enables secure mode without requiring a restart of the console.
<b>show <i>envar</i></b>	Displays the state of the specified environment variable.
<b>show config</b>	Displays the configuration at the last system initialization.
<b>show cpu</b>	Displays the state of each processor in the system.
<b>show device</b>	Displays a list of controllers and their devices in the system.
<b>show memory</b>	Displays memory module information.
<b>show pal</b>	Displays the version of the privileged architecture library code (PALcode).
<b>show power</b>	Displays information about the power supply, system and PCI fans, CPU fan, and temperature.
<b>show version</b>	Displays the version of the console program.
<b>stop</b>	Halts the processor. (Same as <b>halt</b> .)
<b>test</b>	Runs firmware diagnostics for the system.

## 2.2.2 Commands: Syntax

Table 2-2 Syntax for SRM Console Commands

Parameter	Attribute or Action
<b>Length</b>	Up to 255 characters, not including the terminating carriage return or any characters deleted as the command is entered. A command longer than 80 characters and without the backslash character (see Table 2-3) causes display of an error message.
<b>Case</b>	Upper- or lowercase characters can be used for input. Characters are displayed in the case in which they are entered.
<b>Abbreviation</b>	Only by dropping characters from the end of words. You must enter the minimum number of characters to identify the keyword unambiguously. Abbreviation of environment variables is allowed with the <b>show</b> command.
<b>Options</b>	You can use command options, to modify the environment, after the command keyword or after any symbol or number in the command. See individual command descriptions for examples.
<b>Numbers</b>	Most numbers in console commands are in decimal notation. Two exceptions, both of which use hexadecimal notation, are addresses and numbers used in the <b>deposit</b> command. The default radix can be overridden by inserting <b>%d</b> before numbers you want to express in decimal, <b>%b</b> before binary, <b>%o</b> before octal, or <b>%x</b> before hexadecimal. Register names (for example, R0) are not considered numbers and use decimal notation.
<b>No characters</b>	A command line with no characters is a null command. The console program takes no action and does not issue an error message; it returns the console prompt. The console supports command line recall and editing.
<b>Spaces or tabs</b>	Multiple adjacent spaces and tabs are compressed and treated as a single space. The console program ignores leading and trailing spaces.

## 2.2.3 Commands: Special Keystrokes and Characters

Table 2-3 Special Characters for SRM Console

Character	Function
<b>Return</b> or <b>Enter</b>	Terminates a command line. No action is taken on a command until it is terminated. If no characters are entered and this key is pressed, the console just redisplay the prompt.
<b>Backslash</b> \	Continues a command on the next line. Must be the last character on the line to be continued.
← <b>Backspace</b>	Moves the cursor left one position, deleting one character.
<b>Delete</b>	Deletes the previous character.
<b>Help</b>	Entered at the console prompt without arguments, it displays first-level help. When pressed after part of a command, displays options available.
<b>Ctrl/A</b> or <b>F14</b>	Toggles between insert and overstrike modes. The default is overstrike.
<b>Ctrl/B</b> or ↑	Recalls previous command or commands. The last 16 commands are stored in the recall buffer.
<b>Ctrl/C</b>	Terminates the process that is running. Clears Ctrl/S; resumes output suspended by Ctrl/O. When entered as part of a command line, deletes the current line. Ctrl/C has no effect as part of a binary data stream.
<b>Ctrl/E</b>	Moves the cursor to the end of the line.
<b>Ctrl/F</b> or →	Moves the cursor right one position.
<b>Ctrl/H</b>	Moves the cursor to the beginning of the line.
<b>Ctrl/J</b>	Deletes the previous word.

*Continued next page.*

Character	Function
<b>Ctrl/O</b>	Stops output to the console terminal for the current command. Toggles between enable and disable. The output can be re-enabled by other means as well: when the console prompts for a command, issues an error message, or enters program mode, or when Ctrl/P is entered.
<b>Ctrl/P</b>	Halts the machine.
<b>Ctrl/Q</b>	Resumes output to the console terminal that was suspended by Ctrl/S.
<b>Ctrl/R</b>	Redisplays the current line. Deleted characters are omitted. This command is useful for hardcopy terminals.
<b>Ctrl/S</b>	Suspends output to the console terminal until Ctrl/Q is entered. Cleared by Ctrl/C.
<b>Ctrl/U</b>	Deletes the current line.
*	Wildcarding for commands such as <b>show</b> .
" . . . "	Double quotes enable you to denote a string for environment variable assignment.
#	Specifies that all text between it and the end of the line is a comment. Control characters are not considered part of a comment.

## 2.3 Show Commands

---

Several commands are used to display the system configuration: **show config**, **show cpu**, **show device**, **show memory**, **show network**, **show pal**, **show power**, and **show version**.

---

### 2.3.1 Show Config

---

The **show config** command displays a list of devices found on the system interconnect and I/O buses. This is the configuration at the most recent initialization.

---

**Syntax:**            **show config**

#### Example 2-1 Show Config Command

```
>>> show config
AlphaServer DS10 466 MHz

SRM Console:      V5.7-0
PALcode:         OpenVMS PALcode V1.73-65, Tru64 UNIX PALcode V1.66-58
Processors
CPU 0             Alpha 21264-4 466 MHz   SROM Revision: V1.14.208
                  Bcache size: 2 MB

Core Logic
Cchip            DECchip 21272-CA Rev 2
Dchip            DECchip 21272-DA Rev 2
Pchip 0          DECchip 21272-EA Rev 2

TIG              Rev 2.1
Arbiter          Rev 3.30 (0x7E)

MEMORY
Array #         Size      Base Addr
-----
0               256 MB    000000000

Total Bad Pages = 0
Total Good Memory = 256 MBytes

PCI Hose 00
  Bus 00 Slot 01: Acer Labs M1543C USB
  Bus 00 Slot 03: Acer Labs M1543C PMU
  Bus 00 Slot 07: Acer Labs M1543C
  Bus 00 Slot 09: DE500-BA Network Controller          ewa0.0.0.9.0
                                                         Bridge to Bus 1, ISA
                                                         08-00-2B-86-1B-BA
```

```

Bus 00 Slot 11: DE500-BA Network Controller
                ewb0.0.0.11.0          08-00-2B-86-1B-BB
Bus 00 Slot 13: Acer Labs M1543C IDE
                dqa.0.0.13.0
                dqa1.1.0.13.0         CD-532E
Bus 00 Slot 14: DEC PowerStorm
Bus 00 Slot 15: DECchip 21152-AA
                Bridge to Bus 2, PCI
Bus 00 Slot 16: QLogic ISP1020
                pkc0.6.0.16.0         SCSI Bus ID 6
                dkc0.0.0.16.0         RZ1CB-BA
                dkc200.2.0.16.0       RZ1CB-BA
Bus 00 Slot 17: Mylex DAC960
                dra.0.0.17.0
                dra0.0.0.17.0         1 Member JBOD
                dra1.0.0.17.0         1 Member JBOD
                dra2.0.0.17.0         1 Member JBOD
                dra3.0.0.17.0         1 Member JBOD
Bus 02 Slot 00: NCR 53C875
                pka0.7.0.2000.0       SCSI Bus ID 7
                dka100.1.0.2000.0     RZ1CB-CA
                dka300.3.0.2000.0     RZ1CB-CA
                dka500.5.0.2000.0     RZ1EF-AB
Bus 02 Slot 01: NCR 53C875
                pkb0.7.0.2001.0       SCSI Bus ID 7
                dkb0.0.0.2001.0       RZ1CB-CA
                dkb200.2.0.2001.0     RZ1DB-CS
                dkb400.4.0.2001.0     RZ1CB-CA
Bus 02 Slot 02: DE500-AA Network Controller
                ewc0.0.0.2002.0       00-06-2B-00-26-1C

```

```

ISA
Slot
0
  Device Name           Type           Enabled BaseAddr  IRQ   DMA
  0      MOUSE          Embedded      Yes      60       12
  1      KBD            Embedded      Yes      60       1
  2      COM1           Embedded      Yes      3f8      4
  3      COM2           Embedded      Yes      2f8      3
  4      LPT1           Embedded      Yes      3bc      7
  5      FLOPPY         Embedded      Yes      3f0      6      2

```

>>>

## 2.3.2 Show Device

---

**The show device command displays status for devices and controllers in the system: SCSI and MSCP devices, the internal floppy drive, and the network.**

---

**Syntax:**        **show device** (*controller\_name*)

---

*controller\_name*    The controller name or abbreviation. When abbreviations or wildcards are used, all controllers that match the type are displayed. If no name is given, the display is a list of all devices and controllers in the system.

### Example 2-2 Show Device Command

```
>>> sho device
dka0.0.0.14.0          DKA0          RZ2CA-KA  N1H1
dka100.1.0.14.0       DKA100        RZ2CA-KA  N1H1
dqa0.0.0.13.0         DQA0          CD-532E-  A  1.0A
dva0.0.0.0.0          DVA0
ewa0.0.0.9.0          EWA0          08-00-2B-86-1F-71
ewb0.0.0.11.0         EWB0          08-00-2B-86-1F-70
pka0.7.0.14.0         PKA0          SCSI Bus ID 7  5.57
>>>
```

An example of a device name is **dka200.2.0.7.1**. Table 2-4 shows the interpretation of this device name.

**Table 2-4 Device Naming Convention**

Category	Description												
<b>dk</b> Driver ID	Two-letter designator of port or class driver												
	<table border="0"> <tr> <td><b>dk</b> SCSI disk</td> <td><b>fw</b> FDDI device</td> </tr> <tr> <td><b>dq</b> ATAPI CD-ROM or IDE disk</td> <td><b>mk</b> SCSI tape</td> </tr> <tr> <td><b>dr</b> RAID set device</td> <td><b>mu</b> DSSI tape</td> </tr> <tr> <td><b>du</b> DSSI disk</td> <td><b>pk</b> SCSI port</td> </tr> <tr> <td><b>dv</b> Diskette drive</td> <td><b>pu</b> DSSI port</td> </tr> <tr> <td><b>ew</b> Ethernet port</td> <td></td> </tr> </table>	<b>dk</b> SCSI disk	<b>fw</b> FDDI device	<b>dq</b> ATAPI CD-ROM or IDE disk	<b>mk</b> SCSI tape	<b>dr</b> RAID set device	<b>mu</b> DSSI tape	<b>du</b> DSSI disk	<b>pk</b> SCSI port	<b>dv</b> Diskette drive	<b>pu</b> DSSI port	<b>ew</b> Ethernet port	
<b>dk</b> SCSI disk	<b>fw</b> FDDI device												
<b>dq</b> ATAPI CD-ROM or IDE disk	<b>mk</b> SCSI tape												
<b>dr</b> RAID set device	<b>mu</b> DSSI tape												
<b>du</b> DSSI disk	<b>pk</b> SCSI port												
<b>dv</b> Diskette drive	<b>pu</b> DSSI port												
<b>ew</b> Ethernet port													
<b>a</b> Storage adapter ID	One-letter designator of storage adapter (a, b, c...).												
<b>200</b> Device unit number	Unique number (MSCP unit number). SCSI unit numbers are forced to 100 X node ID.												
<b>2</b> Bus node number	Bus node ID.												
<b>0</b> Channel number	Used for multi-channel devices.												
<b>7</b> Logical slot number	Corresponds to PCI slot number, as shown in Table 2-5.												
<b>1</b> Hose number	0 — PCI 0      1 — PCI 1												

**Table 2-5 PCI Address Assignments - DS10**

Physical Slot #	Logical Slot #	PCI ID_SEL	Description/Position
4	17	AD 28	64-bit slot (top slot)
3	16	AD 27	64-bit slot (second from top)
2	15	AD 26	64-bit slot (second from bottom)
1	14	AD 25	32-bit slot (bottom slot)

**Table 2-6 PCI Address Assignment - DS10L**

Physical Slot #	Logical Slot #	PCI ID_SEL	Description/Position
1	17	AD 28	64-bit slot

### 2.3.3 Show Memory

---

**The show memory command displays information about each memory bank: slot number, size in megabytes, and the starting address.**

---

**Syntax:**            **show memory**

#### Example 2-3 Show Memory Command

```
>>> show memory
```

Array #	Size	Base Addr
0	128 MB	000000000
1	128 MB	008000000
2	128 MB	010000000
3	128 MB	018000000

```
Total Bad Pages = 0  
Total Good Memory = 512 MBytes  
>>>
```

### 2.3.4 Show PAL

---

**The show pal command displays the versions of Tru64 UNIX and OpenVMS PALcode. PALcode is the Alpha Privileged Architecture Library code, written to support Alpha processors. It implements architecturally defined processor behavior.**

---

**Syntax:**            **show pal**

#### Example 2-4 Show PAL Command

```
>>> show pal  
pal OpenVMS PALcode V1.73-65, Tru64 UNIX PALcode V1.66-58  
>>>
```

## 2.3.5 Show Power

---

**The show power command displays status information about the power supply, the system, PCI and CPU fans, and temperature. This command is useful for displaying the error state of a Tru64 UNIX or OpenVMS system that shuts down because of a fan, temperature, or power supply failure.**

---

**Syntax:**        **show power**

Use this command to display information if the system can be restarted after a shut down. . (If it cannot, use the RMC **status** command. See Chapter 3.)

### Example 2-5 Show Power Command

```
>>> show power
                Status
Power Supply    good
System Fan      good
PCI Fan         good
CPU Fan         good
Temperature     good

Current ambient temperature is 34 degrees C
System shutdown temperature is set to 55 degrees C

2 Environmental events are logged in nvrnm
Do you want to view the events? (Y/<N>) y

Total Environmental Events: 2 (2 logged)

1 000 0 0:00 Temperature, Fans, Power Supplies Normal
2 000 0 0:00 Temperature, Fans, Power Supplies Normal

Do you want to clear all events from nvrnm? (Y/<N>) y

>>>
```

## 2.3.6 Show Version

---

**The show version command displays the version of the SRM console program that is installed on the system.**

---

**Syntax:**        **show version**

### Example 2-6 Show Version Command

```
>>> show version
version                V5.7-0 Jan 13 2000 14:24:16
>>>
```

## 2.4 Creating a Power-Up Script

---

A special nonvolatile file named “nvram” is stored in EEROM, and is always invoked during the power-up sequence. You can create an nvram script to include any commands you want the system to execute at power-up. You alter, create and edit the nvram script using the SRM edit command. With edit, lines can be added, overwritten, or deleted.

---

**Syntax:**        **edit** *file*

where *file* is the name of the file to be edited.

The editing commands are:

- 
- |                 |   |
|-----------------|---|
| <b>Help</b>     | Displays the brief help file.                                 |
| <b>List</b>     | Lists the current file prefixed with line numbers.            |
| <b>Renumber</b> | Renumbers the lines of the file in increments of 10.          |
| <b>Exit</b>     | Leaves the editor and closes the file, saving all changes.    |
| <b>Quit</b>     | Leaves the editor and closes the file without saving changes. |
| <b>Nn</b>       | Deletes line number nn.                                       |
| <b>Nn text</b>  | Adds or overwrites line number nn with text.                  |

---

**NOTE:** *It is possible to disable the system by editing the nvram script. For example, if you include the **initialize command** in the script, the system will go into an endless loop. To fix this, press the Halt button while the system is powering up. You can then edit the script to delete the offending command.*

---

Example 2-7 shows how to modify the user-created power-up script, “nvram.” The pound sign (#) indicates explanatory comments. In this example the script is edited to include a command that allows you to boot the Tru64 UNIX operating system over the network.

### Example 2-7 Editing the nvram Script

```
>>> edit nvram                #Modify user power-up script, nvram.
editing 'nvram'
0 bytes read in
*10 set ewa0_protocols bootp
*list                          #List current file with line numbers.
10 set ewa0_protocols bootp
*exit                          #Close file and save changes.
27 bytes written out to nvram
>>> nvram                    #Execute the script.
```

To clear the script, enter line numbers without any text. This deletes the lines. See Example 2-8.

### Example 2-8 Clearing the nvram Script

```
>>> edit nvram
editing 'nvram'
20 bytes read in
*10
*exit
0 bytes written out to nvram
>>>
```

## 2.5 Booting the Operating System

---

**The boot command is used to boot the operating system. The boot command initializes the processor, loads a program image from the specified boot device, and transfers control to that image.**

---

**Syntax:** boot (-file *filename*) (-flags (*value*)) (-halt) (-protocols *enet\_protocol*) (*boot\_dev*)

---

<b>-file</b> <i>filename</i>	The boot file.
<b>-flags</b> [ <i>value</i> ]	Specifies additional information to the loaded image or operating system. In Tru64 UNIX, specifies boot flags. In OpenVMS, specifies system root number and boot flags. This qualifier overrides the setting of the <b>boot_osflags</b> environment variable. See the <b>boot_osflags</b> environment variable for a list of settings and their meanings.
<b>-halt</b>	Forces the bootstrap operation to halt and invoke the console program once the bootstrap image is loaded and page tables and other data structures are set up. Console device drivers are not shut down. Transfer control to the image by entering the <b>continue</b> command.
<b>-protocols</b> <i>enet_protocol</i>	Either <b>mop</b> (default) or <b>bootp</b> . This qualifier overrides the setting of the <b>ew*0_protocols</b> environment variable.
<i>boot_dev</i>	A device path or list of devices from which the console program attempts to boot, or a saved boot specification in the form of an environment variable. This qualifier overrides the setting of the <b>bootdef_dev</b> environment variable. Use the <b>bootdef_dev</b> environment variable to define the default boot device string.

## Example 2-9 Boot Command

```
>>> b dkc0
/boot dkc0.0.0.16.0 -flags 0)
block 0 of dkc0.0.0.16.0 is a valid boot block
reading 898 blocks from dkc0.0.0.16.0
bootstrap code read in
base = 200000, image_start = 0, image_bytes = 70400
initializing HWRPB at 2000
initializing page table at ffb6000
initializing machine state
setting affinity to the primary CPU
jumping to bootstrap code

    OpenVMS (TM) Alpha Operating System, Version V7.1-2

%SYSINIT-I- waiting to form or join an OpenVMS Cluster
%VMScluster-I-LOADSECDB, loading the cluster security database
%EWA0, Fast(100baseTX) mode set by console
%EWB0, Fast(100baseTX) mode set by console
. . .
%CNXMAN, Completing VMScluster state transition
$! Copyright (c) 1998 Digital Equipment Corporation. All rights reserved.
%STDRV-I-STARTUP, OpenVMS startup begun at 23-APR-1999 11:31:48.97
%MSCPLOAD-I-CONFIGSCAN, enabled automatic disk serving
. . .
The OpenVMS system is now executing the site-specific startup commands.
. . .
Welcome to OpenVMS (TM) Alpha Operating System, Version V7.1-2

Username:
```

## 2.6 Configuring a PCI NVRAM Module

---

The `prcache` command is used for system configuration to check PCI NVRAM configuration information and battery status, to clear data from the NVRAM module, and to set the date of the next battery replacement. The command is used only with Tru64 UNIX systems.

---

**Syntax:**        `prcache -{f,z,b}`

---

- f** Checks configuration information and battery status.
- z** Clears valid data; writes zeros to memory.
- b** Sets the date (month and year) for battery replacement.

### Example 2-10 Prcache Command

```
>>> prcache -f
PCI NVRAM Disk Cache: passed
Size: 2MB
PCI Memory Address: 40000000
System ID: 12000000
State: - not valid
Battery Status: good (Charging)
Battery Disconnect Circuit Status: enabled

>>> prcache -z
This command will zero the PCI NVRAM Disk Cache
Do you really want to continue [Y/N] ? : y
clearing disk cache
>>>
```

## 2.7 Testing the System

---

**The test command runs console-based exercisers for devices in the system. Ctrl/C can abort testing.**

---

**Syntax:**        **test** *(-t time) (-q) (option)*

- t time** Specifies the run time in seconds. The default for system test is 120 seconds (2 minutes).
- q** Disables the display of status messages as exerciser processes are started and stopped during testing. Sets the environment variable **d\_verbose** to zero.

### Example 2-11 Test Command

```
>>> test
environment variable t_cnt created
System test, runtime 150 seconds

Type ^C if you wish to abort testing once it has started

Default zone extended at the expense of memzone.
Use INIT before booting

Testing Ethernet device(s)

Testing VGA

Testing Memory

Testing IDE/ATAPI disks (read-only)

Testing SCSI disks (read-only)
Testing DKA* devices (read-only)..
No other SCSI disks to test

Testing floppy drive (dva0, read-only)
No diskette present, skipping floppy test
```

ID	Program	Device	Pass	Hard/Soft	Bytes Written	Bytes Read
00001ae5	memtest	memory	4	0 0	310378496	310378496
00001aea	memtest	memory	4	0 0	306184192	306184192
00001b07	memtest	memory	3	0 0	310378496	310378496
00001b54	exer_kid	dqa0.0.0.13.	0	0 0	0	215040
00001b74	exer_kid	dka0.0.0.14.	0	0 0	0	8732672
00001b7b	exer_kid	dka100.1.0.1	0	0 0	0	8732672
ID	Program	Device	Pass	Hard/Soft	Bytes Written	Bytes Read
00001ae5	memtest	memory	6	0 0	549453824	549453824
00001aea	memtest	memory	6	0 0	545259520	545259520
00001b07	memtest	memory	6	0 0	545259520	545259520
00001b54	exer_kid	dqa0.0.0.13.	0	0 0	0	421888
00001b74	exer_kid	dka0.0.0.14.	0	0 0	0	14434304
00001b7b	exer_kid	dka100.1.0.1	0	0 0	0	14434304
ID	Program	Device	Pass	Hard/Soft	Bytes Written	Bytes Read
00001ae5	memtest	memory	8	0 0	780140544	780140544
00001aea	memtest	memory	8	0 0	780140544	780140544
00001b07	memtest	memory	8	0 0	780140544	780140544
00001b54	exer_kid	dqa0.0.0.13.	0	0 0	0	631808
00001b74	exer_kid	dka0.0.0.14.	0	0 0	0	20168704
00001b7b	exer_kid	dka100.1.0.1	0	0 0	0	20168704
ID	Program	Device	Pass	Hard/Soft	Bytes Written	Bytes Read
00001ae5	memtest	memory	11	0 0	1019215872	1019215872
00001aea	memtest	memory	10	0 0	1019215872	1019215872
00001b07	memtest	memory	10	0 0	1019215872	1019215872
00001b54	exer_kid	dqa0.0.0.13.	0	0 0	0	835584
00001b74	exer_kid	dka0.0.0.14.	0	0 0	0	27066368
00001b7b	exer_kid	dka100.1.0.1	0	0 0	0	27066368
ID	Program	Device	Pass	Hard/Soft	Bytes Written	Bytes Read
00001ae5	memtest	memory	13	0 0	1254096896	1254096896
00001aea	memtest	memory	13	0 0	1249902592	1249902592
00001b07	memtest	memory	12	0 0	1254096896	1254096896
00001b54	exer_kid	dqa0.0.0.13.	0	0 0	0	1043456
00001b74	exer_kid	dka0.0.0.14.	0	0 0	0	32800768
00001b7b	exer_kid	dka100.1.0.1	0	0 0	0	32784384
ID	Program	Device	Pass	Hard/Soft	Bytes Written	Bytes Read
00001ae5	memtest	memory	15	0 0	1488977920	1488977920
00001aea	memtest	memory	15	0 0	1484783616	1484783616
00001b07	memtest	memory	14	0 0	1488977920	1488977920
00001b54	exer_kid	dqa0.0.0.13.	0	0 0	0	1241088
00001b74	exer_kid	dka0.0.0.14.	0	0 0	0	39665664
00001b7b	exer_kid	dka100.1.0.1	0	0 0	0	39649280

ID	Program	Device	Pass	Hard/Soft	Bytes Written	Bytes Read
00001ae5	memtest	memory	17	0 0	1723858944	1723858944
00001aea	memtest	memory	17	0 0	1723858944	1723858944
00001b07	memtest	memory	16	0 0	1723858944	1723858944
00001b54	exer_kid	dqa0.0.0.13.	0	0 0	0	1445888
00001b74	exer_kid	dka0.0.0.14.	0	0 0	0	45350912
00001b7b	exer_kid	dka100.1.0.1	0	0 0	0	45350912

Test time has expired...

System test complete

>>>

Type `cat e1` to show the log if you wish.

## 2.8 Set Commands

### 2.8.1 Set Password

---

**The set password command sets the console password for the first time or changes an existing password. It is necessary to set the password only if the system is going to operate in secure mode.**

---

**Syntax:**            **set password**

The password length must be between 15 and 30 alphanumeric characters.

If a password has not been set and the **set password** command is issued, the console prompts for a password and verification.

If a password has been set and the **set password** command is issued, the console prompts for the new password and verification, then prompts for the old password. The password is unchanged if the validation password entered does not match the existing password in the NVRAM.

#### Example 2-12 Set Password Command

```
>>> set password
Please enter the password:      # Password is not echoed.
Please enter the password again: # Validation is not echoed.
>>>

>>> set password              # Changing a password.
Please enter the password:
Please enter the password again:
Now enter the old password:
>>>

>>> set password              # Password entered is
Please enter the password:      # too short.
Password length must be between 15 and 30 characters
>>>
```

## 2.8.2 Set Secure

---

The `set secure` command enables secure mode without requiring a restart of the console. If the password has been set, the console will be secured and only a small subset of commands can be performed. If a password has not been set, you are prompted to do so.

---

**Syntax:**        `set secure`

### Example 2-13 Set Secure Command

```
>>> set secure                                # In this example a password
                                             # has been set.
Console is secure. Please login.
>>> b dkb0
Console is secure - parameters are not allowed.
>>> login
Please enter the password:                    # Password is not echoed.
>>> b dkb0
(boot dkb0.0.0.3.1)
.
.
>>> set secure                                # Password has not been set.
Secure not set. Please set the password.
>>>
```

## 2.9 Secure Mode

---

**When the console is in secure mode, the only commands recognized are boot, login, continue, and start. Placing the console in secure mode ensures that unauthorized persons cannot gain access to the system. The commands for console security are set password, clear password, and set secure. The login command turns off security features during the current console session.**

---

The **boot** command does not accept command line parameters in secure mode. The console boots using the environment variables stored in NVRAM (**boot\_file**, **bootdef\_dev**, **boot\_flags**). After a successful boot, the console is secured if there is a valid password.

The **start** and **continue** commands are valid on a secure console. After either command is executed, the console is secured if there is a valid password. This prevents an intruder from accessing the system.

### 2.9.1 Login Command and Secure Mode

---

**The login command turns off the security features, enabling access to all SRM console commands during the current session. The system automatically returns to secure mode as soon as the boot, continue, or start command is entered or when the system is initialized.**

---

When the **login** command is entered, the user is prompted for the current system password. If a password has not been set, a message is displayed indicating that there is no password in NVRAM. If a password has been set, this prompt is displayed:

Please enter the password:

If the password entered matches the password in NVRAM when the prompt is redisplayed, the console is no longer in secure mode and all console commands can be performed.

---

**NOTE:** *If you enter the **login** command when a halt assertion exists, the command fails, even if you enter the correct password. See Section 1.10 for information on halt assertion.*

---

## Example 2-14 Secure Mode and Login Command

```
>>> login                                # System is not in secure mode.
>>>
Secure not set. Please set the password.
```

```
>>> login                                # System is in secure mode.
Please enter the password:                # Password is not echoed.
>>>
```

```
>>> login                                # System is in secure mode.
Please enter the password:                # Incorrect password is
                                           # entered.
Invalid password
>>>
```

## 2.9.2 Clear Password

---

**The clear password command clears the password environment variable, setting it to zero. This command is used when you want access to all the SRM console commands, but the system is in secure mode. In order to use clear password, you must know the current password.**

---

## Example 2-15 Clear Password Command

```
>>> clear password
Please enter the password:                # Password is not echoed.
Password successfully cleared.
>>>
```

```
>>> clear password
Please enter the password:                # Invalid password entered.
Console is secure
>>>
```

### 2.9.3 Resetting the Password

If you have forgotten the current password, clear the password as follows:

#### From the Local Console Terminal

1. Enter the **login** command: `>>> login`
2. At the Enter Password: prompt, press the Halt button, then press the Return key.  
The password is now cleared and the console cannot be put into secure mode unless a new password is set.

#### From the RMC

1. Enter the **login** command: `>>> login`
2. At the Enter Password: prompt, enter the RMC escape sequence.
3. At the RMC>>> prompt, enter the **halt** command and then the **quit** command:

```
RMC>>> halt  
RMC>>> quit
```

4. At the SRM console, clear the password:  
`>>> clear password`

## 2.10 Stopping and Starting CPU

---

**The halt (or stop) command stops program execution on a CPU that is still running a booted program.**

---

**Syntax:**        **halt (or stop) 0**

where 0 is the number of the CPU to halt.

For the DS10 system, this command has no effect because the single CPU is halted when the system is at the console prompt.

## 2.11 Updating Firmware

---

**The lfu command is used to update firmware from the SRM console prompt. The lfu command starts the Loadable Firmware Update (LFU) Utility.**

---

The syntax is: **lfu**

### Example 2-16 lfu Command

```
>>> lfu
```

```
Checking dqa0.0.0.13.0 for the option firmware files. . .
Checking dva0 for the option firmware files. . .
```

```
Option firmware files were not found on CD or floppy.
If you want to load the options firmware,
please enter the device on which the files are located(ewa0),
or just hit <return> to proceed with a standard console update: dva0
```

```
Please enter the name of the options firmware files list, or
Hit <return> to use the default filename (ds10fw.txt) :
```

```
Copying ds10fw.txt from dva0. . .
Copying PC264NT.ROM from dva0. . .
Copying DS10SRM.ROM from dva0. . .
```

\*\*\*\*\* Loadable Firmware Update Utility \*\*\*\*\*

---

Function	Description
Display	Displays the system's configuration table.
Exit	Done exit LFU (reset).
List	Lists the device, revision, firmware name, and update revision.
Readme	Lists important release information.
Update	Replaces current firmware with loadable data image.
Verify	Compares loadable and hardware images.
? or Help	Scrolls this function table.

---

UPD> update \*

Confirm update on:

nt  
srm  
[Y/(N)]y

WARNING: updates may take several minutes to complete for each device.

DO NOT ABORT!

nt                    Updating to 5.70...    Verifying 5.70...    PASSED.

srm                   Updating to 5.7-0...    Verifying 5.7-0...    PASSED.

UPD> exit

---

**NOTE:** *If the system has been shut down from a booted program (most commonly, the operating system) or in some other way halted back to the SRM console, the system must be reset before running LFU.*

---

See Chapter 1 for more information about LFU.

## 2.12 Forcing a System Crash Dump

---

**The crash command forces a crash dump at the operating system level. This command is used when an error has caused the system to hang and can be halted with the Halt button or the RMC halt command. This command restarts the operating system and forces a crash dump to the selected device.**

---

**Syntax:**        **crash** [*device*]

where *device* is the name of the device to which the crash dump is written.

### Example 2-17 Crash Command

```
>>> crash

CPU 0 restarting

DUMP: 401408 blocks available for dumping.
DUMP: 38535 required for a partial dump.
DUMP: 0x805001 is the primary swap with 401407, start our last 38534
      : of dump at 362873, going to end (real end is one more, for
header)
DUMP.prom: dev SCSI 1 3 0 4 400 0 0, block 131072
DUMP: Header to 0x805001 at 401407 (0x61fff)
DUMP.prom: dev SCSI 1 3 0 4 400 0 0, block 131072
DUMP: Dump to 0x805001: .....: End 0x805001
DUMP.prom: dev SCSI 1 3 0 4 400 0 0, block 131072
DUMP: Header to 0x805001 at 401407 (0x61fff)
succeeded

halted CPU 0

halt code = 5
HALT instruction executed
PC = fffffc00004e2d64
>>>
```

## 2.13 Using Environment Variables

---

**Environment variables pass configuration information between the console and the operating system. Their settings determine how the system powers up, boots the operating system, and operates. You issue an `init` command to activate a new environment variable.**

---

Environment variables are set or changed with the **`set envar`** command (where *envar* is a placeholder for the environment to be changed) and set to default values with the **`set -default envar`** command. Their values are viewed with the **`show envar`** command. User-defined nonvolatile environment variables are created with the **`edit`** command described in Section 2.4. Section 2-18 describes the predefined SRM console environment variables in detail.

### 2.13.1 `set envar`

---

**The `set` command sets or modifies the value of an environment variable. It can also be used to create a new environment variable if the name used is unique. Environment variables are used to pass configuration information between the console and the operating system. The setting of these variables determines how the system powers up, boots the operating system, and operates.**

---

**Syntax:**        **`set (-default) envar value`**

- 
- |                                  |  |
|----------------------------------|--|
| <b><code>-default</code></b>     | Restores an environment variable to its default setting.   |
| <b><code><i>envar</i></code></b> | The name of the environment variable to be displayed. The wildcard <code>*</code> displays all environment variables, which are:<br><b><code>console</code>, <code>kbd_hardware_type</code>, <code>language</code>, <code>ocp_text</code></b><br>and <b><code>os_type</code></b> |
| <b><code><i>value</i></code></b> | The new value of the environment variable.   |

Whenever you modify the value of any environment variables, the new value takes effect only after you reset the system by pressing the Halt/Reset button or issuing the **`initialize`** command.

### 2.13.2 show *envar*

---

The `show envar` command displays the current value (or setting) of an environment variable.

---

**Syntax:**        `show envar`

---

*envar*    The name of the environment variable to be displayed. The wildcard \* displays all environment variables, which are: **console**, **kbd\_hardware\_type**, **language**, **ocp\_text** and **os\_type**.

#### Example 2-18 Setting and Showing Environment Variables

```
>>> show console
console                graphics
>>> set console serial
>>> show console
console                serial
>>> init                # The system must be init'ed for
                       the new parameters to take effect
```

#### Example 2-19 Creating a User-Defined Environment Variable

```
>>> edit nvram

editing 'nvram'
0 bytes read in
*10 set mopv3_boot 1
*exit
17 bytes written out to nvram

>>>
```

In Example 2-19 the nvram script is edited so that an environment variable called “mop3\_boot” is created and set to 1 on each power-up. By default, MOP boot sends four MOP V4 requests before defaulting to MOP V3. This user-created environment variable forces the SRM console to bypass MOP V4 requests. This speeds up MOP booting on networks with MOP V3 software.

## 2.14 Depositing and Examining Data

---

The **deposit** command stores data in a specified location. The **examine** command displays the contents of a memory location, a register, or a device.

---

**Syntax:** **deposit** (-{b,w,l,q,o,h}) (-{n value, s value}) (space:) address data  
**examine** (-{b,w,l,q,o,h}) (-{n value, s value}) (space:) address

---

<b>-b</b>	Defines data size as byte.
<b>-w</b>	Defines data size as word.
<b>-l</b> (default)	Defines data size as longword.
<b>-q</b>	Defines data size as quadword.
<b>-o</b>	Defines data size as octaword.
<b>-h</b>	Defines data size as hexword.
<b>-d</b>	Instruction decode ( <b>examine</b> command only)
<b>-n value</b>	The number of consecutive locations to modify.
<b>-s value</b>	The address increment size. The default is the data size.
<b>space:</b>	Device name (or address space) of the device to access.
<b>address</b>	Offset within a device to which data is deposited. Can be:
<i>dev_name</i>	A device name.
<b>fpr- name</b>	The floating-point register set; <i>name</i> is F0 to F31.
<b>gpr- name</b>	The general register set; <i>name</i> is R0 to R31.
<b>iپر- name</b>	The internal processor registers.
<b>pt- name</b>	The PALtemp register set; <i>name</i> is PT0 to PT23.
<b>pmem</b>	Physical memory (default).
<b>vmem</b>	Virtual memory.

*data*            Data to be deposited.

Symbolic forms can be used for the address. They are:

- pc**    The program counter. The address space is set to GPR.
- +**    The location immediately following the last location referenced in a **deposit** or **examine** command. For physical and virtual memory, the referenced location is the last location plus the size of the reference (1 for byte, 2 for word, 4 for longword). For other address spaces, the address is the last referenced address plus 1.
- The location immediately preceding the last location referenced in a **deposit** or **examine** command. Memory and other address spaces are handled as above.
- \***    The last location referenced in a **deposit** or **examine** command.
- @**    The location addressed by the last location referenced in a **deposit** or **examine** command.

The **deposit** command stores data in the location specified. If no options are given with a **deposit** command, the system uses the options from the preceding **deposit** command.

If the specified value is too large to fit in the data size listed, the console ignores the command and issues an error response. If the data is smaller than the data size, the higher order bits are filled with zeros. The syntax is shown below.

The **examine** command displays the contents of a memory location, a register, or a device.

If no options are given with an **examine** command, the system uses the options from the preceding **examine** command. If conflicting address space or data sizes are specified, the console ignores the command and issues an error.

For data lengths longer than a longword, each longword of data should be separated by a space.

### Example 2-20 Deposit Command

```
>>> dep -b -n 1ff pmem:0 0            # Clear 1st 512 bytes of physical mem.
```

```

>>> d -l -n 3 vmem:1234 5           # Deposit 5 into four longwords starting
                                     # at virtual memory address 1234.

>>> d -n 8 r0 ffffffff             # Load GPRs R0 through R8 with -1.

>>> d -l -n 10 -s 200 pmem:0 8     # Deposit 8 in the 1st longword of the
                                     # first 17 pages in physical memory

>>> d -l pmem:0 0                   # Deposit 0 to physical mem address 0.

>>> d + ff                           # Deposit FF to physical mem address 4.

>>> d scbb 820000                   # Deposit 820000 to SCBB.

```

## Example 2-21 Examine Command

```

>>> examine pc                       # Examine the program counter.
PC psr: 0 ( PC) 0000000000001170

>>> examine sp                       # Examine the stack pointer.
gpr: F0 ( R30) 000000000072A60

>>> e -n 6 r4                         # Examine register R4 & the next 6 registers.
grp: 20 ( R4) 000000000005000
grp: 28 ( R5) 00000000FFFE000
grp: 30 ( R6) 00000003F8000C00
grp: 38 ( R7) 0000000053F761AE
grp: 40 ( R8) 0000010000000000
grp: 48 ( R9) 00000003F7800100
grp: 50 ( R10) 0000000000C7FFC

>>> examine pmem:400EC              # Examine physical memory.
pmem: 400EC A49D0078A47D0070

```

## 2.15 Reading a File

---

**The `more` command displays a file one screen at a time.**

---

**Syntax:**        `more (file...)`

where *file* is the name of the file to be displayed.

The **more** command is similar to that used in the MS-DOS and UNIX operating systems. It is useful for displaying output that scrolls too quickly to be viewed. For example, when you power up the system, the system startup messages scroll, and the messages are logged to an event log

When the >>> prompt displays, you can use the **more** command to display the contents of the event log file.

### Example 2-22 More Command

```
>>> more el                    # Display SRM console's event log one screen at a time.
. . .
--More-- (SPACE - next page, ENTER - next line, Q - quit)

>>> help * | more            # Display online help one screen at a time.
. . .
--More-- (SPACE - next page, ENTER - next line, Q - quit)
```

## 2.16 Initializing the System

---

**The initialize command resets the system and executes power-up tests.**

---

**Syntax:**            **initialize**

After self-tests are executed, the system autoboots unless:

- A halt assertion condition exists (see Section 1.10) –or–
- The **auto\_action** environment variable is set to **halt** (see Section 2.18.1).

If the **auto\_action** environment variable is set to **boot** or **restart** and no halt assertion condition exists, the system autoboots. In all other cases, the system stops in console mode and does not attempt to boot.

### Example 2-23 Initialize Command

```
>>> init
Initializing...
256 Meg of system memory
probing hose 0, PCI
probing PCI-to-ISA bridge, bus 1
probing PCI-to-PCI bridge, bus 2
bus 0, slot 9 -- ewa -- DE500-BA Network Controller
bus 0, slot 11 -- ewb -- DE500-BA Network Controller
bus 0, slot 13 -- dqa -- Acer Labs M1543C IDE
bus 0, slot 13 -- dqb -- Acer Labs M1543C IDE
bus 0, slot 14 -- vga -- DEC PowerStorm
bus 2, slot 0 -- pka -- NCR 53C875
bus 2, slot 1 -- pkb -- NCR 53C875
bus 2, slot 2 -- ewc -- DE500-AA Network Controller
bus 0, slot 16 -- pkc -- QLogic ISP1020
bus 0, slot 17 -- dra -- Mylex DAC960
Testing the System
Testing the Disks (read only)
Testing the Network
System Temperature is 34 degrees C
CPU 0            Alpha 21264-4 466 MHz    SROM Revision: V1.8.208
TIG             Rev 2.1
Arbiter         Rev 3.30 (0x7E)

Array #            Size            Base Addr
-----            -
0                512 MB           000000000
1                512 MB           020000000
2                128 MB           050000000
3                256 MB           040000000
Total Bad Pages = 0
Total Good Memory = 1408 MBytes
AlphaServer DS10 466 MHz Console V5.7-2 Jan 13 2000 14:24:16
>>>
```

## 2.17 Finding Help

---

**The help command displays basic information about the use of console commands when the system is in console mode.**

---

**Syntax:**        **help** (*command...*)

---

**Command...**    Command or topic for which help is requested. The options are:

- |  |  |
|--|--|
| <b>None</b>                              | Displays the complete list of commands for which you can receive help. |
| <b>Command_name</b>                      | Displays information about the console command.                        |
| <b>Argument_string</b><br>(such as "sh") | Displays information about all commands that begin with that string.   |

### Example 2-24 Help Command

```
>>> help set
NAME
    set
FUNCTION
    Set an option or modify the value of an environment
    variable.
SYNOPSIS
    set <option> <value> or <envar> [-] <value>
      where
      <option>={host,mode}
      where
      <envar>={auto_action,bootdef_dev,boot_osflags,...}
      [-default]
```

## 2.18 Environment Variable Summary

---

**Environment variables pass configuration information between the console and the operating system. Their settings determine how the system powers up, boots the operating system, and operates. Environment variables are set or changed with the `set envar` command and returned to their default values with the `clear envar` command. Their values are viewed with the `show envar` command.**

---

Table 2-7 lists the environment variables. Detailed descriptions follow. The environment variables are specific to the SRM console.

**Table 2-7 Environment Variable Summary**

Environment Variable	Function
<code>auto_action</code>	Specifies the console's action at power-up, a failure, or a reset.
<code>bootdef_dev</code>	Specifies the default boot device string.
<code>boot_osflags</code>	Specifies the default operating system boot flags.
<code>com*_baud</code>	Changes the default baud rate of the COM1 or COM2 serial port.
<code>console</code>	Specifies the device on which power-up output is displayed (serial terminal or graphics monitor).
<code>cpu_enabled</code>	Enables or disables a specific secondary CPU.
<code>ew*0_mode</code>	Specifies the connection type of the default Ethernet controller.
<code>ew*0_protocols</code>	Specifies network protocols for booting over the Ethernet controller.
<code>kbd_hardware_type</code>	Specifies the default console keyboard type.
<code>language</code>	Specifies the console keyboard layout.

**Table 2-7 Environment Variable Summary (Continued)**

<b>Environment Variable</b>	<b>Function</b>
<b>ocp_text</b>	Overrides the default OCP display text with specified text.
<b>os_type</b>	Specifies the operating system. Valid entries are: openvms, and unix.
<b>password</b>	A password stored in the NVRAM used to secure the console.
<b>pci_parity</b>	Disables or enables parity checking on the PCI bus.
<b>pk*0_fast</b>	Enables fast SCSI mode.
<b>pk*0_host_id</b>	Specifies the default value for a controller host bus node ID.
<b>pk*0_soft_term</b>	Enables or disables SCSI terminators on systems that use the QLogic ISP1040 SCSI controller.
<b>tt_allow_login</b>	Enables or disables login to the SRM console firmware on other console ports.

### 2.18.1 auto\_action

---

**Specifies the action the console takes any time the system powers up, fails, or resets. When the setting involves autoboot, the system boots from the default boot device specified by the value of the `bootdef_dev` environment variable.**

---

**Syntax:**        **set auto\_action** *value*

where *value* can be:

- 
- |                |   |
|----------------|---|
| <b>halt</b>    | The system remains in console mode after power-up or a system crash.                  |
| <b>boot</b>    | The system boots automatically when it is turned on and halts after a system failure. |
| <b>restart</b> | The system boots automatically when it is turned on or after it fails.                |
- 

**NOTE:** *If a halt assertion exists, the console ignores the `auto_action` setting and halts at the SRM console. See Section 1.10 for information on halt assertion.*

---

### 2.18.2 bootdef\_dev

---

**The `bootdef_dev` environment variable specifies one or more devices for booting the operating system. When more than one device is listed, the system searches in the order listed and boots from the first device with operating system software.**

---

**Syntax:**        **set bootdef\_dev** *boot\_device*

Where *boot\_device* is the name of the device on which the system software has been loaded. To specify more than one device, separate the names with commas. Enter the command **show bootdef\_dev** to display the current default boot device. Enter the command **show device** for a list of all devices in the system.

### 2.18.3 boot\_osflags

---

**The boot\_osflags environment variable passes information to the boot command. That information is dependent on the operating system to be booted.**

---

**Syntax for Tru64 UNIX:**            **set boot\_osflags** *flags\_value*

where *flags\_value* can be:

- 
- a** Load operating system software from the specified boot device (autoboot). Boot to multi-user mode.
  - i** Prompt for the name of a file to load and other options (boot interactively). Boot to single-user mode.
  - s** Stop in single-user mode. Boots /vmunix to single-user mode and stops at the # (root) prompt.
  - D** Full dump; implies “s” as well. By default, if Tru64 UNIX crashes, it completes a partial memory dump. Specifying “**D**” forces a full dump if the system crashes.

**Syntax for OpenVMS:** **set boot\_osflags** *root\_number, boot\_flags*

Where *root\_number* is the *directory* number of the system disk on which OpenVMS files are located. For example:

<i>root_number</i>	Root Directory
<b>0</b> (default)	[SYS0.SYSEXE]
<b>1</b>	[SYS1.SYSEXE]
<b>2</b>	[SYS2.SYSEXE]
<b>3</b>	[SYS3.SYSEXE]

And *boot\_flags* are the hexadecimal value of the bit number or numbers set. To specify multiple boot flags, add the flag values (logical OR). See Table 2-8.

**Table 2-8 Settings for boot\_osflags Bootflags (OpenVMS)**

Flags_Value	Bit Number	Meaning
1	0	Bootstrap conversationally (enables you to modify SYSGEN parameters in SYSBOOT).
2	1	Map XDELTA to running system.
4	2	Stop at initial system breakpoint.
8	3	Perform diagnostic bootstrap.
10	4	Stop at the bootstrap breakpoints.
20	5	Omit header from secondary bootstrap image.
80	7	Prompt for the name of the secondary bootstrap file.
100	8	Halt before secondary bootstrap.
10000	16	Display debug messages during booting.
20000	17	Display user messages during booting.

## 2.18.4 com1\_baud

---

**The default baud rate for the system is 9600. With the `com1_baud` environment variable, you can set the baud rate to match that of the device connected to the port.**

---

**Syntax:**        `set com1_baud baud_value`

where *baud\_value* is the new baud rate. A list of possible values is displayed by attempting to set this environment variable to an unacceptable value (for example, `set com2_baud xxx`).

---

**NOTE:** *Disable the RMC to select a baud rate other than 9600. See Chapter 3.*

---

You will be asked to confirm the change, as shown in Example 2–25.

### Example 2–25 Changing Baud Rate

```
>>> set com1_baud 19200
Embedded Remote Console only supports 9600 baud. Continue? (Y/[N]) n
bad value - com1_baud not modified
>>>
```

## 2.18.5 com1\_mode

---

**The `set com1_mode` command sets the bypass modes of the remote management console (see Chapter 3)**

---

For modem connections, you can set the **`com1_mode`** variable to allow data to partially or completely bypass the RMC. The bypass modes are snoop mode, soft bypass mode, and firm bypass mode.

- In snoop mode, you can type an escape sequence to enter RMC mode. RMC mode provides a command-line interface for issuing commands to monitor and control the system.
- In soft bypass mode, you cannot enter RMC mode. But if an alert condition or loss of carrier occurs, the RMC switches into snoop mode. From snoop mode you can enter RMC mode.

- In firm bypass mode, you cannot enter RMC mode. To enter RMC mode from firm bypass mode, reset the **com1\_mode** variable from the SRM console.

**Syntax:**        **set com1\_mode** *value*

where *value* can be:

---

<b>snoop</b>	Data partially bypasses RMC, but RMC taps into the data lines and listens passively for the RMC escape sequence.
<b>soft_bypass</b>	Data bypasses RMC, but RMC switches automatically into snoop mode if an alert condition or loss of carrier occurs.
<b>firm_bypass</b>	Data bypasses RMC. RMC is effectively disabled.

**Example:**

```
>>> set com1_mode
COM1_MODE (SNOOP, SOFT_BYPASS, FIRM_BYPASS)
```

## 2.18.6 console

---

**The console terminal can be either a graphics monitor or a serial terminal. The console environment variable specifies which is used. Whenever you change the value of console, you must reset the system by pressing the Halt/Reset button or issuing the initialize command.**

---

**Syntax:**        **set console** *output\_device*

where *output\_device* can be:

---

<b>graphics</b> (default)	The console terminal is a graphics monitor or a device connected to the VGA or TGA module.
<b>serial</b>	The console terminal is the device connected to the COM1 port.

### 2.18.7 ew\*0\_mode

---

**Sets an Ethernet controller to run an AUI, ThinWire, or twisted-pair Ethernet network. The default is auto-sense. For the fast setting, the device defaults to fast.**

---

**Syntax:**        **set ew\*0\_mode** *value*

where *value* can be:

---

<b>au</b>	Device type is AUI.
<b>auto-sense</b>	Device type is sensed by the console.
<b>twisted-pair</b>	Device type is 10BaseT (twisted pair).
<b>fast duplex, twisted-pair</b>	Device type is duplex 10BaseT.
<b>fast</b>	Device type is fast SCSI.
<b>fast FD</b>	Device type is fast full duplex SCSI.
<b>BNC</b>	Device type is BNC.
<b>auto-negotiate</b>	DE500-BA

### 2.18.8 ew\*0\_protocols

---

**Enables network protocols for booting and other functions.**

---

**Syntax:**        **set ew\*0\_protocols** *protocol\_value*

where *protocol\_value* can be:

---

<b>mop</b> (default)	Sets the network protocol to mop (Maintenance Operations Protocol), the setting typically used with the OpenVMS operating system.
<b>bootp</b>	Sets the network protocol to bootp, the setting typically used with the Tru64 UNIX operating system.
<b>bootp,mop</b>	When both are listed, the system attempts to use the mop protocol first, regardless of which is listed first. If not successful, it then attempts the bootp protocol.

## 2.18.9 kbd\_hardware\_type

---

**Used only on systems with the language variant 3C (Français), this environment variable sets the keyboard hardware type as either PCXAL or LK411 and enables the system to interpret the terminal keyboard layout correctly.**

---

**Syntax:**        **set kbd\_hardware\_type** *keyboard\_type*

where *keyboard\_type* can be:

---

<b>pcxal</b> (default)	Selects the default keyboard hardware type.
<b>lk411</b>	Selects the LK411 keyboard layout for use with language variant 3C (Français).

Whenever you change the value of **kbd\_hardware\_type**, you must reset the system by pressing the Halt/Reset button or issuing the **initialize** command.

## 2.18.10 language

---

**Specifies the keyboard layout, which is language dependent. The setting of the language environment variable must match the language of the keyboard variant. Whenever you change the value of language, you must reset the system by pressing the Halt/Reset button or issuing the initialize command.**

---

**Syntax:**        **set language** *language\_code*

where *language\_code* can be:

---

<b>0</b>	No language (cryptic)	<b>40</b>	Français (Suisse Romande)
<b>30</b>	Dansk (Danish)	<b>42</b>	Italiano (Italian)
<b>32</b>	Deutsch (German)	<b>44</b>	Nederlands (Netherlands)
<b>34</b>	Deutsch (Schweiz) (Swiss)	<b>46</b>	Norsk (Norwegian)
<b>36</b>	English (American)	<b>48</b>	Portuguese (Portuguese)
<b>38</b>	English (British/Irish)	<b>4A</b>	Suomi (Finnish)
<b>3A</b>	Español (Spanish)	<b>4C</b>	Svenska (Swedish)
<b>3C</b>	Français (French)	<b>4E</b>	Belgisch-Nederlands (Dutch)
<b>3E</b>	Français (Canadian)		

### 2.18.11 os\_type

---

The `os_type` environment variable specifies the default operating system. This variable is set at the factory to the setting for the operating system purchased. Use this command to change the factory default setting. Whenever you change the value of `os_type`, you must reset the system by pressing the Halt/Reset button or issuing the initialize command.

---

**Syntax:**        `set os_type os_type`

where `os_type` can be:

- 
- |                |   |
|----------------|---|
| <b>unix</b>    | Tru64 UNIX is the default operating system, and the SRM firmware is started during power-up or reset. |
| <b>openvms</b> | OpenVMS is the default operating system, and the SRM firmware is started during power-up or reset.    |

### 2.18.12 password

---

**Sets or clears the console password stored in NVRAM.**

---

**Syntax:**        `set password`

where the password is not an argument to the `set password` command; the console prompts the user for the string, which must be between 15 and 30 characters.

### 2.18.13 pci\_parity

---

**Disables or enables parity checking on the PCI bus.**

---

**Syntax:**        **set pci\_parity** *value*

where *value* can be:

---

(default) **on**    Enables PCI parity checking.

**off**    Disables PCI parity checking.

Some PCI devices do not implement PCI parity checking, and some have a parity-generating scheme in which the parity is sometimes incorrect or is not fully compliant with the PCI specification. A side effect of this is that superfluous PCI parity errors are reported by the host PCI bridge. In such cases, the device can be used as long as parity is not checked; disabling PCI parity checking prevents false parity errors that can cause system problems.

### 2.18.14 pk\*0\_fast

---

**Enables fast SCSI to perform in either standard or fast mode.**

---

**Syntax:**        **set pk\*0\_fast** *scsi\_speed*

where *scsi\_speed* can be:

---

(default) **1**    The controller is in fast SCSI mode.

**0**    The controller is in standard SCSI mode.

If the system has at least one fast SCSI device, set the default controller speed to fast SCSI (1). Devices on a controller that connects to both standard and fast SCSI devices will perform at the appropriate rate for the device. If the system has no fast SCSI devices, set the default controller speed to standard SCSI (0). If a fast SCSI device is on a controller set to standard, it will perform in standard mode.

### 2.18.15 pk\*0\_host\_id

---

**Sets the controller host bus node ID to a value between 0 and 7.**

---

**Syntax:**        **set pk\*\_host\_id** *scsi\_node\_id*

where *scsi\_node\_id* is the bus node ID, a number from 0 to 7.

Each SCSI bus in the system requires a controller. Buses can theoretically support up to eight devices; however, the eighth device must always be a controller. Each device on the bus, including the controller, must have a unique ID, which is a number between 0 and 7. This is the bus node ID number.

On each bus, the default bus node ID for the controller is set to 7. You do not need to change the controller bus node ID unless you place two or more controllers on the same bus.

To list the controllers on your system, enter the command **show device**. SCSI devices begin with the letters “pk” (for example, pka0). The third letter is the adapter ID for the controller. When entering the command **set pk\*0\_host\_id**, replace the asterisk with the adapter ID letter.

### 2.18.16 pk\*0\_soft\_term

---

**Enables or disables SCSI terminators. This command applies to systems that use the QLogic ISP1040 SCSI controller. The QLogic ISP1040 SCSI controller implements the 16-bit wide SCSI bus. The QLogic module has two terminators, one for the low eight bits and one for the high eight bits.**

---

**Syntax:**        **set pk\*0\_soft\_term** *value*

where *value* can be:

---

<b>Off</b>	Disables termination of all 16 bits.
(default) <b>low</b>	Enables low eight bits and disables high eight bits.
<b>High</b>	Enables high eight bits and disables low eight bits.
<b>On</b>	Enables all 16 bits.
<b>Diff</b>	Places the bus in differential mode.

### 2.18.17 tt\_allow\_login

---

**Enables or disables login to the SRM console firmware on alternate console ports. If the environment variable console is set to serial, the primary console device is the terminal connected through the COM1 port. The command set tt\_allow\_login 1 enables logins through either the COM2 port or a graphics monitor.**

---

**Syntax:**        **set tt\_allow\_login** *value*

where *value* can be:

- 
- (default) **1** Enables login through the COM2 port or a graphics monitor.
  - 0** Disables login through the COM2 port or a graphics monitor.

## 2.19 Switching from SRM to AlphaBIOS Console

---

**The `alphabios` command loads and starts the AlphaBIOS console. This is necessary for running AlphaBIOS-based utilities (such as the RAID configuration utility). To switch from SRM to AlphaBIOS, issue the `alphabios` command.**

---

**Syntax:**        `alphabios`

Type **`alphabios`** at the SRM prompt.

```
>>> alphabios
```

The AlphaBIOS console appears.

## 2.20 Running the AlphaBIOS Console

---

**AlphaBIOS is the graphical interface that supports utility programs.**


---

**NOTE:** *AlphaBIOS contains features and menus that support multiple operating systems. The Windows NT operating system is not supported on Compaq AlphaServer DS10/DS10L and AlphaStation DS10 systems. Only the AlphaBIOS features applicable to the Tru64 UNIX and OpenVMS operating systems are discussed in this section.*

---

After switching to AlphaBIOS, you will see the following screens.

**Figure 2-1 AlphaBIOS Boot Screen**

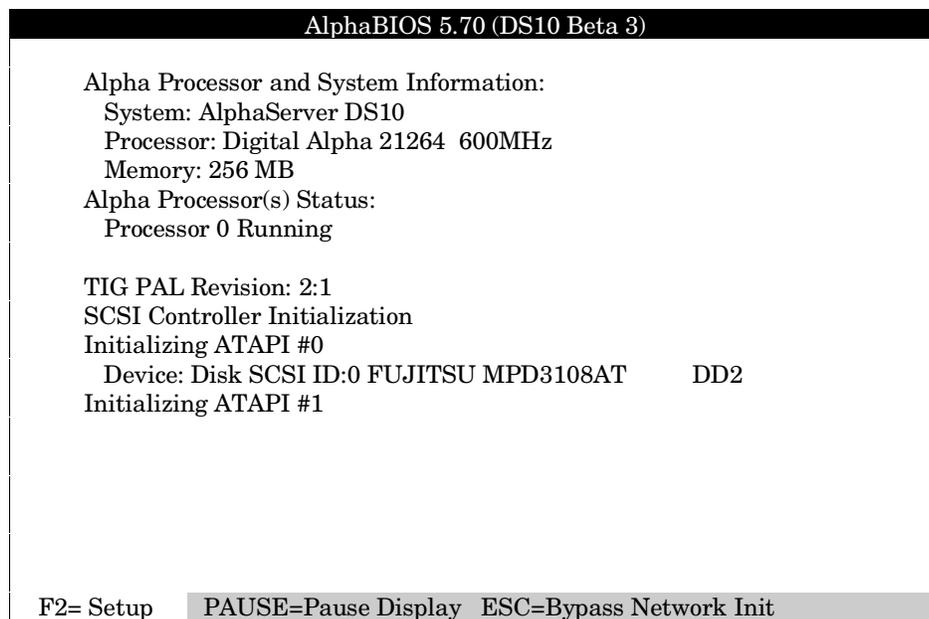

```
AlphaBIOS 5.70 (DS10 Beta 3)


Alpha Processor and System Information:
  System: AlphaServer DS10
  Processor: Digital Alpha 21264 600MHz
  Memory: 256 MB
Alpha Processor(s) Status:
  Processor 0 Running

TIG PAL Revision: 2:1
SCSI Controller Initialization
Initializing ATAPI #0
  Device: Disk SCSI ID:0 FUJITSU MPD3108AT   DD2
Initializing ATAPI #1

F2= Setup   PAUSE=Pause Display   ESC=Bypass Network Init
```

You will see the No Selections Found Screen.


**Figure 2-2 AlphaBIOS No Selections Found Screen**

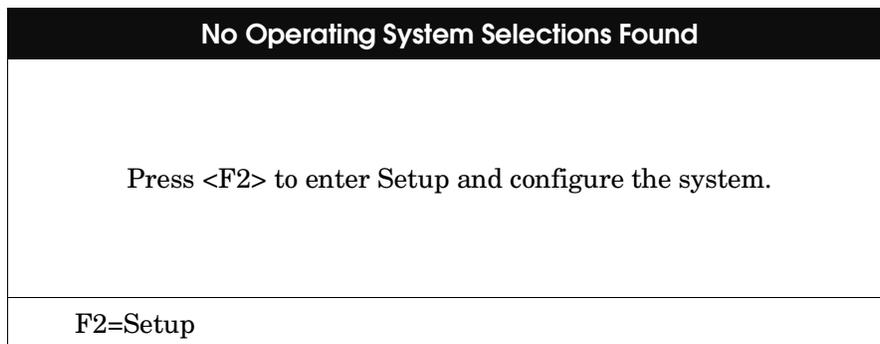

Press **F2** on this screen to enter the setup program.

The *AlphaBIOS Setup* screen shown in Figure 2–3 is displayed.

**Figure 2–3 AlphaBIOS Setup Screen**

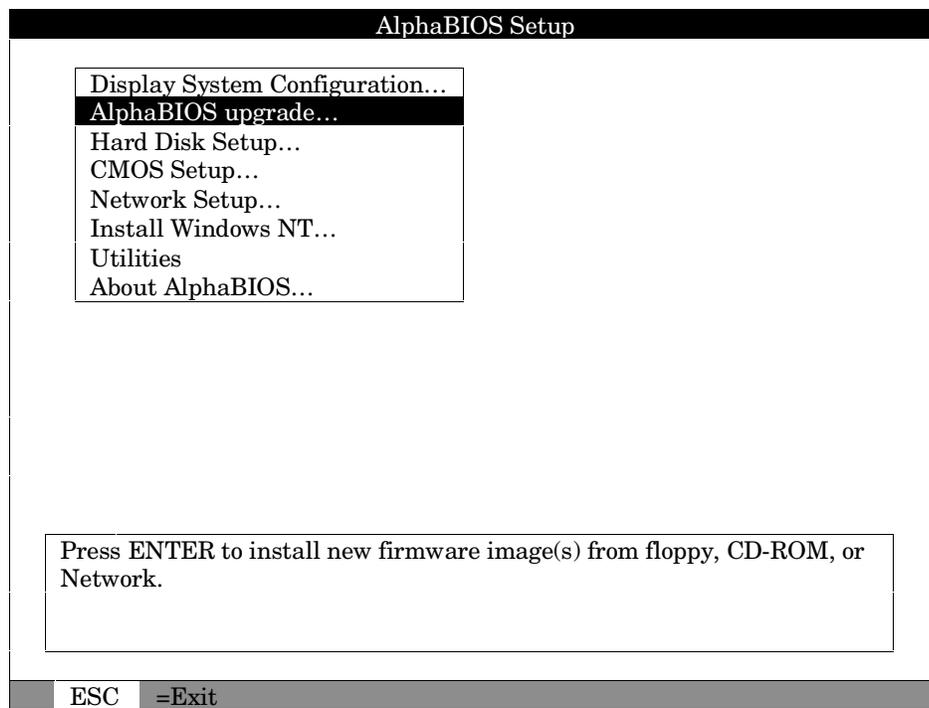

---

**NOTE:** *Only the Utilities choice is applicable for the Tru64 UNIX and OpenVMS operating systems.*


---

## 2.20.1 Running Configuration Utilities

Configuration utilities are run directly from the AlphaBIOS Utilities menu. If you change your system configuration, for example, by adding another RAID drive, you will have to run the RAID configuration utility. As you modify your system, you might be required to run other types of configuration utilities as well. Configuration utilities (also called maintenance programs) are run directly from the *AlphaBIOS Utility* menu.


1. From the *AlphaBIOS Setup* screen, move the cursor to *Utilities*, and press **Enter**.

**Figure 2-4 AlphaBIOS Setup Screen**

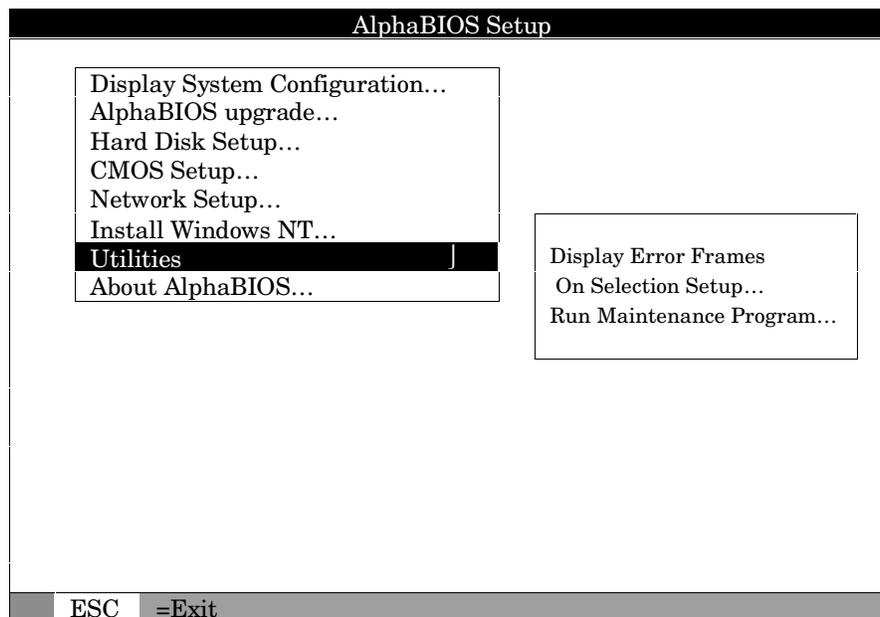

2. From the submenu that is displayed, select *Run Maintenance Program* with the arrows and press **Enter**.

**Figure 2-5 Run Maintenance Program Dialogue Box**

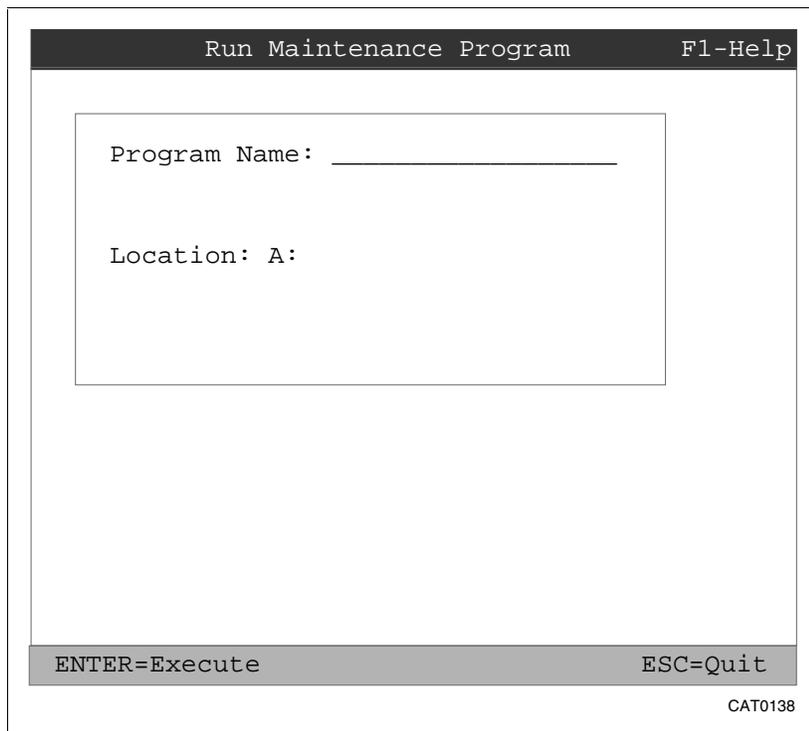

The image shows a terminal window titled "Run Maintenance Program" with a help key "F1-Help". Inside the window, there is a text input field for "Program Name:" followed by a horizontal line. Below it, the text "Location: A:" is displayed. At the bottom of the window, there is a grey bar with the text "ENTER=Execute" on the left and "ESC=Quit" on the right. The identifier "CAT0138" is located at the bottom right corner of the window frame.

3. In the *Run Maintenance Program* dialog box, type the name of the program to be run in the Program Name field. Then tab to the Location list box, and select the hard disk partition, diskette, or CD-ROM drive from which to run the program.
  4. Press **Enter** to execute the program.
- 

*NOTE: If you are running a utility from a diskette, you can simply type the utility's name into the Program Name field, and press **Enter**. The diskette drive is the default selection in the Location field. Use **Alt+Down** arrow when a list box is selected to open the list.*

---

To return to the SRM console, power the system off and then on again. The changes you made will take effect, and the SRM will appear.



# Chapter 3

## Remote Management Console

The remote management console (RMC) provides a command-line user interface for entering commands to monitor and control the system. In addition to doing routine monitoring, you can invoke the command-line interface to perform remote power on/off, halt, and reset.

The RMC can detect alert conditions such as overtemperature, fan failure, and power supply failure and automatically dial a pager phone number or another computer system to notify the remote operator of the alert condition.

This chapter explains the operation and use of the RMC. Sections are:

RMC Components	Remote Halt (In/Out)
Terminal Setup	Configuring Remote Dial-In
Operating Modes	Configuring Dial-Out Alert
Entering the RMC	Dialing In
SRM Environment Variables for COM1	Resetting the RMC to Factory Defaults
Status Monitoring	Troubleshooting Tips
Remote Power (On/Off)	RMC Commands

---


**NOTE:** *In many ways the DS10 and DS10L systems are identical. This manual uses DS10 systems for most illustrations and examples. Where significant differences exist, an illustration or example of a DS10L is presented separately.*

---


### 3.1 RMC Components

The RMC resides in an independent microprocessor on the system motherboard and allows a remote operator to connect to the system COM1 port from a modem or from a serial terminal or terminal emulator.

Figure 3-1 Location of RMC Components on Motherboard - DS10

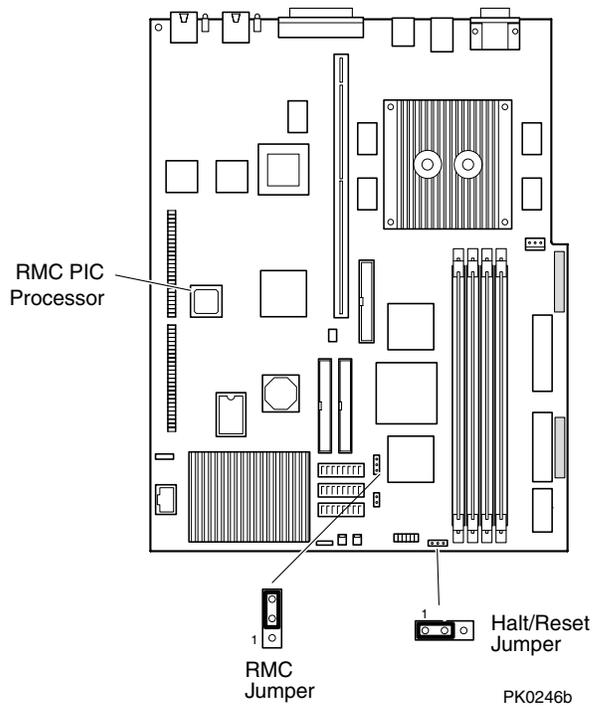

**Figure 3-2 Location of RMC Components on Motherboard - DS10L**

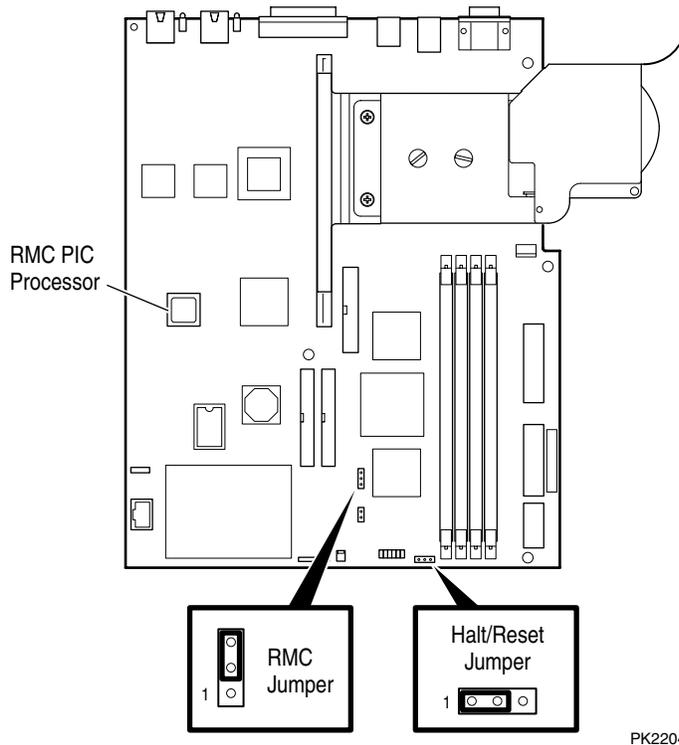


The RMC logic is implemented using an 8-bit microprocessor, PIC17C44, as the primary control device. The RMC PIC is programmed with code to control access to various environmental status bits.

You can gain access to the RMC as long as AC power is available to the system (through the wall outlet). Thus, if the system fails, you can still access the RMC and gather information about the failure. The RMC jumper position shown in Figure 3-1 and Figure 3-2 is the default position set in manufacturing which enables the RMC. To disable RMC, move the jumper to cover the middle pin and the other end pin.


## 3.2 Terminal Setup

Remote connection is made through a modem connected to the COM1 port. To set up the modem, you first use a local terminal on the COM1 port to set up the parameters of the modem and RMC connection. You then disconnect the terminal and connect the modem.

Figure 3-3 Setups for RMC Mode - DS10

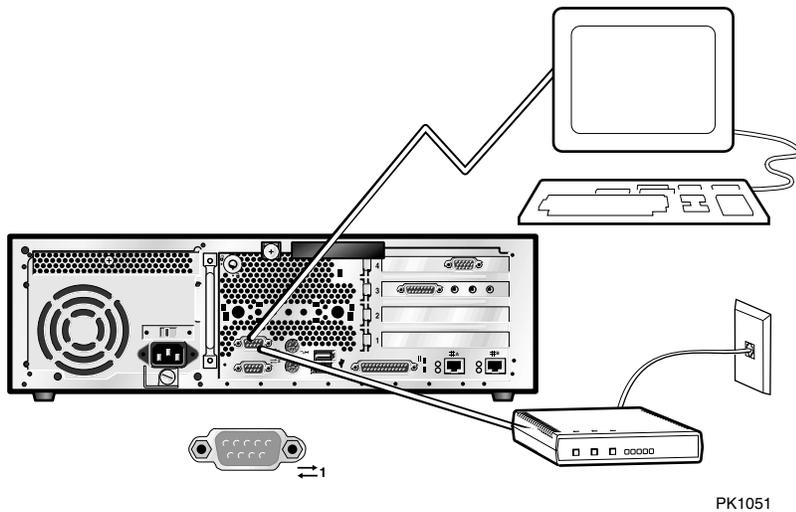

**Figure 3-4 Setups for RMC Mode - DS10L**

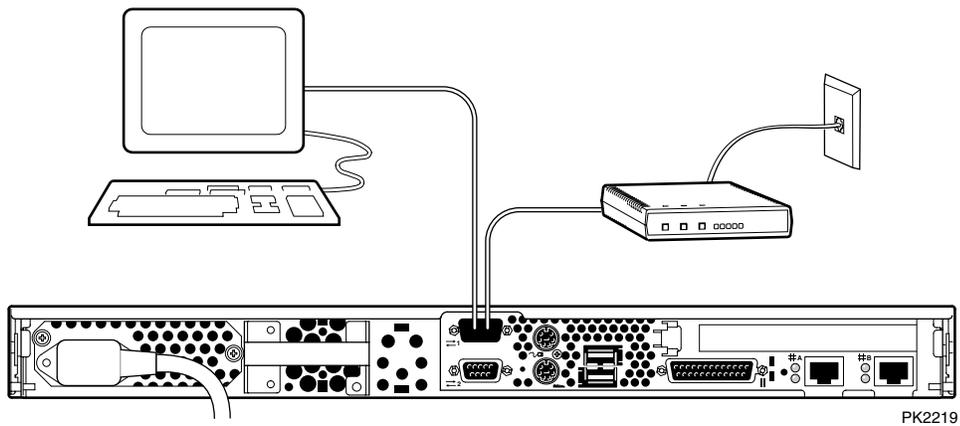


You can connect a terminal or a modem to the COM1 port, but not both at the same time. You use the terminal to set RMC parameters for the connection, then connect the modem. See Section 3.9.

### 3.3 Operating Modes

**RMC runs in three modes on this system: Snoop, soft bypass, and firm bypass. The bypass modes are set with the set com1\_mode command from the SRM console.**

Figure 3-5 Bypass Mode

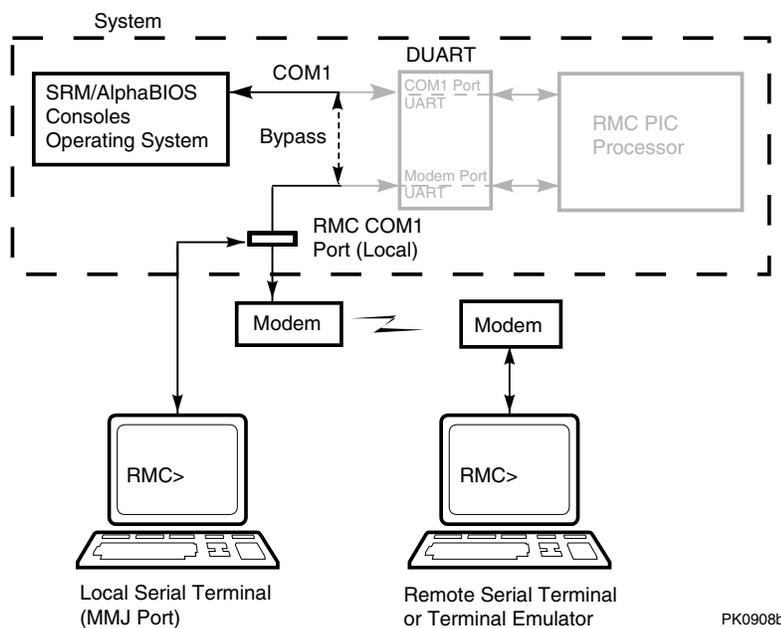

PK0908b

**NOTE:** *The internal system COM1 port should not be confused with the external COM1 serial port on the back of the system. The internal COM1 port is used by software to send data either to the COM1 port on the system or to the RMC modem port if a modem is connected.*

#### Examples:

```
>>> set com1_mode snoop
>>> set com1_mode soft_bypass
>>> set com1_mode firm_bypass
```

### **3.3.1 Snoop Mode (Default Mode)**

In snoop mode data partially bypasses the RMC. The data and control signals are routed from the system COM1 port to the external modem port, but the RMC taps into the data lines and listens passively for the RMC escape sequence. If it detects the escape sequence, it enters RMC mode.

The escape sequence is also delivered to the system on the bypassed data lines. If you decide to change the default escape sequence, be sure to choose a unique sequence so that the system software does not interpret characters intended for the RMC.

Because snoop mode does not filter every piece of data, it is useful when you want to monitor the system but also ensure optimum COM1 performance.

### **3.3.2 Bypass Modes**

In bypass modes, note that the internal system COM1 port is connected directly to the modem port. The RMC passively listens to the escape sequence from the external COM1 port, when the RMC escape sequence is captured.

#### **Soft Bypass Mode**

In soft bypass mode all data and control signals are routed directly from the system COM1 port to the external modem port, and the RMC does not listen to traffic on the COM1 data lines. If an alert condition or loss of carrier occurs, however, the RMC detects it and switches automatically into snoop mode. In soft bypass mode, the RMC also initializes the modem for dialing in and dials out when an alert is detected.

Soft bypass mode is useful if management applications need the COM1 channel to perform a binary download, because it ensures that RMC does not accidentally interpret some binary data as the escape sequence.

#### **Firm Bypass Mode**

Firm bypass mode effectively disables the RMC. All data and control signals are routed directly from the system COM1 port to the external modem port. In firm bypass mode, the RMC dial-in and call-out features are disabled. Firm bypass mode is useful if you want the system, or an application (such as Insight Manager or ServerWorks)—not the RMC—to fully control the modem port and you want to disable RMC features.

## 3.4 Entering the RMC

---

**You type an escape sequence to invoke the RMC. You can enter RMC from a modem or the local serial console terminal. You can enter the RMC from the local terminal regardless of the current operating mode. You can set up RMC parameters.**

---

1. Invoke the RMC from a serial terminal by typing the following default escape sequence:

`^[^[ rmc`

This sequence is equivalent to typing Ctrl/left bracket, Ctrl/left bracket, and rmc. On some keyboards, the Esc key functions like the Ctrl/left bracket combination.

2. To exit RMC, enter the **quit** command. This action returns you to whatever you were doing before you invoked the RMC.

### 3.5 SRM Environment Variables for COM1

---

**Several SRM environment variables allow you to set up the COM1 serial port for use with the RMC.**

---

You may need to set the following environment variables from the SRM console, depending on how you decide to set up the RMC. See Chapter 2 for information on setting SRM environment variables.

**Table 3-1 SRM Environment Variables for COM1**

Variable	Function
<b>com1_baud</b>	Sets the baud rate of the COM1 serial/modem port. The default is 9600.
<b>com1_flow</b>	Specifies the flow control on the serial port. The default is <b>software</b> .
<b>com1_mode</b>	Specifies the COM1 data flow paths so that data either flows through the RMC or bypasses it. This environment variable can be set from either the SRM or the RMC.
<b>com1_modem</b>	Specifies to the operating system whether or not a modem is present.

## 3.6 Status Monitoring

---

**Use the RMC status command to check the current state of the system's sensors as well as the current escape sequence and alarm information.**

---

```
RMC> sta

PLATFORM STATUS
Firmware Revision: V1.1
Power: ON
RMC Halt: Deasserted
RMC Power Control: ON
Power Supply: OK
System Fans: OK          CPU Fan: OK
Temperature: 31.0°C (warnings at 55.0°C, power-off at 60.0°C)
Escape Sequence: ^^[RMC
Remote Access: Disabled
RMC Password: set
Alert Enable: Disabled
Alert Pending: YES
Init String: AT&F0E0V0S0=2
Dial String: ATXDT8,18007598888
Alert String: ,,,,,,,,,1066278#,,,,,,,,,1#,,,,,30140#;
Com1_mode: SNOOP
Last Alert: AC Loss
Watchdog Timer: 00 seconds
Autoreboot: OFF
Logout Timer: 20 minutes
User String:
```

**Table 3-2 Status Command Fields**

Field	Meaning
<b>Firmware Revision</b>	Revision of RMC firmware on the microcontroller.
<b>Power</b>	On = System is on. Off = System is off.
<b>RMC Halt</b>	Asserted = System has been halted by RMC. Deasserted = Halt has been released by RMC.

*Continued on next page.*

**Table 3-2 Status Command Fields (Continued)**

---


<b>RMC Power Control</b>	On = System has powered on from RMC. Off = System has powered off from RMC.
<b>Power Supply</b>	OK = Auxiliary 5V is working.
<b>System Fans</b>	OK = PCI and system fan are operating. FAIL = PCI or system fan failure has been detected.
<b>CPU Fan</b>	OK = Fan on CPU chip is operating. FAIL = CPU fan failure has been detected.
<b>Temperature</b>	Reports current temperature and system limits.
<b>Escape Sequence</b>	Current escape sequence for access to RMC console.
<b>Remote Access</b>	Enable = Modem for remote access is enabled. Disable = Modem for remote access is disabled.
<b>RMC Password</b>	Set = Password set for modem access. Not set = No password set for modem access.
<b>Alert Enable</b>	Enabled = Dial-out enabled for sending alerts. Disabled = Dial-out is disabled for sending alerts.
<b>Alert Pending</b>	Yes = Alert has been triggered. No = No alert has been triggered.
<b>Init String</b>	Initialization string that was set for modem access.
<b>Dial String</b>	Phone number dialed when an alert occurs.
<b>Alert String</b>	Identifies the system that triggered the alert to the paging service. Usually the phone number of the monitored system.
<b>Com1_mode</b>	Can be set to snoop, soft-bypass, or firm-bypass. See Section 3.3.
<b>Last Alert</b>	Type of alert (for example, power supply failed).
<b>Watchdog timer</b>	Reports time set by user using <b>set wdt</b> command; can be up to 60 seconds in increments of 10. When it times out, alert is sent.
<b>Autoreboot</b>	ON = Autoreboot feature enabled. OFF = Autoreboot feature disabled.
<b>Logout Timer</b>	The amount of time before the RMC terminates an inactive modem connection. The default is 20 minutes.
<b>User String</b>	Notes supplied by user.

---

### 3.7 Remote Power (On/Off)


You can power a monitored system on or off from the RMC using console monitor commands.

Figure 3-6 Power Button - DS10

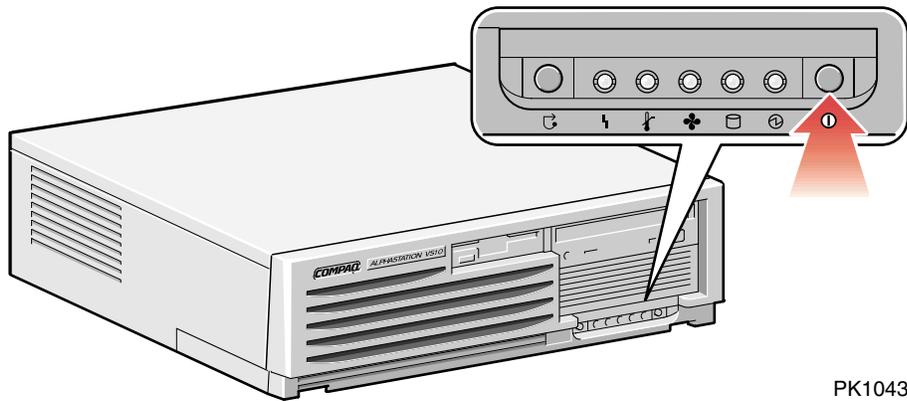

PK1043b

Figure 3-7 Power Button - DS10L

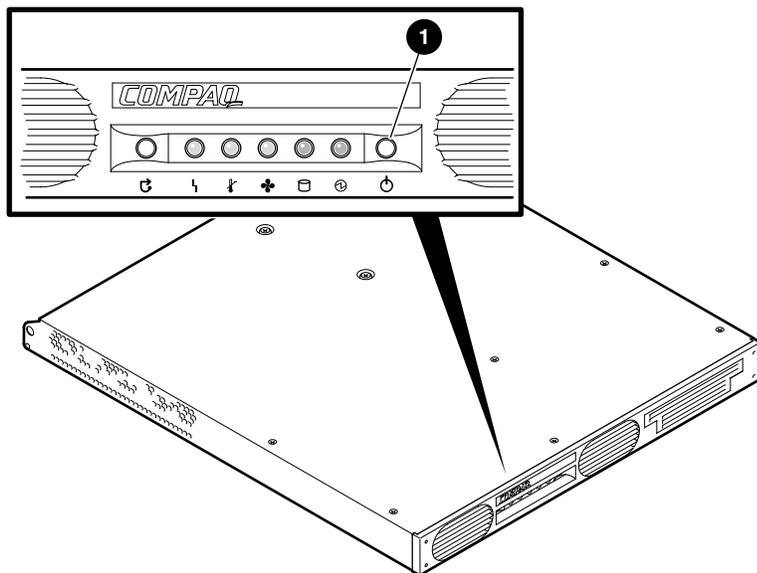

PK2216

### Remote Power-On

The RMC **power {on, off}** commands can be issued remotely to power the system on or off. They have the same function as the Power button on the control panel. The Power button, however, has precedence.

- If the system has been powered off with the Power button, the RMC cannot power the system on.
- If the system has been powered on with the Power button, and the **power off** command is used to turn the system off, you can toggle the Power button off, then on, to power the system back on.

When you issue the **power on** command, the terminal exits the RMC and reconnects to the system's COM1 port.

```
RMC> power on
Returning to COM port
RMC> power off
```

### 3.8 Remote Halt (In/Out)

---


**You can issue a halt to a monitored system from the RMC using console monitor commands. Under OpenVMS and Tru64 UNIX, the system will halt.**

---

The RMC halt in command can be issued remotely to halt the system.  
The RMC halt out command can be issued to deassert the halt.


These commands have the same function as the Halt button (see Figure 3–8 or Figure 3–9) on the control panel for OpenVMS and Tru64 UNIX.

**Figure 3–8 Halt/Reset Button - DS10**

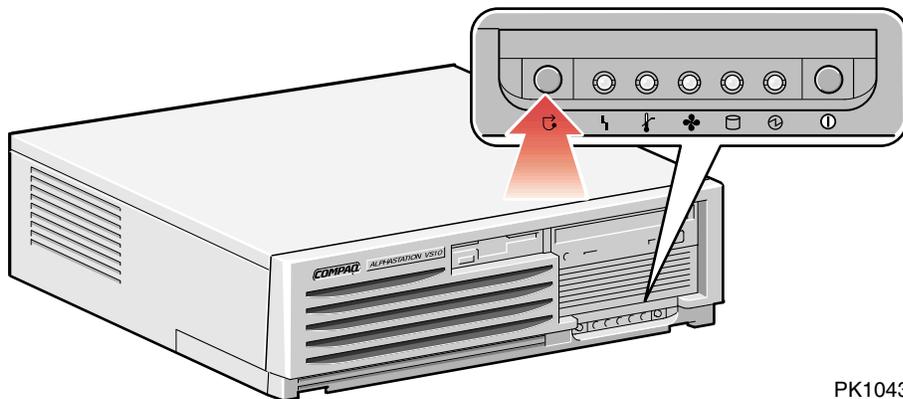

PK1043c

**Figure 3-9 Halt/Reset Button - DS10L**

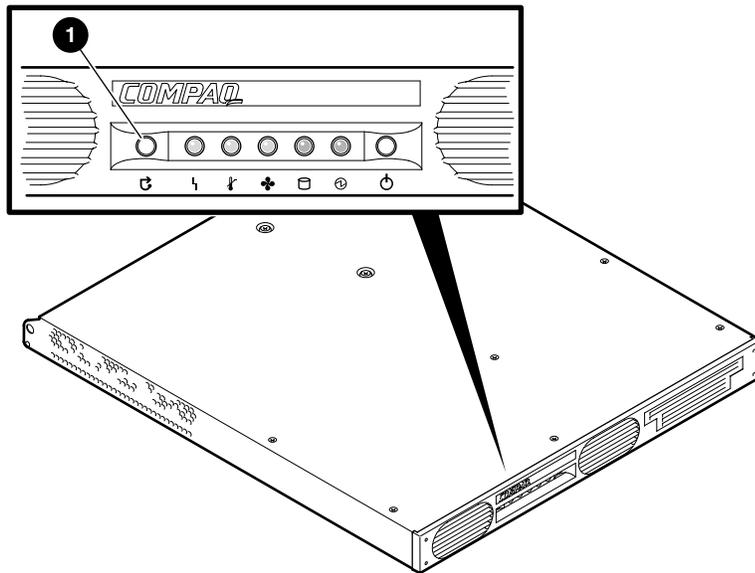

PK2220

The Halt/Reset button suspends the operating system and returns control to the SRM or RMC console under either the OpenVMS or Tru64 UNIX operating systems.

The Halt button, however, does not override the halt {in, out} commands. If you halt the system with halt in, you must use halt out to deassert the halt state.

When you issue either the halt in or halt out command under OpenVMS or Tru64 UNIX, the terminal exits the RMC and reconnects to the system's COM1 port.

```
RMC> halt in  
Returning to COM port
```

```
RMC> halt out  
Returning to COM port
```

## 3.9 Configuring Remote Dial-In

---

**Before you can dial in through the RMC modem port or enable the system to call out in response to system alerts, you must configure the RMC for remote dial-in.**

---

Connect your serial terminal to the COM1 port and turn it on. Set up the RMC parameters. Then disconnect the serial terminal, connect the modem, and check your configuration.

### Example 3-1 Dial-In Configuration

```
RMC> set password ❶
RMC Password: ****
Verification: ****
RMC> set init ❷
Init String: AT&F0E0V0X0S0=2
RMC> enable remote ❸
    Modem will be enabled when it is connected ❹
RMC> status ❺
.
.
Remote Access: Enabled
```

---

**NOTE:** *The following modems require the initialization strings shown here. For other modems, see your modem documentation.*

---

<b>Modem</b>	<b>Initialization String</b>
Motorola 3400 Lifestyle 28.8	AT&F0E0V0X0S0=2
AT &T Dataport 14.4/FAX	AT&F0E0V0X0S0=2
Hayes Smartmodem Optima 288 V-34/V.FC + FAX	AT&FE0V0X0S0=2

---

- ① Sets the password that is prompted for at the beginning of a modem session. The string cannot exceed 14 characters and is not case sensitive. For security, the password is not echoed on the screen. When prompted for verification, type the password again.
- ② Sets the initialization string. The string is limited to 31 characters and can be modified depending on the type of modem used. Because the modem commands disallow mixed cases, the RMC automatically converts all alphabetic characters entered in the init string to uppercase.  
  
The RMC automatically configures the modem's flow control according to the setting of the SRM **com1\_flow** environment variable. The RMC also enables the modem carrier detect feature to monitor the modem connectivity.
- ③ Enables remote access to the RMC modem port by configuring the modem with the setting stored in the initialization string.
- ④ Because you have the serial terminal connected and not the modem, the system responds that the modem will be enabled when it is connected.
- ⑤ Verify the settings and check that the Remote Access field is set to Enabled, ready for the modem to be connected.
- ⑥ Disconnect the serial terminal, connect the modem and check that the modem's TR light is lit. See Section 3.11 for dialing-in instructions.

## 3.10 Configuring Dial-Out Alert

---

**When you are not monitoring the system through a modem connection, you can use the RMC dial-out alert feature to remain informed of system status. If dial-out alert is enabled, and the RMC detects alarm conditions within the managed system, it can call a preset pager number.**

---

You must configure remote dial-in for the dial-out feature to be enabled. See Section 3.9. To set up the dial-out alert feature, enter the RMC from the local serial terminal.

### Example 3-2 Dial-Out Alert Configuration

```
RMC> set dial ❶
Dial String: ATXDT9,15085553333
RMC> set alert ❷
Alert String: ,,,,,,5085554444#;
RMC> enable alert ❸
    Modem will be enabled when it is connected
RMC> clear alert ❹
RMC> send alert ❺
Alert detected!
    # Disconnect the serial terminal and connect the modem at COM1 port.
    # You should receive an alert within 30 minutes of modem connection.
    # Once the alert is received, reconnect the serial terminal and clear the test alert.
RMC> clear alert ❻
RMC> status ❼
Alert Enable: Enabled
```

A typical alert situation might be as follows:

- The RMC detects an alarm condition caused by excessive temperature.
- The RMC dials the operator's pager and sends a message identifying the system.
- The operator dials the system from a remote serial terminal.
- The operator invokes the RMC, checks system status, and powers down the managed system.

- When the problem is resolved, the operator powers up and reboots the system.
- The dial-out alert feature is enabled as part of the dial-in setup. See Section 3.9.

The elements of the dial string and alert string are shown in Table 3–3. Paging services vary, so you need to become familiar with the options provided by the paging service you will be using. The RMC supports only numeric messages.

- ❶ Sets the string to be used by the RMC to dial out when an alert condition occurs. The dial string must include the appropriate modem commands to dial the number. In this example, 1-508-555-3333 is the pager number.
- ❷ Sets the alert string, typically the phone number of the modem connected to the remote system. The alert string is appended after the dial string, and the combined string is sent to the modem when an alert condition is detected. In this example, the system's modem number is 1-508-555-4444.

- ❸ Enables the RMC to page a remote system operator.

Because the modem is not connected at the COM1 port at this time, the RMC notifies you that the alert will be enabled at connection.

- ❹ Clears any alert that may be pending. This ensures that the **send alert** command will generate an alert condition.
- ❺ Forces an alert condition. This command is used to test the setup of the dial-out alert function. It must be issued from the local serial terminal.

The RMC tries to send the alert immediately. Because the modem is not connected at the COM1 port at this time, the RMC resets the paging interval to at most 30 minutes, and will send the alert again. If the pager does not receive the alert within 30 minutes, re-check your setup.

- ❻ Clears the current alert so that the RMC can capture a new alert. The last alert is stored until a new event overwrites it. The Alert Pending field of the **status** command becomes NO after the alert is cleared.
- ❼ Verifies the settings. Check that the Alert Enable field is set to Enabled.

---

*NOTE: If you do not want dial-out paging enabled at this time, enter the disable alert command after you have tested the dial-out alert function. Alerts continue to be logged, but no paging occurs.*

---

**Table 3-3 Elements of Dial String and Alert String**

---

<b>Dial String</b>	
The dial string is case sensitive. The RMC automatically converts all alphabetic characters to uppercase	
<b>ATXDT</b>	AT = Attention.  X = Forces the modem to dial “blindly” (not seek the dial tone). Enter this character if the dial-out line modifies its dial tone when used for services such as voice mail.  D = Dial  T = Tone (for touch-tone)
<b>9,</b>	The number for an outside line (in this example, 9). Enter the number for an outside line if your system requires it.  , = Pause for 2 seconds.
<b>15085553333</b>	Phone number of the paging service.

---

<b>Alert String</b>	
<b>,,,,,</b>	Each comma (,) provides a 2-second delay. In this example, a delay of 12 seconds is set to allow the paging service to answer.
<b>5085553332#</b>	A call-back number for the paging service. The alert string must be terminated by the pound (#) character.
<b>;</b>	A semicolon (;) must be used to terminate the entire string.

---

## 3.11 Dialing In

---

**To start a remote monitoring session, dial in, using the dial string you entered during the setup procedure. Enter the RMC modem password, and then type the escape sequence.**

---

1. After completing the setup procedure, dial in, enter the RMC password at the Modem password: prompt. When a prompt is displayed, type the escape sequence. In the following example, the system is at the SRM console when the modem connection is made.


```
ATDT15085554444
RINGING
RINGING
CONNECT 9600/ARQ/V32/LAPM
Modem password: *****
Welcome to RMC V1.0
>>> ^^[^rmc          (sequence is not echoed)
RMC>
```

2. At the RMC> prompt, enter commands to monitor and control the remote system.
3. When you have finished your modem session, enter the **hangup** command to cleanly terminate the modem session and disconnect from the system.

### 3.12 Resetting the RMC to Factory Defaults


If the RMC escape sequence is set to something other than the default, and the sequence has been lost or forgotten, the RMC must be reset to factory settings to restore the default escape sequence. See Appendix A.

Figure 3-10 RMC Jumpers (Default Positions) - DS10

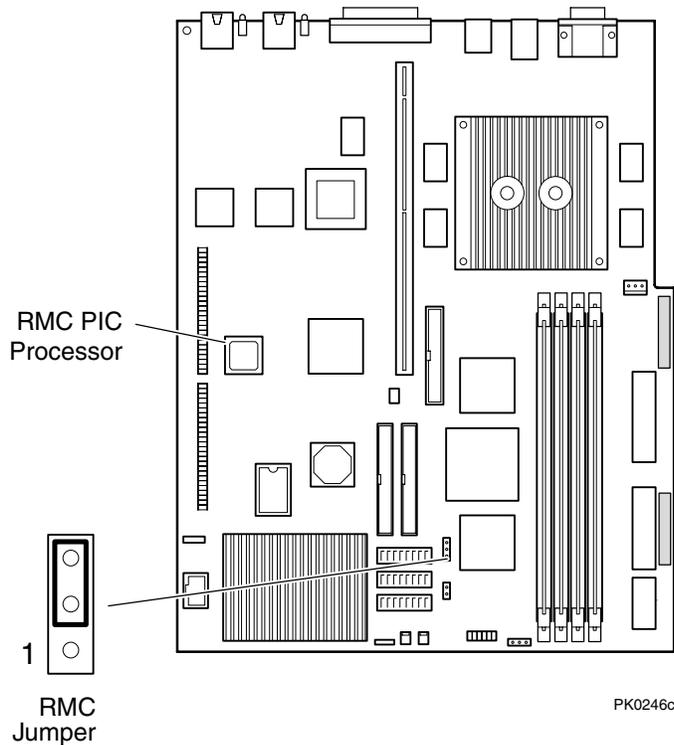

**WARNING:** To prevent injury, access is limited to persons who have appropriate technical training and experience. Such persons are expected to understand the hazards of working within this equipment and take measures to minimize danger to themselves or others.

**Figure 3-11 RMC Jumpers (Default Positions) - DS10L**

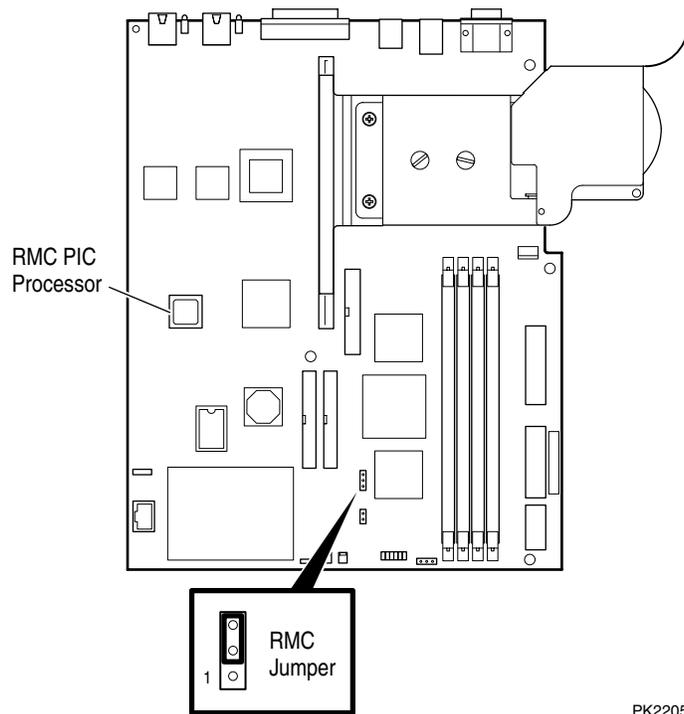

PK2205

### 3.13 Troubleshooting Tips

Table 3-4 lists possible causes and suggested solutions for symptoms you might see.

Table 3-4 RMC Troubleshooting

Symptom	Possible Cause	Suggested Solution
<b>If you are not at the RMC prompt, a system reset or initialization disconnects the modem.</b>		
	SRM clears modem connections on power-up.	Reconnect the modem. See Section 3.11.
<b>RMC does not answer when the modem is called.</b>		
	Modem cables may be incorrectly installed.	Check modem phone lines and connections.
	RMC remote access is disabled.	Enter <b>enable remote</b> access command from RMC.
	RMC does not have a valid password set.	Enter <b>set password</b> and <b>enable remote</b> commands from the RMC.
	On power-up, the RMC defers initializing the modem for 30 seconds to allow the modem to complete its internal diagnostics and initializations.	Wait 30 seconds after powering up the system and the RMC before attempting to dial in.
	Modem may have had power cycled since last being initialized or modem is not set up correctly.	Enter <b>enable remote</b> command from the RMC console.

(Continued)

Symptom	Possible Cause	Suggested Solution
<b>After the system is powered up, the COM1 port seems to hang and then starts working after a few seconds.</b>	This delay is normal.	Wait a few seconds for the COM1 port to start working.
<b>New password and escape sequence are forgotten.</b>		RMC console must be reset to factory defaults. See Section 3.12.
<b>The remote user sees a “+++” string on the screen.</b>	The modem is confirming whether the modem has really lost carrier	This is normal behavior.
<b>The message “unknown command” is displayed when the user enters a carriage return by itself.</b>	The terminal or terminal emulator is including a line feed character with the carriage return.	Change the terminal or terminal emulator setting so that “new line” is not selected.
<b>Cannot enable modem or modem will not answer.</b>	The modem is not configured correctly to work with the RMC.	Modify the modem initialization string according to your modem documentation.

## 3.14 RMC Commands

---

The remote management console supports setup commands and commands for remotely managing the system.

---

**clear** {alert, port}  
**disable** (alert, reboot, remote)  
**enable** (alert, reboot, remote)  
**halt** {in, out}  
**hangup**  
**help** or ?  
**power** {on, off}  
**quit**  
**reset**  
**send alert**  
**set** {alert, com1\_mode, dial, escape, init, logout, password, user, wdt}  
**status**

## Command Conventions

Observe the following conventions for entering RMC commands:

- Enter enough characters to distinguish the command.

---

**NOTE:** *The **reset** and **quit** commands are exceptions. You must enter the entire word for these commands to work.*

---

- For commands consisting of two words, enter the entire first word and at least one letter of the second word. For example, you can enter **disable a** for **disable alert**.
- For commands that have parameters, you are prompted for the parameter.
- Use the Backspace key to erase input.
- If you enter a nonexistent command or a command that does not follow conventions, the following message is displayed:

```
*** ERROR - unknown command ***
```

- If you enter a string that exceeds 14 characters, the following message is displayed:

```
*** ERROR - overflow ***
```

-

### 3.14.1 clear alert

---

**The clear alert command clears the current alert condition and causes the RMC to stop paging the system operator at the remote location.**

---

If the alert is not cleared, the RMC continues to page the remote operator every 30 minutes if both remote access and alerts are enabled.

The **clear alert** command clears the current alert so that the RMC can capture a new alert. The last alert is stored until a new event overwrites it. The Alert Pending field of the status command becomes NO after the alert is cleared.

**Syntax:**            `clear alert`

### 3.14.2 clear port

---

**The clear port command uses the console port modem control signals to clear any “stuck” conditions on the system’s COM1 port.**

---

The **clear port** command attempts to free the port by resetting all UARTs controlled by the RMC if the port is currently locked by an application program, without resetting the entire system.

**Syntax:**            `clear port`

---

**NOTE:** *This command also causes the modem to disconnect.*

---

### 3.14.3 disable alert

---

**The disable alert command disables the RMC from paging a remote system operator.**

---

Monitoring continues and alerts are still logged in the Last Alert field of the **status** command, but alerts are not sent to the remote operator.

**Syntax:**            `disable alert`

### 3.14.4 disable remote

---

**The disable remote command disables remote access to the RMC modem port and disables automatic dial-out alerts.**

---

**Syntax:**            `disable remote`

### 3.14.5 enable alert

---

**The enable alert command enables the RMC to page a remote system operator.**

---

Before you can enter the enable alert command, you must configure remote dial-in and call-out, set an RMC password (**set password** command), and enable remote access (**enable remote** command) to the RMC modem port.

**Syntax:**            **enable alert**

**Example:**

```
RMC> set dial
Dial String: atxdt9,15085553333
RMC> set alert
Alert String: ,,,,,,5085554444#;
RMC> enable alert
      Modem will be enabled when it
is connected
```

The system notifies you that when you connect the modem (after disconnecting the serial terminal at the COM1 port), the alert will be enabled. Before you connect the modem, you can issue the **status** command to see if the Alert Enable field is set to Enabled.

If the **enable alert** command fails, the following error message is displayed:

```
*** ERROR - enable failed ***
```

### 3.14.6 enable remote

---

**The enable remote command enables remote access to the RMC modem port by configuring the modem with the setting stored in the initialization string.**

---

This command also allows the RMC to automatically dial the phone number set with the **set dial** command upon detection of alert conditions.

Before you can enter the enable remote command, you must configure remote dial-in by setting an RMC password (**set password** command) and initialization string. The **enable remote** command remains in effect until you enter the **disable remote** command.

**Syntax:**            **enable remote**

**Example:**

```
RMC> set password
RMC Password: ****
Verification: ****
RMC> set init
Init String: AT&F0E0V0X0S0=2
RMC> enable remote
      Modem will be enabled when it
      is connected
```

The system notifies you that when you connect the modem (after disconnecting the serial terminal at the COM1 port), remote access will be enabled. Before you connect the modem, you can issue the **status** command to see if the Remote Access field is set to Enabled.

If the **enable remote** command fails, the following error message is displayed:

```
*** ERROR - enable failed ***
```

### 3.14.7 halt (in/out)

---

**You can issue a halt to a monitored system from RMC using console monitor commands. The effect of this command depends on the setting of the HALT/RESET jumper on the motherboard. See Section 3.8 for a full discussion of this feature.**

---

The **halt in** command is equivalent to pressing the Halt button on the control panel. The effect depends on which operating system you are running, and how the Halt/Reset switch is set. The default settings are:

	Operating System	Function
	OpenVMS and Tru64 UNIX	Suspends the operating system and returns control to the SRM or RMC console.

The operator at the control panel can override the **halt in** command by pressing the Power button.

**Syntax:**        **halt in**  
                  **halt out**

**Example:**

```
RMC> halt in
Returning to COM port
```

You cannot use **halt out** to release a halt if the Halt button on the control panel is latched in. If you issue the command, the following message is displayed:

```
RMC> halt out
Halt button is IN
```

### 3.14.8 hangup

---

**The hangup command terminates the modem session.**

---

If you do not issue the **hangup** command, the session is disconnected automatically after a period of idle time set by the **set logout** command. The default is 20 minutes

**Syntax:**        **hangup**

### 3.14.9 help or ?

---

**The help or ? command displays the RMC command set.**

---

**Syntax:**        **help or ?**

**Example:**

```
RMC> help
clear {alert, port}
disable {alert, reboot, remote}
enable {alert, reboot, remote}
halt {in, out}
hangup
help or ?
power {off, on}
quit
reset
send alert
set {alert, com1_mode, dial, escape, init, logout,
password, user, wdt}
status
```

### 3.14.10 power off

---

**The power off command is equivalent to turning off the system power from the control panel.**

---

If the system is already powered off, this command has no effect. You can override the **power off** command either by issuing a **power on** command or by toggling the Power button on the control panel.

**Syntax:**            **power off**

### 3.14.11 power on

---

**The power on command is equivalent to turning on the system power from the control panel.**

---

If the system is already powered on, this command has no effect. After the **power on** command is issued, the user's terminal exits the RMC and reconnects to the system's COM1 port.

**Syntax:**            **power on**

**Example:**

```
RMC> power on
Returning to COM port
```

The **power on** command does not turn on the system if the Power button on the control panel is in the OFF position. Check the Power button if you issue the **power on** command and receive the following message:

```
RMC> power on
Failed to power on.
```

### 3.14.12 quit

---

**The quit command exits RMC from a serial terminal and returns the user's terminal to the system's COM1 port.**

---

You must enter the entire word for the command to take effect.

**Syntax:**        **quit**

**Example:**

```
RMC> quit  
Returning to COM port
```

### 3.14.13 reset

---

**The reset command is equivalent to pushing the Reset button on the control panel.**

---

The **reset** command restarts the system. The terminal exits RMC and reconnects to the server's COM1 port. You must enter the entire word for the command to take effect.

**Syntax:**        **reset**

**Example:**

```
RMC> reset
Returning to COM port
```

### 3.14.14 send alert

---

**The send alert command forces an alert condition.**

---

This command is used to test the setup of the alert dial-out function, sending an alert condition to the pager or the phone.

However, since your serial terminal is connected while you are entering the command, initially the alert will not be able to be sent. When the RMC cannot page the operator, it may be that the modem or terminal is in use. The RMC waits approximately 30 minutes, and then resends the alert. This allows you to connect the modem, and wait for the alert string.

If the pager does not receive the alert after a half an hour, re-check your setup.

**Syntax:**        **send alert**

**Example:**

```
RMC> send alert
Alert detected!
```

### 3.14.15 set alert

---

**The set alert command sets the alert string that is transmitted through the modem when an alert condition is detected.**

---

Set the alert string to the phone number of the modem connected to the remote system. The alert string is appended after the dial string, and the combined string is sent to the modem.

The alert string cannot exceed 63 characters, and consists of the following elements:

- ,,,,, Each comma (,) provides a 2-second delay. In this example, a delay of 12 seconds is set to allow the paging service to answer.
- 5085554444#** A call-back number for the paging service. The alert string must be terminated by the pound (#) character.
- ; A semicolon (;) must be used to terminate the entire string.

The example shown below is generic. Because paging services vary, be sure to listen to the options provided by the paging service to determine the appropriate delay and the menu options.

**Syntax:**        `set alert`

**Example:**

```
RMC> set alert
alert> ,,,,,,5085551212#;
```

### 3.14.16 set com1\_mode

---

**The set com1\_mode command specifies the COM1 data flow paths, so that data either passes through the RMC or bypasses it. See Section 3.3 for descriptions of the RMC modes.**

---

**Syntax:**        **set com1\_mode** *value*

where *value* can be:

- snoop**            Data partially bypasses the RMC, but the RMC taps into the data lines and listens passively for the RMC escape sequence.
- soft\_bypass**    Data bypasses RMC, but the RMC switches automatically into snoop mode if an alert condition or loss of carrier occurs.
- Firm\_bypass**    Data bypasses the RMC. The RMC is effectively disabled.

**Example:**

```
>>> set com1_mode
COM1_MODE (SNOOP, SOFT_BYPASS,
FIRM_BYPASS)
```

### 3.14.17 set dial

---

**The set dial command sets the dial string to be used by the RMC to dial out when an alert condition occurs.**

---

The dial string must be in the correct format for the attached modem. If a paging service is to be contacted, the dial string must include the appropriate modem commands to dial the number, wait for the line to connect, and send the appropriate touch tones to leave a pager message. The dial string is limited to 31 characters.

Because the modem commands do not allow mixed cases, the RMC converts all alphabetic characters in the dial string to uppercase.

**Syntax:**        **set dial**

**Example:**

```
RMC> set dial
Dial String: ATXDT15085553333
```

where:

**ATXDT**        AT = Attention.

X = Forces the modem to dial “blindly” (not seek the dial tone). Enter this character if the dial-out line modifies its dial tone when used for services such as voice mail.

D = Dial

T = Tone (for touch-tone)

**9,**            The number for an outside line (in this example, 9). Enter the number for an outside line if your system requires it.

, = Pause for 2 seconds.

**15085553333**   Phone number of the paging service. (In this example it is 1– area code 508 – exchange 555 – number 3333.)

### 3.14.18 set escape

---

**The set escape command changes the escape sequence used for invoking the RMC.**

---

The escape sequence can be any character string, not to exceed 14 characters. A typical sequence consists of two or more control characters. It is recommended that control characters be used in preference to ASCII characters. Use the **status** command to verify the escape sequence.

Be sure to record the new escape sequence. If you forget the escape sequence, you must reset the RMC to the factory defaults. See Section 3.12 for information on setting the RMC to the factory defaults.

The following example consists of two instances of the Esc key and the letters “FUN.” The “F” is not displayed when you set the sequence because it is preceded by the escape character. Enter the **status** command to see the new escape sequence.

**Syntax:**        **set escape**

**Example:**

```
RMC> set escape
Escape Sequence: un
RMC> status
.
.
.
Escape Sequence: ^^[FUN
```

### 3.14.19 set init

---

**The set init command sets the modem initialization string.**

---

The initialization string is limited to 31 characters and can be modified depending on the type of modem used.

**Syntax:**            **set init**

**Example:**

```
RMC> set init
Init String: at&f0e0v0x0s0=2
RMC>
```

Because the modem commands do not allow mixed cases, the RMC converts all alphabetic characters entered in the init string to uppercase.

The RMC configures the modem's flow control according to the setting of the SRM **com1\_flow** environment variable. The RMC also enables the modem carrier detect feature to monitor the modem connectivity.

### 3.14.20 set logout

---

**The set logout command sets the amount of time before the RMC terminates an inactive modem connection. The default is 20 minutes.**

---

The settings are in tens of minutes, 0–9. The zero (0) setting disables logout. With logout disabled, the RMC never disconnects the idle modem session.

The following example sets the logout timer to 50 minutes.

**Syntax:**        **set logout**

**Example:**

```
RMC> set logout
Logout Time (0-9 tens of minutes): 5
```

### 3.14.21 set password

---

**The set password command allows you to set or change the password that is prompted for at the beginning of a modem session.**

---

A password must be set to enable access through a modem. The string cannot exceed 14 characters. For security, the password is not echoed on the screen. When prompted for verification, type the password again. If you mistype, reenter the **set password** command.

**Syntax:**        **set password**

**Example:**

```
RMC> set pass
RMC Password: ****
Verification: ****
***ERROR - Verification failed, password
is not set***
RMC> set pass
RMC Password: ****
Verification: ****
```

### 3.14.22 set user

---

**The set user command allows you to set a user string to be displayed in the status command.**

---

You may want to make notes regarding the system. The string is limited to 63 characters and is displayed in the User String field when you enter the **status** command. In this example, the operator leaves a reminder that the power supply needs to be replaced.

**Syntax:**        **set user**

**Example:**

```
RMC> set user
User String: need to replace P/S
```

### 3.14.23 set wdt

---

**The watchdog timer is a value up to 60 seconds, in increments of 10, set by the user, that can be used by software. This feature is not currently used in any applications or operating systems.**

---

**Syntax:**        **set wdt**

**Example:**

```
RMC> set wdt
```

### 3.14.24 status

---

**The status command displays the system status and the current RMC settings.**

---

Table 3–2 describes each field of the **status** command output.

**Syntax:**        **status**

**Example:**        See Section 3.6 for an example of the status command output.



# Appendix A

## Setting Jumpers

This appendix gives information on the correct settings of the jumpers on the DS10/DS10L motherboard.

Sections include:

- Warnings and Cautions
- Remove Power from the System
- Open the System
- Remove the Floppy Disk Enclosure (DS10 only)
- Set Jumpers
- Restore Power

---

**NOTE:** *In many ways the DS10 and DS10L systems are identical. This manual uses DS10 systems for most illustrations and examples. Where significant differences exist, an illustration or example of a DS10L is presented separately.*

---

## A.1 Warnings and Cautions

---

**Read the following Warning and Cautions before working on DS10/DS10L systems.**

---



**WARNING:** *To prevent injury, access is limited to persons who have appropriate technical training and experience. Such persons are expected to understand the hazards of working within this equipment and take measures to minimize danger to themselves or others.*



**CAUTION:** *To reduce the risk of electrical shock or damage to the equipment, do not disable the power cord grounding plug. The grounding plug is an important safety feature. Plug the power cord into a grounded (earthed) electrical outlet that is easily accessible at all times. Disconnect power by unplugging the power cord from the electrical outlet or the system*

*The CPU module, RMC PIC processor, and memory modules have parts that operate at high temperatures. Wait 2 minutes after power is removed before touching any module.*

*Always wear a grounded wrist strap when servicing internal components of the system*


**ACHTUNG:** *Um Verletzungen zu vermeiden, ist der Zugriff nur Personen gestattet, die eine entsprechende technische Schulung vorweisen können und über die notwendige Erfahrung verfügen. Des weiteren sollten die Gefahren, denen diese Personen bei der Arbeit mit dem Gerät ausgesetzt sein könnten, bekannt sein, und die folgenden notwendigen Schritte eingeleitet werden, um das Gefahrenrisiko für sowohl diese als auch andere Personen zu minimieren:*

- 1. Entfernen Sie leitfähigen Schmuck.*
  - 2. Schalten Sie das System vor dem Zugriff auf den Systemkartenbehälter aus. Warten Sie zwei Minuten, bis sich die Komponenten abgekühlt haben.*
  - 3. Tragen Sie bei der Berührung von internen Komponenten ein Antistatikarmband.*
-


## A.2 Remove Power from the System

Be sure to remove the AC power cord from either the wall outlet or the system cabinet. Power remains active in the RMC PIC processor when the system is powered off using only the control panel power switch. Also the CPU and memory modules have parts that operate at high temperatures. Wait 2 minutes after power is removed before touching any module.

Figure A-1 Removing Power - DS10 System

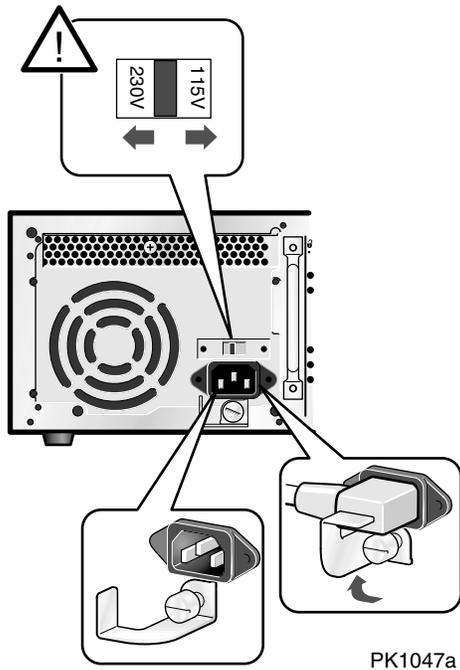

**Figure A-2 Removing Power - DS10L System**

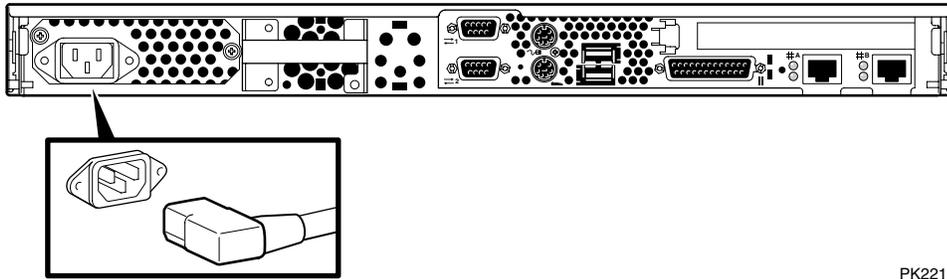


PK2218

1. Turn off the system and all external peripheral devices.
2. Unplug the system from the wall outlet.
3. Wait at least 15 seconds, to allow time for the power supply capacitors to fully discharge.
4. Wait 2 minutes after power is removed before touching any module.

## A.3 Open the System

Remove the cover to gain access to the system.

Figure A-3 Opening the DS10 System Cabinet

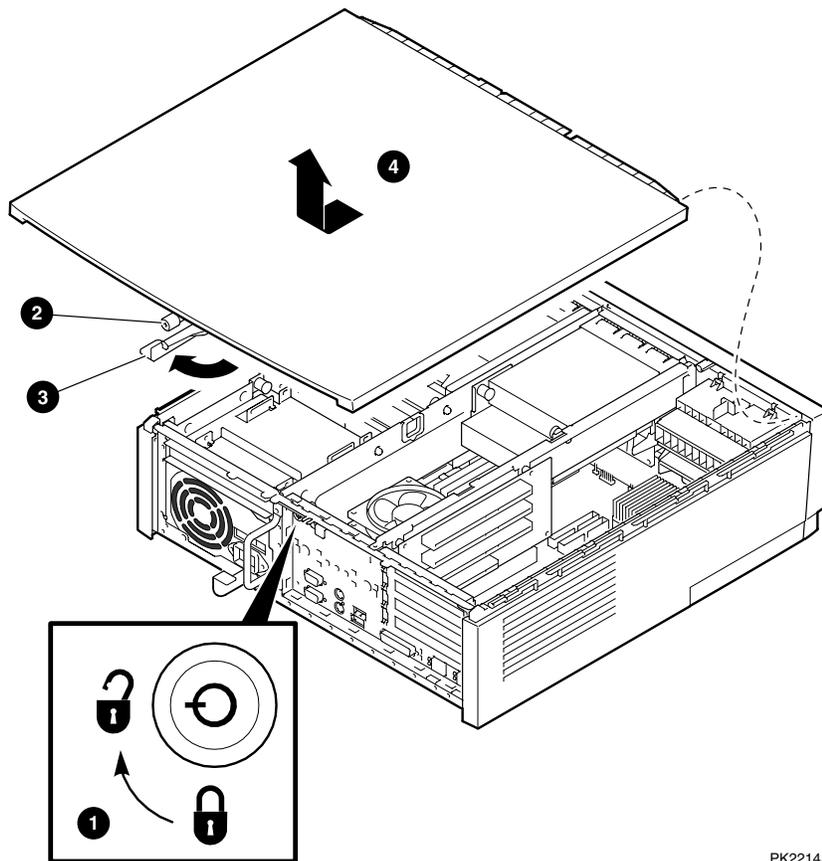

PK2214A

1. Unlock the top cover ❶.
2. Loosen the captive screw at the top of the bulkhead ❷.


3. Push down on the lever to the right of the screw ❸ and pull it out, perpendicular to the system.
4. Slide the cover toward the back of the system ❹. Lift it off.

---

**NOTE:** *If your DS10 or DS10L system is rack mounted, refer to the appropriate rack mounting documentation (EK-DS10S-RM for the DS10 or EK-DS10L-RM for the DS10L), and reverse the rack mounting procedures to gain access to the system cabinet.*

---

Figure A-4 Opening the DS10L System Cabinet

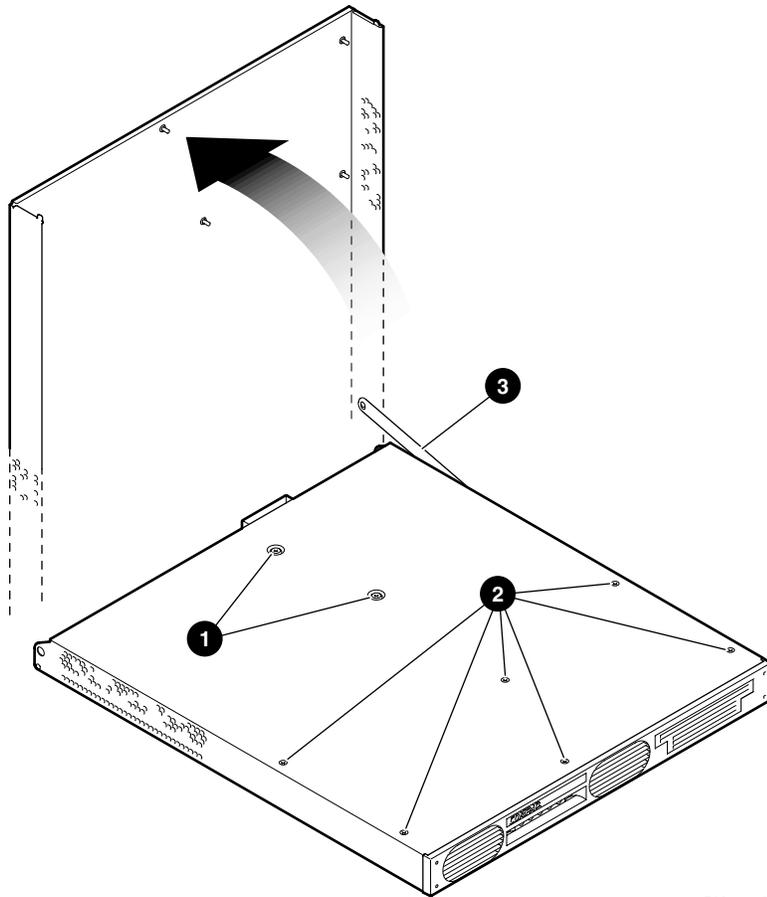

PK2207A

1. Remove power from the system.
2. Unscrew the two captive screws ❶ on the top of the cover.
3. Unscrew the six quarter-turn screws ❷ on the top of the cover.
4. Raise the cover up and secure it in the 60° or 90° position using a notch on the cover hold-open bracket ❸ located on the right hand side.

---

**NOTE:** *The 60° position on the DS10L cover hold-open bracket allows access to the cabinet interior with the rear cables attached. The 90° position requires removal of all cables attached to the rear of the system.*

---


## A.4 Remove the Floppy Disk Enclosure (DS10 Only)

---

To access the jumpers, remove the floppy disk drive enclosure for DS10 systems, and the hard disk(s) and/or floppy/CD-ROM drive for DS10L systems.

---

Figure A-5 Removing the DS10 Floppy Disk

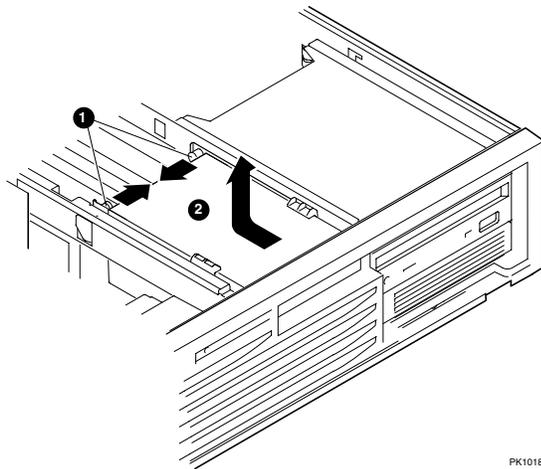

PK1018-89

1. Hold on to the cylinder pins, which secure the floppy disk enclosure. Pull the pins toward the center **1**.
2. Pull the floppy drive unit back and up **2**.
3. Place the unit on top of the CD-ROM drive. You do not need to remove the cables. Cable lengths have been designed to move the unit out of the way without disconnecting.

## A.5 Set Jumpers


---

There are three jumpers on the motherboard, which you can access. The switches are set according to the CPU in your system. Do not change the Timer Disable jumper or any of the switches.

---

Figure A-6 Setting Jumpers on the Motherboard

(DS10 shown; DS10L switches are in the same location.)

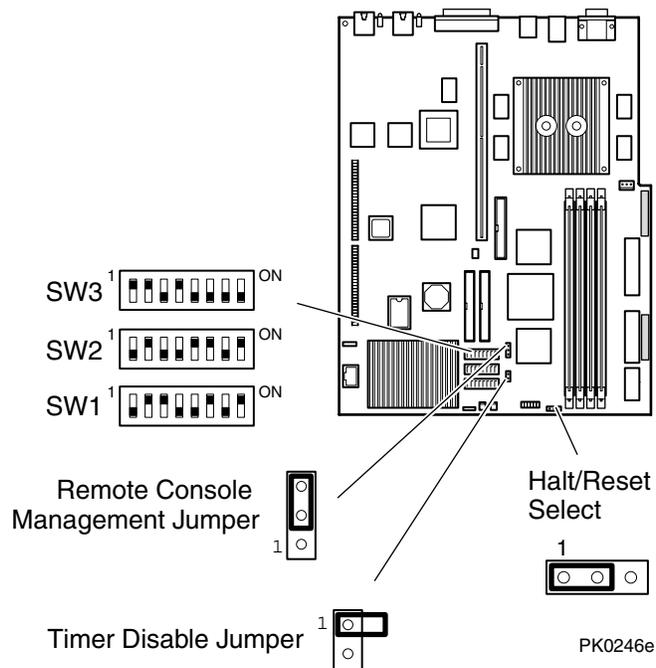

---

**NOTE:** This figure shows the switches set properly for an EV6 CPU running at 466 MHz as an example. Factory default switch settings for available CPUs are shown in Table A-1.

---

---

**CAUTION:** *Altering these switches from the specified settings may cause damage to your system and void your warranty.*

---

**Table A-1 Factory Default Switch Settings**

CPU/ MHz		1	2	3	4	5	6	7	8
EV6 466	SW1	Off	On	On	Off	Off	On	Off	On
	SW2	Off	On	Off	Off	On	On	Off	On
	SW3	On	On	Off	On	Off	Off	Off	Off
EV67 600	SW1	Off	On	On	Off	Off	Off	On	Off
	SW2	Off	On	Off	On	Off	Off	Off	On
	SW3	On	On	Off	On	Off	Off	Off	Off

- Do not change the setting of the Timer jumper or any of the switches unless they do not correspond to the settings shown in Figure A-6, or Table A-2.
- The Halt/Reset Select jumper affects the operation of the control panel Halt button. This jumper should be set to Halt for all operating systems available on the DS10 and DS10L systems.
- The RMC jumper enables or disables the remote management console.

**Table A-2 Jumpers and Factory Default Positions**

	Default position	Jumper
<b>Halt/Reset Select</b>	Set for Halt	Pins 1-2
<b>RMC</b>	To Enable RMC	Pins 2-3
	To Disable RMC	Pins 1-2
<b>Timer</b>	Set for Enable Timer	Hang jumper loose from pin 1; do not jumper to pin 2.

To change the jumper on the RMC jumper, wearing an anti-static strap, move the pin to the position described in Table A-2.

## A.6 Restore Power

---

**Close up the system and restore power.**

---

1. Replace the drive(s) you removed to access the motherboard. Check that the cables are clear and not pinched.
2. Replace the system cover and secure it.
3. Plug the AC power cord back into the system or outlet, whichever you disconnected.
4. Push the On button on the control panel and power up.

# Appendix B

## Regulatory Compliance Notices

This appendix contains regulatory compliance notices for this computer system.

### **B.1 Class A and Class B Ratings**

Part 15 of the Federal Communications Commission (FCC) Rules and Regulations has established Radio Frequency (RF) emission limits to provide an interference-free radio frequency spectrum. Many electronic devices, including computers, generate RF energy incidental to their intended function and are, therefore, covered by these rules. These rules place computers and related peripheral devices into two classes, A and B, depending upon their intended installation. Class A devices are those that may reasonably be expected to be installed in a business or commercial environment. Class B devices are those that may reasonably be expected to be installed in a residential environment. The FCC requires devices in both classes to bear a label indicating the interference potential of the device as well as additional operating instructions for the user.

The rating label on the device shows which class (A or B) the equipment falls into. Class B devices have a FCC logo or FCC ID on the label. Class A devices do not have a FCC logo or ID on the label. Once the class of the device is determined, refer to the corresponding statements in the sections that follow.

## **B.1.1 Class A Device Notices**

### **FCC Notice**

This equipment generates, uses, and may emit radio frequency energy. The equipment has been type tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of FCC rules, which are designed to provide reasonable protection against such radio frequency interference.

Operation of this equipment in a residential area may cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

Any modifications to this device unless expressly approved by the manufacturer can void the user's authority to operate this equipment under part 15 of the FCC rules.

### **Modifications**

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Compaq Computer Corporation may void the user's authority to operate the equipment.

### **Cables**

Connections to this device must be made with shielded cables with metallic RFI/EMI connector hoods in order to maintain compliance with FCC Rules and Regulations.

**Taiwan Notice**

警告使用者:

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

**Japanese Notice**

に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

### **Canadian Notice**

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

### **Avis Canadien**

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

### **European Union Notice**

Products with the CE Marking comply with both the EMC Directive (89/336/EEC) and the Low Voltage Directive (73/23/EEC) issued by the Commission of the European Community.

Compliance with these directives implies conformity to the following European Norms (in brackets are the equivalent international standards):

EN55022 (CISPR 22) - Electromagnetic Interference

EN50082-1 (IEC801-2, IEC801-3, IEC801-4) - Electromagnetic Immunity

EN60950 (IEC950) - Product Safety

### **Warning!**

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

### **Achtung!**

Dieses ist ein Gerät der Funkstörgrenzwertklasse A. In Wohnbereichen können bei Betrieb dieses Gerätes Rundfunkstörungen auftreten, in welchen Fällen der Benutzer für entsprechende Gegenmaßnahmen verantwortlich ist.

### **Attention!**

Ceci est un produit de Classe A. Dans un environnement domestique, ce produit risque de créer des interférences radioélectriques, il appartiendra alors à l'utilisateur de prendre les mesures spécifiques appropriées.

## **B.1.2 Class B Device Notices**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. Any modifications to this device - unless expressly approved by the manufacturer - can void the user's authority to operate this equipment under part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) This device must accept any interference that may cause undesirable operation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **Modifications**

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Compaq Computer Corporation may void the user's authority to operate the device.

### **Cables**

Connections to this device must be made with shielded cables with metallic EMI/RFI connector hoods to maintain compliance with FCC rules and regulations.

### **Declaration of Conformity for Products Marked with the FCC Logo (United States only)**

The device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- The device may not cause harmful interference, and
- The device must accept any interference received, including interference that may cause undesired operation.

For questions regarding this FCC declaration contact:

Compaq Computer Corporation  
PO Box 661  
Marlboro, Massachusetts 01752

To identify the device, refer to the part, series or model number found on the product.

### **Japanese Notice**

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。

**Canadian Notice**

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

**Avis Canadien**

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

**European Union Notice**

Products with the CE Marking comply with the EMC Directive (89/336/EEC) and the Low Voltage Directive (73/23/EEC) issued by the Commission of European Community.



# Index

## A

AlphaBIOS  
boot screen, 2-54  
configuration, 2-57  
run maintenance program, 2-58  
setup screen, 2-56  
utilities, 2-57  
alphabios command, SRM, 2-3  
AlphaBIOS console, 1-6, 2-54  
switching from SRM, 2-53  
auto\_action environment variable,  
SRM, 1-6, 1-7, 2-40, 2-42  
Auxiliary power supply, RMC, 3-1

## B

Baud rate, setting for COM\* ports, 2-45  
boot command, SRM, 1-9, 1-10, 1-12, 1-14, 1-15, 1-16, 1-20, 1-22, 2-3, 2-19  
passing information to command, 2-43  
using in secure mode, 2-26  
boot\_file environment variable, SRM, 1-10, 1-12, 1-16, 1-18, 1-20, 2-26  
boot\_flags environment variable, SRM, 2-26  
boot\_osflags environment variable,  
SRM, 1-10, 1-12, 1-16, 1-18, 1-20, 2-40, 2-43  
OpenVMS, 2-43, 2-44  
Tru64 UNIX, 2-43  
boot\_reset environment variable, SRM, 1-16  
bootdef\_dev environment variable,  
SRM, 1-10, 1-12, 1-16, 1-18, 1-20, 2-26, 2-40  
Booting  
OpenVMS, 1-15

from cluster disk, 1-17  
from local disk, 1-15  
from remote disk, 1-19  
passing information to command, 2-43  
Tru64 UNIX, 1-9  
from local disk, 1-9  
from remote disk, 1-11

## C

Cautions, A-2  
Class A Device Notice, B-2  
Class B Device Notice, B-5  
Class Ratings  
FCC, B-1  
clear alert command (RMC), 3-28  
clear envar command, SRM, 2-3  
clear *password* command, SRM, 2-3, 2-27  
clear port command (RMC), 3-28  
COM\* ports, setting baud rate, 2-45  
com\*\_baud environment variable, SRM, 2-40, 2-45  
COM1 environment variables, 3-9  
Command conventions, RMC, 3-27  
Command syntax, SRM console, 2-5  
Configuration  
AlphaBIOS utilities, 2-57  
Configuration utility  
running, 2-57  
Console  
AlphaBIOS, 1-6  
SRM, 1-6, 1-7  
switching from SRM to AlphaBIOS, 2-53  
Console commands, SRM, 2-3  
Console environment variable, SRM, 2-32, 2-33, 2-40, 2-46

- Console terminal
  - specifying type, 2-46
- continue command, SRM, 2-3
  - using in secure mode, 2-26
- cpu\_enabled environment variable, SRM, 2-40
- crash command, SRM, 2-3, 2-31
- Crash dump, 2-31

## D

- Default Settings
  - jumpers, A-11
  - switches, A-11
- deposit command, SRM, 2-3, 2-35
- Depositing data, 2-35
- Device naming conventions, SRM, 2-11
- Dial-in configuration, 3-16
- Dialing in, 3-21
- Dial-out alerts, 3-18
- disable alert command (RMC), 3-29
- disable remote command (RMC), 3-29
- display command, LFU, 1-33
- Displaying system configuration, 2-8
- Displaying the value or setting of an environment variable, 2-33
- DS10
  - opening cabinet, A-5
  - power, removing, A-3
  - removing floppy disk, A-9
  - restoring power, A-12
- DS10L
  - opening cabinet, A-7
  - power, removing, A-4
  - restoring power, A-12

## E

- edit command, SRM, 2-3, 2-34
- enable alert command (RMC), 3-30
- enable remote command (RMC), 3-31
- Environment variables, SRM, 2-32
  - auto\_action, 1-6, 1-7
  - boot\_file, 1-10, 1-12, 1-16, 1-18, 1-20, 2-26
  - boot\_flags, 2-26

- boot\_osflags, 1-10, 1-12, 1-16, 1-18, 1-20
- boot\_reset, 1-16
- bootdef\_dev, 1-10, 1-12, 1-16, 1-18, 1-20, 2-26
- displaying the value or setting, 2-33
  - modifying, 2-32
- os\_type, 1-6, 1-7
- password, 2-27
- setting, 2-32
- summary, 2-40
- Escape sequence (RMC), 3-8
- Ethernet, specifying controller type, 2-47
- ew\*0\_mode environment variable, SRM, 2-40, 2-47
- ew\*0\_protocols environment variable, SRM, 2-40, 2-47
- examine command, SRM, 2-3, 2-36
- Examining data, 2-36
- exit command, LFU, 1-26, 1-32, 1-33

## F

- Factory Default Settings
  - jumpers, A-11
  - switches, A-11
- FCC
  - class ratings, B-1
- FCC Class A Device Notice, B-2
- FCC Class B Device Notice, B-5
- Finding help
  - SRM console, 2-39
- Firmware
  - updating, 1-25
    - updating from floppy disk, 1-27, 1-28
    - updating from network device, 1-30
    - updating from SRM, 2-29
    - updating, SRM command, 1-24

## G

- Graphics monitor, specifying as console terminal, SRM, 2-46

## H

- halt command, SRM, 2-3, 2-29

- halt in command (RMC), 3-32
- Halt, remote, 3-15
- hangup command (RMC), 3-17, 3-21, 3-33
- help command, LFU, 1-33, 1-34
- help command, SRM, 2-3, 2-39
- help or ? commands (RMC), 3-33

## I

- initialize command, SRM, 2-3, 2-17, 2-38
- Initializing the system, 2-38
- Installing
  - OpenVMS, 1-21
  - Tru64 UNIX, 1-13
- IOD, 1-6, 1-7

## J

- Jumpers
  - default settings, A-11
  - setting, A-10

## K

- kbd\_hardware\_type environment variable, SRM, 2-32, 2-33, 2-40, 2-48
- Keyboard
  - specifying hardware type, SRM, 2-48
  - specifying layout, SRM, 2-48

## L

- language environment variable, SRM, 2-32, 2-33, 2-40, 2-48
- LFU
  - starting, 1-24, 1-25
  - typical update procedure, 1-25
  - updating firmware from floppy disk, 1-27, 1-28
  - updating firmware from network device, 1-30
- lfu command, LFU, 1-33, 1-34
- lfu command, SRM, 1-25, 2-3, 2-29
- LFU commands
  - display, 1-33
  - exit, 1-26, 1-32, 1-33

- help, 1-33, 1-34
- lfu, 1-33, 1-34
- list, 1-25, 1-31, 1-32, 1-33, 1-34
- readme, 1-33, 1-34
- summary, 1-33
- update, 1-25, 1-33, 1-35
- verify, 1-33, 1-35
- list command, LFU, 1-25, 1-31, 1-33, 1-34
- Loadable Firmware Update utility. *See* LFU
- login command, SRM, 2-3, 2-27
  - using in secure mode, 2-26

## M

- Modifying an environment variable, SRM, 2-32
- more command, SRM, 2-4, 2-37
- Motherboard
  - setting jumpers, A-10

## N

- Naming conventions, SRM, 2-11
- Network protocols, enabling for booting and other functions, SRM, 2-47

## O

- ocp\_text environment variable, SRM, 2-32, 2-33, 2-41
- Opening Cabinet
  - DS10, A-5
  - DS10L, A-7
- OpenVMS
  - booting, 1-15
    - from cluster disk, 1-17
    - from local disk, 1-15
    - from remote disk, 1-19
  - console for, 2-1
  - installing, 1-21
  - specifying as default operating system, 2-49
- Operating system
  - booting OpenVMS, 1-15
    - from cluster disk, 1-17
    - from local disk, 1-15

- from remote disk, 1-19
- booting Tru64 UNIX, 1-9
  - from local disk, 1-9
  - from remote disk, 1-11
- installing OpenVMS, 1-21
- installing Tru64 UNIX, 1-13
- specifying default, 2-49
- os\_type environment variable, SRM, 1-6, 1-7, 2-33, 2-49

## P

- Pagers, 3-19
- password environment variable, SRM, 2-27
- PCI
  - enabling and disabling parity
    - checking on bus, SRM, 2-49, 2-50
- PCI card cage
  - slot numbers, 2-12
- PCI options
  - slot numbers, 2-12
- pci\_parity environment variable, SRM, 2-41, 2-49, 2-50
- pk\*\_0\_fast environment variable, SRM, 2-41, 2-50
- pk\*\_0\_host\_id environment variable, SRM, 2-41, 2-51
- pk\*\_0\_soft\_term environment variable, SRM, 2-41, 2-51
- Power
  - DS10, A-3
  - DS10L, A-4
  - restoring, A-12
- power off command (RMC), 3-34
- power on command (RMC), 3-34
- Power-on/off, from RMC, 3-12
- Power-up, specifying console action, SRM, 2-42
- prcache command, SRM, 2-4, 2-20

## Q

- quit command (RMC), 3-8, 3-35

## R

- Reading a file, 2-37

- readme command, LFU, 1-33, 1-34
- Regulatory Compliance Notices, B-1
- Remote console monitor. *See* RMC
- Remote dial-in, 3-21
- Remote power-on/off, 3-12
- Removing Floppy Disk
  - DS10, A-9
- Removing Power
  - DS10, A-3
  - DS10L, A-4
- reset command (RMC), 3-20, 3-36
- Reset, from RMC, 3-15
- Reset, specifying console action, SRM, 2-42
- Restoring Power
  - DS10 and DS10L, A-12
- RMC
  - accessing, 3-7
  - auxiliary power supply, 3-1
  - clear alert command, 3-28
  - clear port command, 3-28
  - command conventions, 3-27
  - commands, 3-26
  - configuring call-out, 3-16
  - dial-out alerts, 3-18
  - disable alert command, 3-29
  - disable remote command, 3-29
  - enable alert command, 3-30
  - enable remote command, 3-31
  - entering, 3-8
  - escape sequence, 3-8
  - exiting, 3-8
  - halt in command, 3-32
  - hangup command, 3-17, 3-21, 3-33
  - help or ? commands, 3-33
  - power off command, 3-34
  - power on command, 3-34
  - quit command, 3-8, 3-35
  - remote halt, 3-15
  - remote power-on/off, 3-15
  - remote reset, 3-15
  - reset command, 3-36
  - resetting to factory defaults, 3-22
  - send alert command, 3-36
  - set alert command, 3-37
  - set dial command, 3-39

- set escape command, 3-40
- set init command, 3-41
- set logout command, 3-42
- set password command, 3-42
- set user command, 3-42
- status command, 3-10, 3-43
- terminal setup, 3-4
- troubleshooting, 3-24
- RMC mode, 3-6
- Run maintenance program
  - AlphaBIOS, 2-58

## S

### SCSI

- enabling and disabling terminators, SRM, 2-51
- enabling Fast SCSI, SRM, 2-50
- setting controller host bus node ID, SRM, 2-51
- send alert command (RMC), 3-36
- Serial terminal, specifying as console terminal, SRM, 2-46
- set alert command (RMC), 3-37
- set dial command (RMC), 3-39
- set *envar* command, SRM, 2-4, 2-32, 2-33
- set escape command (RMC), 3-40
- set host command, SRM, 2-4
- set init command (RMC), 3-41
- set logout command (RMC), 3-42
- set password command (RMC), 3-42
- set password command, SRM, 2-4, 2-24
- set secure command, SRM, 2-4, 2-25
- set user command (RMC), 3-42
- Setting an environment variable, 2-32
- Setting Jumpers
  - default settings, A-11
- Setting Motherboard Jumpers, A-10
- Setting Switches, A-11
- show config command, SRM, 2-4, 2-8
- show device command, SRM, 1-9, 1-10, 1-12, 1-15, 1-16, 1-18, 1-20, 2-4, 2-10
- show *envar* command, SRM, 1-15, 2-4, 2-33
- show memory command, SRM, 2-4, 2-13
- show pal command, SRM, 2-4, 2-13

- show power command, SRM, 2-4, 2-14
- show version command, SRM, 2-4, 2-15
- Special characters, SRM console, 2-6
- SRM console, 1-6, 1-7, 2-1–2-52
  - command syntax, 2-5
  - device naming conventions, 2-11
  - invoking, 2-2
  - special characters, 2-6
  - summary of commands, 2-3
  - summary of environment variables, 2-40
  - switching to AlphaBIOS, 2-53
- SRM console commands
  - alphabios, 2-3
  - boot, 1-10, 1-12, 1-14, 1-16, 1-20, 1-22, 2-3, 2-19
    - using in secure mode, 2-26
  - clear *envar*, 2-3
  - clear *password*, 2-3, 2-27
  - continue, 2-3
    - using in secure mode, 2-26
  - crash, 2-3, 2-31
  - deposit, 2-3, 2-35
  - edit, 2-3, 2-34
  - examine, 2-3, 2-36
  - halt, 2-3, 2-29
  - help, 2-3, 2-39
  - initialize, 2-3, 2-17, 2-38
  - lfu, 1-25, 2-3, 2-29
  - login, 2-3, 2-27
    - using in secure mode, 2-26
  - more, 2-4, 2-37
  - prcache, 2-4, 2-20
  - set *envar*, 2-4, 2-32, 2-33
  - set host, 2-4
  - set password, 2-4, 2-24
  - set secure, 2-4, 2-25
  - show config, 2-4, 2-8
  - show device, 1-10, 1-12, 1-16, 1-18, 1-20, 2-4, 2-10
  - show *envar*, 2-4, 2-33
  - show memory, 2-4, 2-13
  - show pal, 2-4, 2-13
  - show power, 2-4, 2-14
  - show version, 2-4, 2-15
  - start

- using in secure mode, 2-26
- stop, 2-4, 2-29
- summary of commands, 2-3
- test, 2-4, 2-21

SRM console environment variables

- auto\_action, 2-40, 2-42
- boot\_osflags, 2-40, 2-43, 2-44
- boot\_osflags, OpenVMS, 2-43
- boot\_osflags, Tru64 UNIX, 2-43
- bootdef\_dev, 2-40
- com\*\_baud, 2-40, 2-45
- commands for displaying the value or setting, 2-33
- commands for modifying, 2-32
- commands for setting, 2-32
- commands for using, 2-32
- console, 2-40, 2-46
- cpu\_enabled, 2-40
- ew\*0\_mode, 2-40, 2-47
- ew\*0\_protocols, 2-40, 2-47
- kbd\_hardware\_type, 2-40, 2-48
- language, 2-40, 2-48
- ocp\_text, 2-41
- os\_type, 2-49
- pci\_parity, 2-41, 2-49, 2-50
- pk\*0\_fast, 2-41, 2-50
- pk\*0\_host\_id, 2-41, 2-51
- pk\*0\_soft\_term, 2-41, 2-51
- tt\_allow\_login, 2-41, 2-52

SRM firmware

- enabling and disabling login to, 2-52

start command, SRM

- using in secure mode, 2-26

status command (RMC), 3-10, 3-43

stop command, SRM, 2-4, 2-29

Switches

- default settings, A-11

Syntax

- SRM console commands, 2-5

System configuration

- displaying in SRM console, 2-8

- System crash dump, 2-31
- System failure, specifying console action, SRM, 2-42

## T

- Terminal setup (RMC), 3-4
- test command, SRM, 2-4, 2-21
- Testing the system (all operating systems), 2-21
- Troubleshooting
  - RMC, 3-24
- Tru64 UNIX
  - booting, 1-9
    - from local disk, 1-9
    - from remote disk, 1-11
  - console for, 2-1
  - installing, 1-13
  - specifying as default operating system, 2-49
- tt\_allow\_login environment variable, SRM, 2-41, 2-52

## U

- update command, LFU, 1-25, 1-32, 1-33, 1-35
- Updating firmware
  - from SRM console, 1-24
  - SRM console, 2-29
- Utilities
  - Running AlphaBIOS, 2-57

## V

- verify command, LFU, 1-33, 1-35

## W

- Warnings, A-2