

## Installing an HSG80 or HSZ80 Cache Module


This document contains instructions to replace a cache module in either an HSG80 ACS Version 8.x Array Controller or an HSZ80 ACS Version 8.x Array Controller. See the appropriate *HSG80 Array Controller ACS Version 8.x User's Guide*, *HSZ80 Array Controller ACS Version 8.x User's Guide*, *HSG80 Array Controller Version 8.x Maintenance and Service Guide*, or *HSZ80 Array Controller ACS Version 8.x Maintenance and Service Guide* for instructions on upgrading a single-controller configuration to a dual-redundant controller configuration.

### Replacing a Cache Module

Use this procedure for the following configurations:


**HSG80 ACS Version 8.x Single Controller**  
**HSG80 ACS Version 8.0 Dual-Redundant Controller**  
**HSZ80 ACS Version 8.x Single Controller**

Use the following steps in “Removing a Cache Module” and “Installing a Cache Module” to replace a cache module (see Figure 1 and Figure 2).

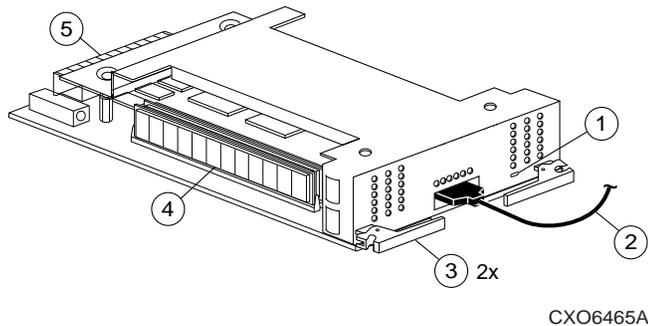

- ① Cache-memory power LED
- ② External cache battery (ECB) cable
- ③ Retaining lever
- ④ Dual Inline Memory Module (DIMM)
- ⑤ Backplane connector

**Figure 1. HSG80 or HSZ80 Cache Module**

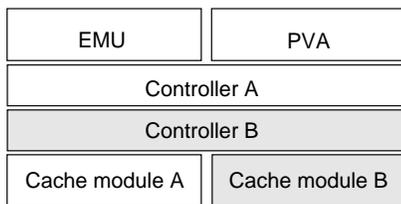

CXO6283A

**Figure 2. Location of Cache Module**

**NOTE:** The new cache module must contain the same memory configuration as the existing cache module.

### Removing a Cache Module

Use the following steps to remove a cache module:

1. From the host console, dismount the logical units in the subsystem. If you are using a Windows NT<sup>®</sup> platform, shut down the server.
2. If the controller is operating, connect a PC or terminal to the controller's maintenance port.

If the controller is not operating, go to step 5.

3. Run FMU to obtain the last failure codes, if desired.
4. Shut down the controllers. In single controller configurations, shut down “this controller.” In dual-redundant controller configurations, shut down the “other controller” first, then shut down “this controller” with the following commands:

**SHUTDOWN OTHER\_CONTROLLER**

**SHUTDOWN THIS\_CONTROLLER**

When the controllers shut down, their reset button and the first three LEDs are lit continuously. This may take several minutes, depending on the amount of data that needs to be flushed from the cache modules.

**CAUTION:** Electrostatic discharge (ESD) can easily damage a cache module. Wear a snug-fitting, grounded ESD wrist strap.

5. Disable the ECB by pressing the battery disable switch until the status light stops blinking—about five seconds.

**CAUTION:** The ECB must be disabled—the status light is not lit and is not blinking—before disconnecting the ECB cable from the cache module. Failure to disable the ECB could damage the cache module.

6. Disconnect the ECB cable from the cache module.

- 
7. Disengage both retaining levers and remove the cache module. Place the cache module into an antistatic bag or onto a grounded antistatic mat.  
**NOTE:** Remove the DIMMs from the cache module. They will be installed in the replacement cache module.
  8. Press down on the DIMM retaining levers at either end of the DIMM you want to remove.
  9. Grasp the DIMM and gently remove it from the DIMM slot. Repeat for all DIMMs.

### Installing a Cache Module

Use the following steps to install a cache module:

---

**CAUTION:** ESD can easily damage a cache module. Wear an snug-fitting, grounded ESD wrist strap.

Make sure you align the cache module in the appropriate guide rails. If you do not align the cache module correctly, damage to the backplane can occur.

---

1. Insert the DIMM straight into the socket of the cache module and ensure that the notches in the DIMM align with the tabs in the socket.
2. Press the DIMM gently until it's seated in the socket.
3. Double-check to ensure both ends of the DIMM are firmly seated in the slot and both retaining clips engage the DIMM.
4. Insert the new cache module into its slot and engage its retaining levers.

---

**CAUTION:** The ECB must be disabled—the status light is not lit and is not blinking—before connecting the ECB cable to the cache module. Failure to disable the ECB could result in ECB damage.

---

5. Connect the ECB cable to the new cache module.
6. If not already connected, connect a PC or terminal to the controller's maintenance port.
7. Restart the controller by pressing its reset button.
8. When the CLI prompt reappears, display details about the controller you configured. Use the following command:  
**SHOW THIS\_CONTROLLER FULL**
9. Mount the logical units on the host. If you are using a Windows NT platform, restart the server.

10. Set the subsystem date and time. In single controller configurations, set "this controller." In dual-redundant controller configurations, set "this controller" and the "other controller" with the following commands:  
**SET THIS\_CONTROLLER TIME=dd-mmm-yyyy:hh:mm:ss**  
**SET OTHER\_CONTROLLER TIME=dd-mmm-yyyy:hh:mm:ss**
11. Disconnect the PC or terminal from the controller's maintenance port.

---

## Replacing a Cache Module

Use this procedure for the following configuration:

### HSZ80 ACS Version 8.1 Dual-Redundant Controller

Use the following steps in “Removing a Cache Module” and “Installing a Cache Module” to replace a cache module.

**NOTE:** The new cache module must contain the same amount of memory as the module it’s replacing.

#### Removing a Cache Module

Use the following steps to remove a cache module:

1. Connect a PC or terminal to the operational controller’s maintenance port. The controller to which you’re connected is “this controller”; the controller whose cache module you’re replacing is the “other controller.”

2. Disable failover and take the controllers out of their dual-redundant configuration with the following command:

```
SET NOFAILOVER
```

3. Start FRUTIL with the following command:

```
RUN FRUTIL
```

4. Enter option 1, *Replace or remove a controller or cache module*, from the FRUTIL Main menu:

```
FRUTIL Main Menu:
```

1. Replace or remove a controller or cache module
2. Install a controller or cache module
3. Replace other cache module battery
4. Replace a PVA module
5. Replace an I/O module
6. Set battery life to new
7. Exit

```
Enter choice: 1, 2, 3, 4, 5, 6, or 7 -> 1
```

5. Enter option 3, *Other cache module*, from the Replace or Remove Options menu:

```
Replace or remove Options:
```

1. Other controller and cache module
2. Other controller module
3. Other cache module
4. Exit

```
Enter choice: 1, 2, 3, or 4 -> 3
```

6. Confirm that you want to remove the other cache module. FRUTIL displays the following:

```
Remove the slot A [or B] cache module? Y/N
```

7. Enter Y(es) and press return.

8. Wait for FRUTIL to quiesce the device ports. After the ports have been quiesced (this may take several minutes), FRUTIL displays the following:

```
All device ports quiesced.
```

```
Remove the slot A [or B] cache module within x minutes, xx seconds. Then disconnect the external battery, if in use, from the cache module.
```

---

**NOTE:** A countdown timer allows a total of two minutes to remove the cache module. If you exceed two minutes, “this controller” will exit FRUTIL and resume operations.

---

**CAUTION:** ESD can easily damage a cache module. Wear a snug-fitting, grounded ESD wrist strap.

---

9. Disengage both retaining levers and partially remove the other cache module—about half way.
10. Disable the ECB by pressing the battery disable switch until the status light stops blinking—about five seconds.

---

**CAUTION:** The ECB must be disabled—the status light is not lit and is not blinking—before disconnecting the ECB cable from the cache module. Failure to disable the ECB could result in cache module damage.

---

11. Disconnect the ECB cable from the other cache module, remove the cache module, and place it onto a grounded mat or into an approved antistatic bag.

12. Once the cache module is removed, FRUTIL displays the following:

```
Restarting all device ports. Please wait...
```

```
.
```

```
.
```

```
.
```

```
Do you have a replacement cache module? Y/N
```

**NOTE:** Remove the DIMMs from the cache module. They will be installed in the replacement cache module.

13. Press down on the DIMM retaining levers at either end of the DIMM you want to remove.
14. Grasp the DIMM and gently remove it from the DIMM slot. Repeat for all DIMMs.

#### Installing a Cache Module

Use the following steps to install a cache module:

**NOTE:** If you selected Y(es) in step 12 of “Removing a Cache Module,” go to step 5.

1. Connect a PC or terminal to the operational controller. The controller to which you’re connected is “this controller;” the controller whose cache module you’re installing is the “other controller.”

2. Start FRUTIL with the following command:

```
RUN FRUTIL
```

3. Enter option 2, *Install a controller or cache module*, from the FRUTIL Main menu:

```
FRUTIL Main Menu:
```

1. Replace or remove a controller or cache module
2. Install a controller or cache module
3. Replace other cache module battery

- 
4. Replace a PVA module
  5. Replace an I/O module
  6. Set battery life to new
  7. Exit
- Enter choice: 1, 2, 3, 4, 5, 6, or 7 -> 2

4. Enter option 3, *Other cache module*, from the Install Options menu:

Install Options:

1. Other controller and cache module
2. Other controller module
3. Other cache module
4. Exit

Enter choice: 1, 2, 3, or 4 -> 3

**NOTE:** Use the DIMMs that were removed from the old cache module for the replacement cache module.

---

**CAUTION:** ESD can easily damage a cache module or a DIMM. Wear an snug-fitting, grounded ESD wrist strap.

---

5. Insert the DIMM straight into the socket in the replacement cache module and ensure that the notches in the DIMM align with the tabs in the socket.
6. Press the DIMM gently until it's seated in the socket.
7. Double-check to ensure both ends of the DIMM are firmly seated in the slot and both retaining clips engage the DIMM. Repeat for all DIMMs.
8. Confirm that you want to install the other cache module. FRUTIL displays the following:  
Insert the slot A [or B] cache module? Y/N
9. Enter Y(es) and press return.
10. Wait for FRUTIL to quiesce the ports. After the ports have been quiesced (this may take several minutes), FRUTIL displays the following:  
All device ports quiesced.

**NOTE:** A countdown timer allows a total of two minutes to install the cache module. If you exceed two minutes, "this controller" will exit FRUTIL and resume operations.

---

**CAUTION:** Make sure you align the cache module in the appropriate guide rails. If you do not align the cache module correctly, damage to the backplane can occur.

---

11. If not already done, disable the ECB to which you're connecting the new cache module by pressing the battery disable switch until the status light stops blinking—about five seconds.

---

**CAUTION:** The ECB must be disabled—the status light is not lit and is not blinking—before connecting the ECB cable to the cache module. Failure to disable the ECB could result in ECB damage.

---

12. Connect the ECB cable to the new cache module.
13. Insert the new cache module into its slot and engage its retaining levers.
14. Enable failover, and reestablish the dual-redundant controller configuration with the following command:  
**SET FAILOVER COPY=THIS\_CONTROLLER**  
This command copies the subsystem's configuration from "this controller" to the "other controller."
15. Disconnect the PC or terminal from the controller's maintenance port.

---

## Replacing a Cache Module

Use this procedure for the following configurations:

### HSG80 ACS Version 8.2 Dual-Redundant Controller HSZ80 ACS Version 8.2 Dual-Redundant Controller

Use the following steps in “Removing a Cache Module” and “Installing a Cache Module” to replace a cache module.

#### Removing a Cache Module

Use the following steps to remove a cache module:

1. Connect a PC or terminal to the operational controller’s maintenance port. The controller to which you’re connected is “this controller”; the controller whose cache module you’re replacing is the “other controller.”

2. Disable failover with the following command:

```
SET NOFAILOVER
```

3. Remove the program card’s ESD cover and program card from the “other controller.” Save them for reinstallation later.

4. Start FRUTIL with the following command:

```
RUN FRUTIL
```

FRUTIL displays the following:

```
Do you intend to replace this controller’s cache battery? Y/N
```

5. Enter N(o). FRUTIL displays the FRUTIL Main menu:

```
FRUTIL Main Menu:
```

1. Replace or remove a controller or cache module
2. Install a controller or cache module
3. Replace a PVA module
4. Replace an I/O module
5. Exit

```
Enter choice: 1, 2, 3, 4, or 5 ->
```

6. Enter option 1, *Replace or remove a controller or cache module*, from the FRUTIL Main menu. FRUTIL displays the Replace or Remove Options menu:

```
Replace or remove Options:
```

1. Other controller and cache module
2. Other controller module
3. Other cache module
4. Exit

```
Enter choice: 1, 2, 3, or 4 ->
```

7. Enter option 3, *Other cache module*, from the Replace or Remove Options menu. FRUTIL displays the following:

```
Slot Designations  
(front view)
```

```
[ --- EMU --- ][ --- PVA --- ]  
[ ----- Controller A ----- ]  
[ ----- Controller B ----- ]  
[ Cache Module A ][ Cache Module B ]
```

```
Remove the slot A [or B] cache module? Y/N
```

8. Enter Y(es) and press return. FRUTIL displays the following:

```
Quiescing all device ports. Please wait...
```

```
Device Port 1 quiesced.
```

```
Device Port 2 quiesced.
```

```
Device Port 3 quiesced.
```

```
Device Port 4 quiesced.
```

```
Device Port 5 quiesced.
```

```
Device Port 6 quiesced.
```

```
All device ports quiesced.
```

```
Remove the slot A [or B] cache module within 2 minutes. Then disconnect the external battery from the cache module.
```

---

**CAUTION:** The device ports must quiesce before removing the cache module. Failure to allow the ports to quiesce may result in data loss. Quiescing may take several minutes.

ESD can easily damage a cache module or a DIMM. Wear a snug-fitting, grounded ESD wrist strap.

---

**NOTE:** A countdown timer allows a total of two minutes to remove the cache module. If you exceed two minutes, “this controller” will exit FRUTIL and resume operations.

9. Disengage both retaining levers and partially remove the other cache module—about half way.
10. Disable the ECB by pressing the battery disable switch until the status light stops blinking—about five seconds.

---

**CAUTION:** The ECB must be disabled—the status light is not lit and is not blinking—before disconnecting the ECB cable from the cache module. Failure to disable the ECB could result in cache module damage.

---

11. Disconnect the ECB cable from the cache module, remove the cache module, and place it onto a grounded antistatic mat or into an antistatic bag.

Once the cache module is removed, FRUTIL displays the following:

```
Restarting all device ports. Please wait...
```

```
Device Port 1 restarted.
```

```
Device Port 2 restarted.
```

```
Device Port 3 restarted.
```

```
Device Port 4 restarted.
```

```
Device Port 5 restarted.
```

```
Device Port 6 restarted.
```

```
Do you have a replacement cache module? Y/N
```

12. Enter N(o) if you don’t have a replacement cache module, and disconnect the PC or terminal from the controller’s maintenance port.

Enter Y(es) if you have a replacement cache module and want to install it now. FRUTIL displays the following:

```
Insert the slot A [or B] cache module? Y/N
```

---

**NOTE:** Remove the DIMMs from the cache module. They will be installed in the replacement cache module.

13. Press down on the DIMM retaining levers at either end of the DIMM you want to remove.
14. Grasp the DIMM and gently remove it from the DIMM slot. Repeat for all DIMMs.

**NOTE:** If you entered Y(es) go to step 6 of "Installing a Cache Module."

### Installing a Cache Module

Use the following steps to install a cache module:

---

**CAUTION:** ESD can easily damage a cache module or a DIMM. Wear an snug-fitting, grounded ESD wrist strap.

---

1. Connect a PC or terminal to the operational controller. The controller to which you're connected is "this controller"; the controller whose cache module you're installing is the "other controller."

2. Start FRUTIL with the following command:

#### RUN FRUTIL

FRUTIL displays the following:

```
Do you intend to replace this controller's cache
battery? Y/N
```

3. Enter N(o). FRUTIL displays the FRUTIL Main menu:  
FRUTIL Main Menu:
  1. Replace or remove a controller or cache module
  2. Install a controller or cache module
  3. Replace a PVA module
  4. Replace an I/O module
  5. Exit

```
Enter choice: 1, 2, 3, 4, or 5 ->
```

4. Enter option 2, *Install a controller or cache module*, from the FRUTIL Main menu. FRUTIL displays the Install Options menu:

```
Install Options:
```

1. Other controller and cache module
2. Other controller module
3. Other cache module
4. Exit

```
Enter choice: 1, 2, 3, or 4 ->
```

5. Enter option 3, *Other cache module*, from the Install Options menu. FRUTIL displays the following:

```
Insert the slot A [or B] cache module? Y/N
```

**NOTE:** Use the DIMMs that were removed from the old cache module for the replacement cache module.

6. Insert the DIMM straight into the socket in the replacement cache module and ensure that the notches in the DIMM align with the tabs in the socket.
7. Press the DIMM gently until it's seated in the socket.

8. Double-check to ensure both ends of the DIMM are firmly seated in the slot and both retaining clips engage the DIMM. Repeat for all DIMMs.

9. Enter Y(es) and press return. FRUTIL displays the following:

```
Quiescing all device ports. Please wait...
```

```
Device Port 1 quiesced.
Device Port 2 quiesced.
Device Port 3 quiesced.
Device Port 4 quiesced.
Device Port 5 quiesced.
Device Port 6 quiesced.
```

```
All device ports quiesced.
```

```
.
```

```
.
```

```
.
```

Perform the following steps:

1. Turn off the battery for the new cache module by pressing the battery's shut off button for five seconds
2. Connect the battery to the new cache module.
3. Insert the new cache module in slot A [or B] within 2 minutes.

**NOTE:** A countdown timer allows a total of two minutes to install the cache module. If you exceed two minutes, "this controller" will exit FRUTIL and resume operations.

---

**CAUTION:** Make sure you align the cache module in the appropriate guide rails. If you do not align the cache module correctly, damage to the backplane can occur.

---

10. Disable the ECB to which you're connecting the new cache module by pressing the battery disable switch until the status light stops blinking—about five seconds.

---

**CAUTION:** The ECB must be disabled—the status light is not lit and is not blinking—before connecting the ECB cable to the cache module. Failure to disable the ECB could result in ECB damage.

---

11. Connect the ECB cable to the new cache module.
12. Insert the new cache module into its slot and engage its retaining levers.

**NOTE:** In mirrored mode, FRUTIL will initialize the mirrored portion of the new cache module, check for old data on the cache module, and then restart all device ports. After the device ports have been restarted, FRUTIL will test the cache module and the ECB. After the test completes, the device ports will quiesce and a mirror copy of the cache module data will be created on the newly installed cache module.

---

FRUTIL displays the following:

The configuration has two controllers.

To restart the other controller:

1. Type 'restart other\_controller'.
2. Press and hold the reset button while inserting the program card on the slot A [or B] controller, then release the reset button.  
The controller will restart.

Field Replacement Utility terminated.

13. To allow the "other controller" to restart, enter the following command:

**RESTART OTHER\_CONTROLLER**

14. Hold the reset button while inserting the program card into the controller. Release the reset button and replace the ESD cover. The controller will restart.
15. Enable failover, and re-establish the dual-redundant controller configuration with the following command:  
**SET FAILOVER COPY=THIS\_CONTROLLER**  
This command copies the subsystem's configuration from "this controller" to the "other controller."
16. Disconnect the PC or terminal from the controller's maintenance port.

---

## Replacing a Cache Module

Use this procedure for the following configurations:

### HSG80 ACS Version 8.3 Dual-Redundant Controller HSZ80 ACS Version 8.3 Dual-Redundant Controller

Use the following steps in “Removing a Cache Module” and “Installing a Cache Module” to replace a cache module.

#### Removing a Cache Module

Use the following steps to remove a cache module:

1. Connect a PC or terminal to the operational controller’s maintenance port. The controller to which you’re connected is “this controller”; the controller whose cache module you’re replacing is the “other controller.”

2. Disable failover and take the controllers out of their dual-redundant configuration with the following command:

```
SET NOFAILOVER
```

3. Start FRUTIL with the following command:

```
RUN FRUTIL
```

FRUTIL displays the following:

```
Do you intend to replace this controller’s cache battery? Y/N
```

4. Enter N(o). FRUTIL displays the FRUTIL Main menu:

```
FRUTIL Main Menu:
```

1. Replace or remove a controller or cache module
2. Install a controller or cache module
3. Replace a PVA module
4. Replace an I/O module
5. Exit

```
Enter choice: 1, 2, 3, 4, or 5 ->
```

5. Enter option 1, *Replace or remove a controller or cache module*, from the FRUTIL Main menu. FRUTIL displays the Replace or Remove Options menu:

```
Replace or remove Options:
```

1. Other controller and cache module
2. Other controller module
3. Other cache module
4. Exit

```
Enter choice: 1, 2, 3, or 4 ->
```

6. Enter option 3, *Other cache module*, from the Replace or Remove Options menu. FRUTIL displays the following:

```
Slot Designations
(front view)
[ --- EMU --- ][ --- PVA --- ]
[ ----- Controller A ----- ]
[ ----- Controller B ----- ]
[ Cache Module A ][ Cache Module B ]
```

```
Remove the slot A [or B] cache module? Y/N
```

7. Enter Y(es) and press return. FRUTIL displays the following:

```
Quiescing all device ports. Please wait...
```

```
Device Port 1 quiesced.
```

```
Device Port 2 quiesced.
```

```
Device Port 3 quiesced.
```

```
Device Port 4 quiesced.
```

```
Device Port 5 quiesced.
```

```
Device Port 6 quiesced.
```

```
All device ports quiesced.
```

```
Remove the slot A [or B] cache module within 2 minutes. Then disconnect the external battery from the cache module.
```

---

**CAUTION:** The device ports must quiesce before removing the cache module. Failure to allow the ports to quiesce may result in data loss. Quiescing may take several minutes.

ESD can easily damage a cache module or a DIMM. Wear a snug-fitting, grounded ESD wrist strap.

---

**NOTE:** A countdown timer allows a total of two minutes to remove the cache module. If you exceed two minutes, “this controller” will exit FRUTIL and resume operations.

8. Disengage both retaining levers and partially remove the other cache module—about half way.
9. Disable the ECB by pressing the battery disable switch until the status light stops blinking—about five seconds.

---

**CAUTION:** The ECB must be disabled—the status light is not lit and is not blinking—before disconnecting the ECB cable from the cache module. Failure to disable the ECB could result in cache module damage.

---

10. Disconnect the ECB cable from the cache module, remove the cache module, and place it onto a grounded antistatic mat or into an antistatic bag.

Once the cache module is removed, FRUTIL displays the following:

```
Restarting all device ports. Please wait...
```

```
Device Port 1 restarted.
```

```
Device Port 2 restarted.
```

```
Device Port 3 restarted.
```

```
Device Port 4 restarted.
```

```
Device Port 5 restarted.
```

```
Device Port 6 restarted.
```

```
Do you have a replacement cache module? Y/N
```

11. Enter N(o) if you don’t have a replacement cache module, and disconnect the PC or terminal from the controller’s maintenance port. FRUTIL will exit.

Enter Y(es) if you have a replacement cache module and want to install it now. FRUTIL displays the following:

```
Insert the slot A [or B] cache module? Y/N
```

**NOTE:** Remove the DIMMs from the cache module. They will be installed in the replacement cache module.

---

12. Press down on the DIMM retaining levers at either end of the DIMM you want to remove.
13. Grasp the DIMM and gently remove it from the DIMM slot. Repeat for all DIMMs.

**NOTE:** If you entered Y(es) go to step 9 of "Installing a Cache Module."

### Installing a Cache Module

Use the following steps to install a cache module:

---

**CAUTION:** ESD can easily damage a cache module or a DIMM. Wear an snug-fitting, grounded ESD wrist strap.

---

1. Connect a PC or terminal to the operational controller. The controller to which you're connected is "this controller"; the controller whose cache module you're installing is the "other controller."

2. Start FRUTIL with the following command:

#### RUN FRUTIL

FRUTIL displays the following:

```
Do you intend to replace this controller's cache
battery? Y/N
```

3. Enter N(o). FRUTIL displays the FRUTIL Main menu:
 

```
FRUTIL Main Menu:
  1. Replace or remove a controller or cache module
  2. Install a controller or cache module
  3. Replace a PVA module
  4. Replace an I/O module
  5. Exit
Enter choice: 1, 2, 3, 4, or 5 ->
```

4. Enter option 2, *Install a controller or cache module*, from the FRUTIL Main menu. FRUTIL displays the Install Options menu:
 

```
Install Options:
  1. Other controller and cache module
  2. Other controller module
  3. Other cache module
  4. Exit
Enter choice: 1, 2, 3, or 4 ->
```

5. Enter option 3, *Other cache module*, from the Install Options menu. FRUTIL displays the following:
 

```
Insert the slot A [or B] cache module? Y/N
```

**NOTE:** Use the DIMMs that were removed from the old cache module for the replacement cache module.

6. Insert the DIMM straight into the socket in the replacement cache module and ensure that the notches in the DIMM align with the tabs in the socket.
7. Press the DIMM gently until it's seated in the socket.
8. Double-check to ensure both ends of the DIMM are firmly seated in the slot and both retaining clips engage the DIMM. Repeat for all DIMMs.

9. Enter Y(es) and press return. FRUTIL displays the following:

```
Quiescing all device ports. Please wait...
Device Port 1 quiesced.
Device Port 2 quiesced.
Device Port 3 quiesced.
Device Port 4 quiesced.
Device Port 5 quiesced.
Device Port 6 quiesced.
All device ports quiesced.
```

```
.
.
.
```

Perform the following steps:

1. Turn off the battery for the new cache module by pressing the battery's shut off button for five seconds
2. Connect the battery to the new cache module.
3. Insert the new cache module in slot A [or B] within 2 minutes.

**NOTE:** A countdown timer allows a total of two minutes to install the cache module. If you exceed two minutes, "this controller" will exit FRUTIL and resume operations.

---

**CAUTION:** Make sure you align the cache module in the appropriate guide rails. If you do not align the cache module correctly, damage to the backplane can occur.

---

10. Disable the ECB to which you're connecting the new cache module by pressing the battery disable switch until the status light stops blinking—about five seconds.

---

**CAUTION:** The ECB must be disabled—the status light is not lit and is not blinking—before connecting the ECB cable to the cache module. Failure to disable the ECB could result in ECB damage.

---

11. Connect the ECB cable to the new cache module.
12. Insert the new cache module into its slot and engage its retaining levers.

**NOTE:** In mirrored mode, FRUTIL will initialize the mirrored portion of the new cache module, check for old data on the cache module, and then restart all device ports. After the device ports have been restarted, FRUTIL will test the cache module and the ECB. After the test completes, the device ports will quiesce and a mirror copy of the cache module data will be created on the newly installed cache module.

13. FRUTIL will restart the other controller. FRUTIL displays the following:
 

```
Please wait . . .
If the other controller did not restart, press its
reset button.
```

Field Replacement Utility terminated.

- 
14. If the other controller did not restart, press its reset button.
  15. Enable failover, and re-establish the dual-redundant controller configuration with the following command:  
**SET FAILOVER COPY=THIS\_CONTROLLER**  
This command copies the subsystem's configuration from "this controller" to the "other controller."
  16. Disconnect the PC or terminal from the controller's maintenance port.